

SX1230-11SKA

User's Guide: Advanced Mode

Table of Contents

1	Introduction	4
2	Getting Started	5
2.1	Kit Contents.....	5
2.2	Installation	5
3	Hardware Description	6
3.1	SX1230SKA Overview	6
3.2	SX1211SKA Overview	7
4	Quick Start Guide: MCU Mode	8
4.1	SX1211SKA Quick Start	8
4.2	SX1230SKA Quick Start	10
4.3	Link Test.....	13
5	Quick Start Guide: Stand Alone Mode	14
5.1	SX1211SKA Configuration.....	14
5.2	SX1230SKA Configuration.....	14
5.3	Link Test.....	15
6	SX1230SKA Software Description.....	16
6.1	Overview	16
6.2	File Menu.....	16
6.3	Shortcut Buttons.....	17
6.4	General Configuration Tabs	18
6.4.1	General [1].....	18
6.4.2	General [2].....	21
6.5	Register Hexadecimal Display	21
6.6	Overview Panel	22
6.7	E ² PROM Mode Tab.....	22
6.8	MCU Mode Tab.....	25
6.9	The Mode Control Box	26
6.10	MCU / E ² PROM Mode Selection.....	26
7	SX1211SKA Software Description	27
7.1	Overview	27
7.2	File Menu.....	27
7.3	Shortcut Buttons.....	28
7.4	McParam Tab.....	29
7.5	Overview Panel	31
7.6	Register Hexadecimal Display	31
7.7	The Mode Control Box	32
7.8	The IrqParam Tab	32
7.9	The RxParam Tab	33
7.10	The TxParam Tab	34
7.11	The OscParam Tab	35
7.12	The Packet Test Tab.....	35
8	Schematics and 4-Layer PCB Layout: SX1230SKA.....	38
9	Schematics and 2-Layer PCB Layout: SX1211SKA.....	41
10	References	43

Table of Figures

Figure 1. SX1230 Stand Alone Operation with Companion E ² PROM	4
Figure 2. SX1230 Connections for Microcontroller Based Operation	4
Figure 3: SX1230-11SKA Contents (CR2032 Cell not Shown)	5
Figure 4: SX1230SKA, 868 and 915 MHz Band, Board Picture	6
Figure 5: SX1211SKA Board Picture	7
Figure 6. SX1211 User Interface, Default Settings	8
Figure 7. The New SX1211 Configuration: Ready to be Written	9
Figure 8. The SX1211SKA User Interface whilst in Packet Receiver Mode	10
Figure 9. SX1230 User Interface, Default Settings	11
Figure 10. The New SX1230 Configuration: Ready to be Written	12
Figure 11. SX1230 During MCU Mode Packet Transmission	13
Figure 12. Hardware for E ² PROM (Stand Alone) Operation	14
Figure 13: SX1230SKA GUI Overview and References to the User Guide Description of this Chapter	16
Figure 14. Example Text Editor Output of the SX1230 Configuration File	17
Figure 15. The General Configuration Tab Features the most Commonly Used Configuration Parameters	18
Figure 16. Second Page of the General Configuration Parameters	21
Figure 17. Register Hexadecimal Display	21
Figure 18. The Configuration Overview Display	22
Figure 19. E ² PROM Memory Mapping	22
Figure 20. The E ² PROM Mode Tab 'Normal View'	23
Figure 21. E ² PROM Raw View	24
Figure 22. E ² PROM Raw View Short-cut Buttons	24
Figure 23. MCU Mode Tab Display	25
Figure 24. The Control Box	26
Figure 25. SX1211SKA GUI Overview and References to the User Guide Description of this Chapter	27
Figure 26. Example Text Editor Output of the SX1211 Configuration File	28
Figure 27. SX1211 Local Oscillator Generation	30
Figure 28. The Overview Panel	31
Figure 29. The Hexadecimal Register Display Summary	31
Figure 30. The Mode Control Box also Incorporates RSSI	32
Figure 31. The Interrupt Mapping Display	32
Figure 32. SX1211 Receiver Block Diagram, the Colours Correspond to the Frequency of Operation.	33
Figure 33. Receiver Parameter Display	33
Figure 34. SX1211 Simplified Transmitter Block Schematic Diagram	34
Figure 35. The Transmitter Parameter Tab Display	34
Figure 36. The Oscillator Parameter Display	35
Figure 37. The Packet Receiver / Transmitter Test Display	36
Figure 38. Software Display: Successful Packet Mode Reception	37

1 Introduction

The SX1230 is a single chip transmitter IC designed for operation in the licence free ISM bands between 290 and 1020 MHz. The SX1230 is capable of operation either with or without an external companion microcontroller and features four internally de-bounced digital input pins to enable direct connection to switchgear for wireless remote control applications. Examples of both types of applications are shown below:

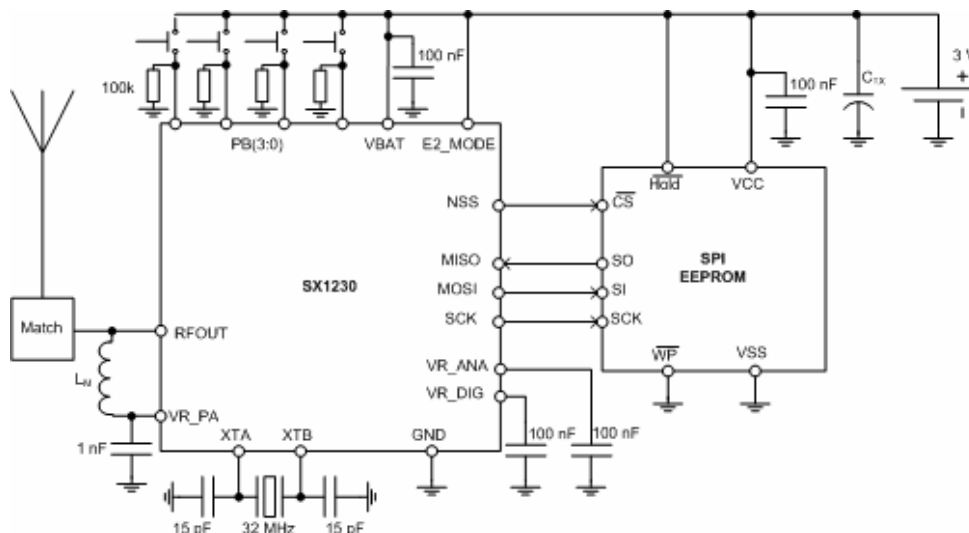


Figure 1. SX1230 Stand Alone Operation with Companion E²PROM

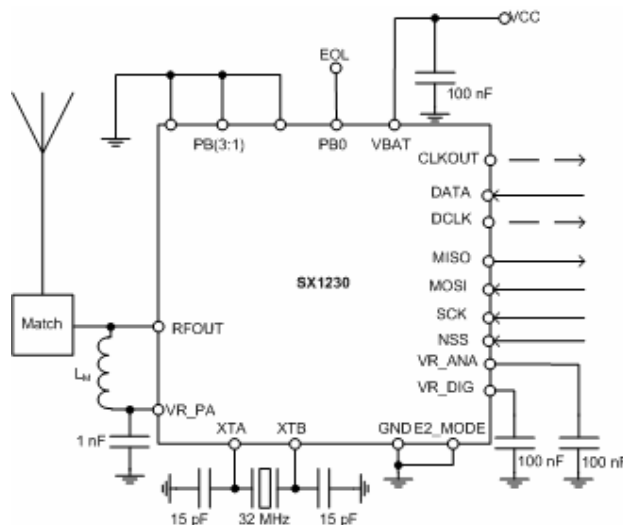


Figure 2. SX1230 Connections for Microcontroller Based Operation

The SX1230 main features include:

- +17 dBm to -18 dBm Programmable output power
- 1.8 to 3.7V Operating range with internal voltage regulation allowing constant RF performance
- Narrow and wide-band operation
- (G)FSK, (G)MSK and both filtered and unfiltered OOK operation.
- Support of bit rates from 1.2 to 600 kbps.
- Low battery detection
- Integrated RC timer for timer / wake-up applications
- Low phase noise -95 dBc/Hz at 50 kHz offset.
- -40°C to +85°C Temperature Range

2 Getting Started

2.1 Kit Contents

As illustrated in the figure below, the SX1230-11SKA Evaluation kit is composed of:

- SX1230SKA board
- SX1211SKA board
- SX1230-11SKA CDROM including all necessary PC software and documentation
- A CR2032 Cell for operation of the SX1230SKA in stand alone mode, in conjunction with the companion E²PROM.



Figure 3: SX1230-11SKA Contents (CR2032 Cell not Shown)

2.2 Installation

The software for the SX1211SKA and SX1230SKA must each be installed individually. The installation process for each is identical.

SX1211SKA Advanced Mode Software Installation

- 1- Put the CDROM in your computer and browse the contents of the CD.
- 2- Open the "sx1211starterkitsetupweb.exe" manually. It can be found in the \Installers sub directory of the CD-ROM.
- 3- Follow installation guidelines until the process is completed. Please note that .NET Framework 2.0 and the FTDI USB driver will be automatically installed if not detected on your computer.
- 4- Connect the SX1211SKA board to the PC via the USB interface.
- 5- Launch "SX1211SKA" from the Start menu.
- 6- Click on "Connect" button in toolbar or in File menu.
- 7- SX1211SKA is now installed and ready to be used.

SX1230SKA Advanced Mode Software Installation

- 8- Put the CDROM in your computer and browse the contents of the CD.
- 9- Open the "sx1230starterkitsetupweb.exe" manually. It can be found in the \Installers sub directory of the CD-ROM.
- 10- Follow installation guidelines until the process is completed. Please note that .NET Framework 2.0 and the FTDI USB driver will be automatically installed if not detected on your computer.
- 11- Connect the SX1230SKA board to the PC via the USB interface.
- 12- Launch "SX1230SKA" from the Start menu.
- 13- Click on "Connect" button in toolbar or in File menu.
- 14- SX1230SKA is now installed and ready to be used.

3 Hardware Description

SX1230SKA and SX1211SKA boards are summarised in this chapter. Please refer to the schematics and layout provided in the document for further information about each hardware implementation.

3.1 SX1230SKA Overview

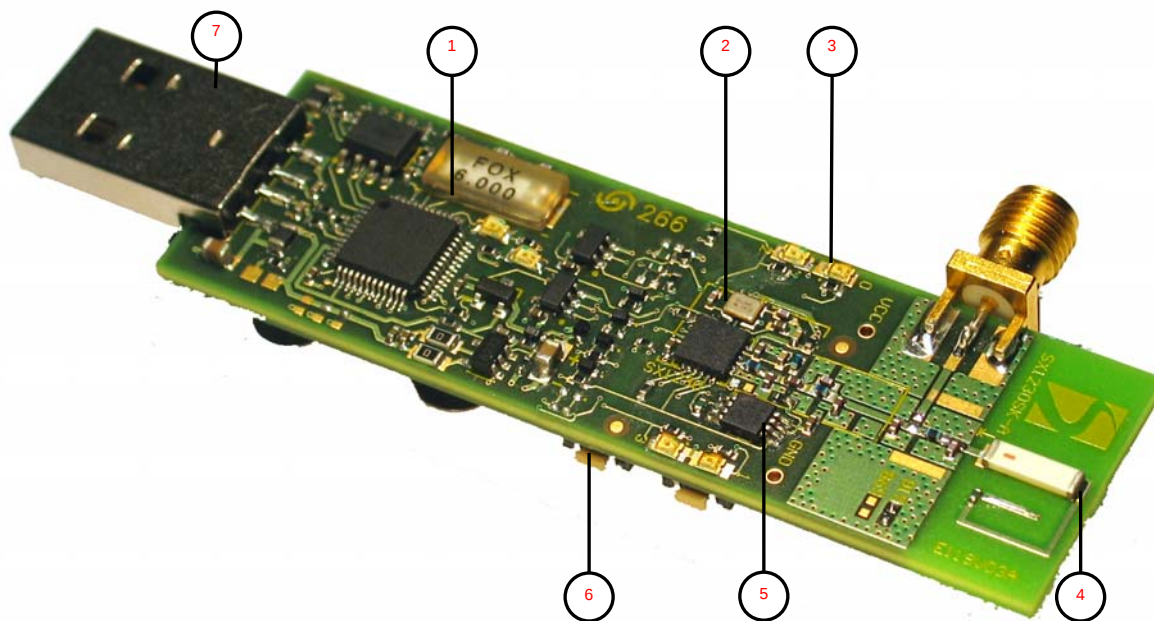


Figure 4: SX1230SKA, 868 and 915 MHz Band, Board Picture

The SX1230SKA is a USB based evaluation tool, which sees the SX1230 reference design (2) connected to a host PC via an FTDI USB to SPI bridge (1) and USB type 'A' connection (7). The SX1230SKA can also operate with in stand alone mode when battery powered. In this mode the initial configuration of the radio is downloaded from the first 77 bytes of the companion E²PROM (5). In response to a user push button input (6) a specific payload may be transmitted. The LED (3) corresponding to that button press illuminates to indicate transmission.

For operation in the 868 MHz and 915 MHz bands the RF link between SX1230SKA and SX1211SKA is established through a ceramic antenna to give a realistic impression of the range and other performances attainable in a miniaturised application.

3.2 SX1211SKA Overview

The SX1211SKA features the SX1211 reference design (1) and is also interfaced via an FTDI bridge (6) to the USB type 'A' interface (5) of a host PC. Unlike the SX1230SKA, it has no provision for operation disconnected from the USB port. Indication of transmission and reception is indicated on a pair of LEDs (4). The same type of ceramic antenna is employed (2) and optional provision for an SMA connector (not populated) is provided for laboratory testing.

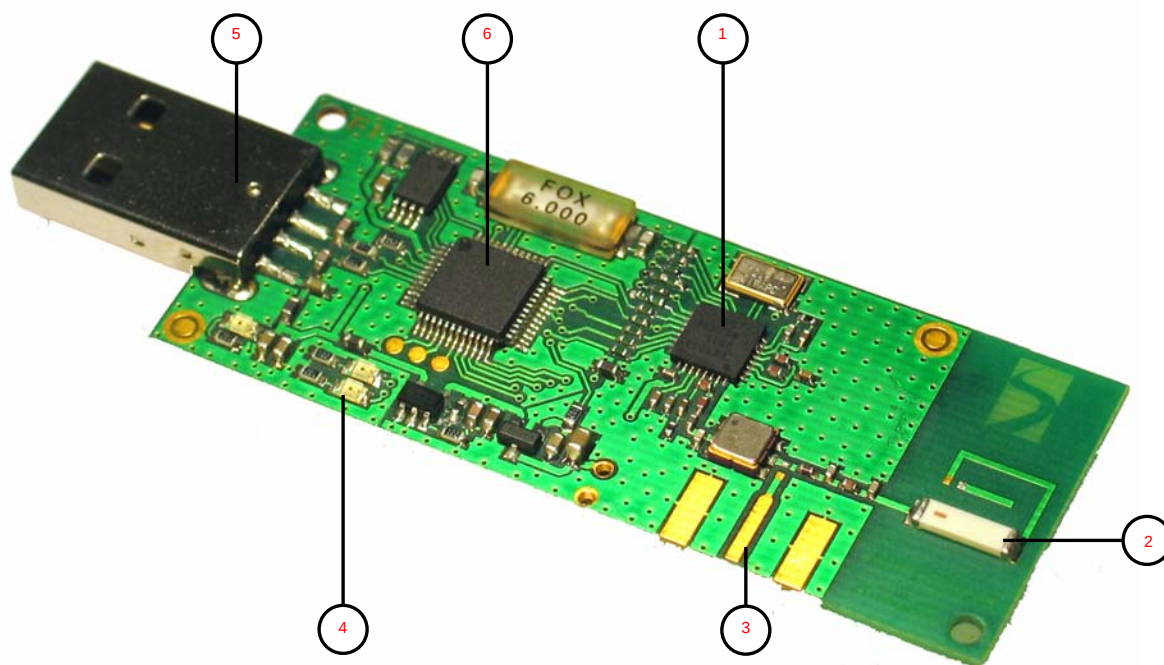


Figure 5: SX1211SKA Board Picture

4 Quick Start Guide: MCU Mode

With both SX1230SKA and SX1211SKA software installed, follow the sequence below to establish communication between the SX1230 as transmitter and the SX1211 as receiver.

4.1 SX1211SKA Quick Start

1. Plug the SX1211SKA into the USB port of the computer.
2. Run the SX1211 User Interface software Start > All Programs > SX1211SKA > SX1211SKA
3. The SX1211SKA should connect automatically to the User Interface Software. If not, then click on the USB connect short-cut button, located in the top left hand corner of the window.
4. Once connected the SX1211SKA shows the default configuration of the SX1211 register settings upon power-up.

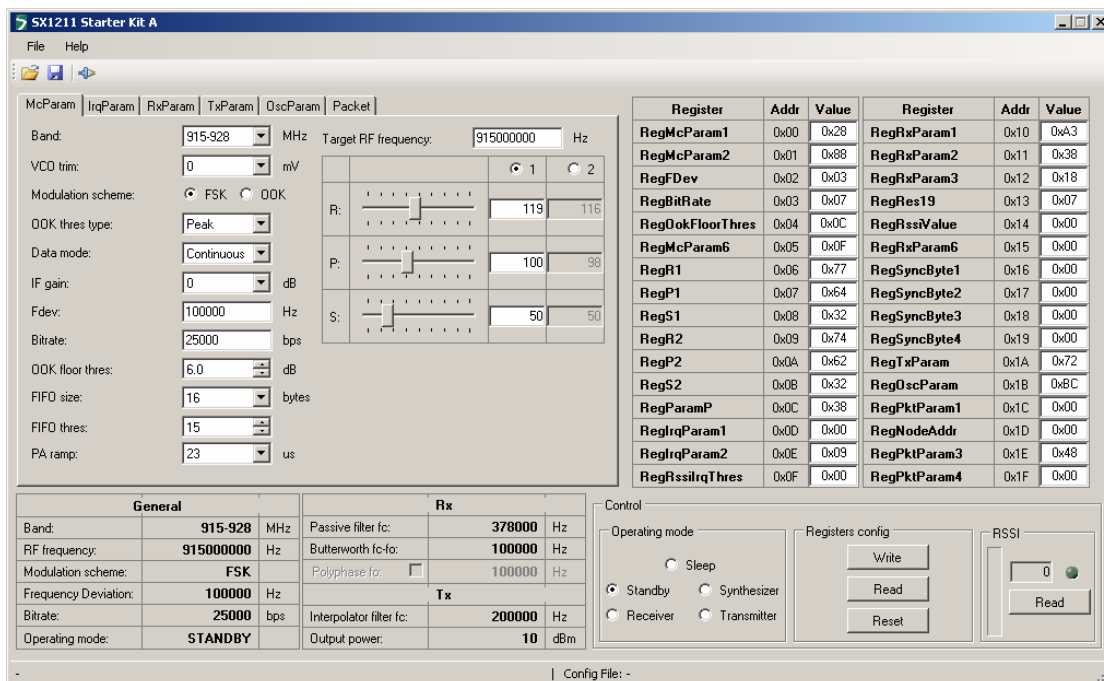


Figure 6. SX1211 User Interface, Default Settings

5. Once connected the SX1211SKA shows the default configuration of the SX1211 register settings upon power-up (as shown in Figure 6).

- The settings for communication between SX1211SKA and SX1230 SKA are located on the installation CD-ROM provided with the kit. Use the File > Open from the menu bar, or the open short-cut button to load a configuration file.



- Load the "XXX_SX1211_pingpong.cfg" file from the "SX1211 Demo Files" folder on the CD-ROM. Where XXX corresponds to the frequency band of the SX1211SKA (either 868 or 915 MHz).

- The display will then appear as shown in Figure 7. These are the link parameters which match those which will be programmed to the SX1230SKA.


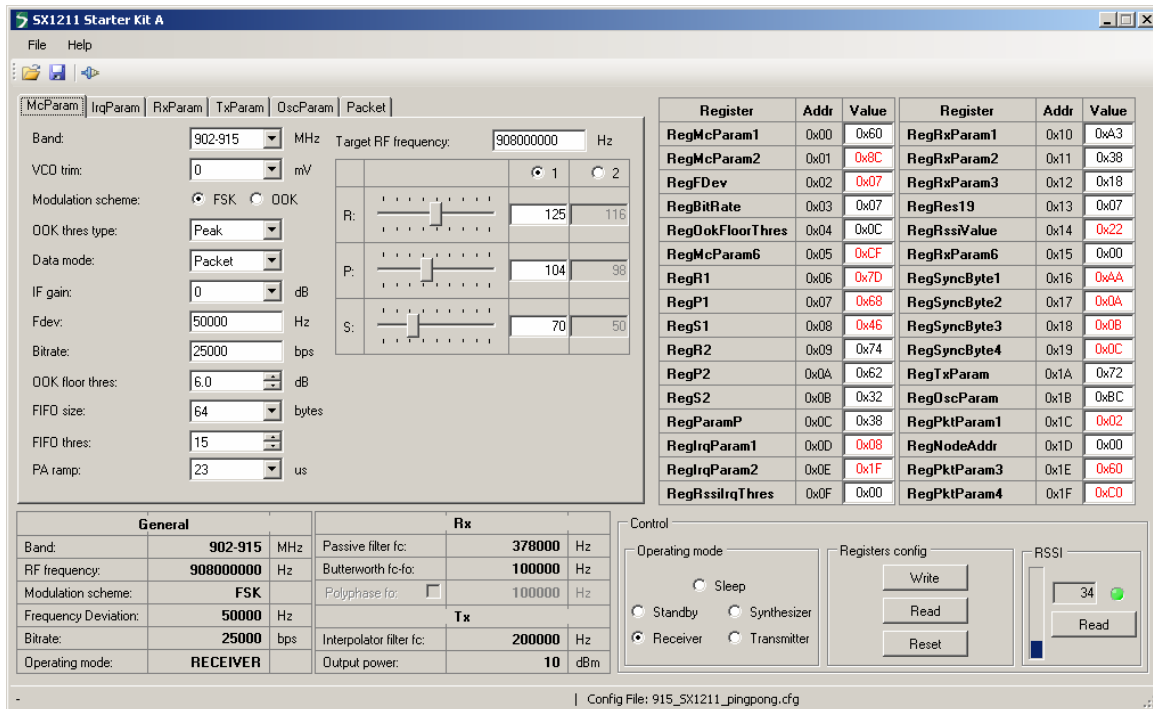


Figure 7. The New SX1211 Configuration: Ready to be Written

- By clicking on the write button in the 'Registers config' section, the new register values are written to the SX1211 registers. If successful, the red values in the hexadecimal register summary table will turn black. As a double check, the register read button may be pressed – the values presented on the user interface should remain unchanged.

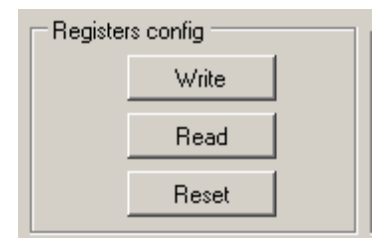

- Click on the 'Packet' tab to access the packet testing portion of the program. Within this window a pre-defined packet structure is already configured. It remains simply to click the 'Reception' radio button and press the Start button. At this point the SX1211SKA enters packet receive mode and is now listening for valid packets. At this juncture the SX1230SKA transmitter must be configured.

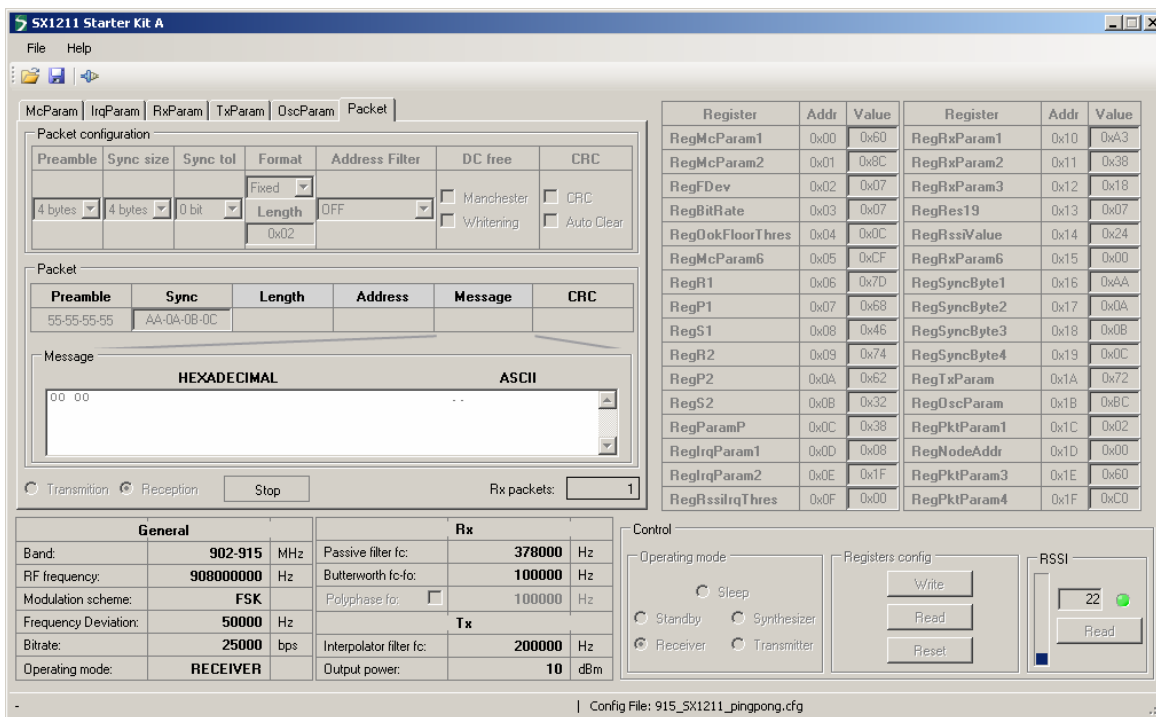


Figure 8. The SX1211SKA User Interface whilst in Packet Receiver Mode

4.2 SX1230SKA Quick Start

1. Plug the SX1230SKA into the USB port of the computer.
2. Run the SX1230 User Interface software Start > All Programs > SX1230SKA > SX1230SKA
3. The SX1230SKA should connect automatically to the User Interface Software. If not, then click on the USB connect short-cut button, located in the top left hand corner of the window.
 
4. Once connected the SX1230SKA shows the default configuration of the SX1230 register settings upon power-up (see Figure 9).

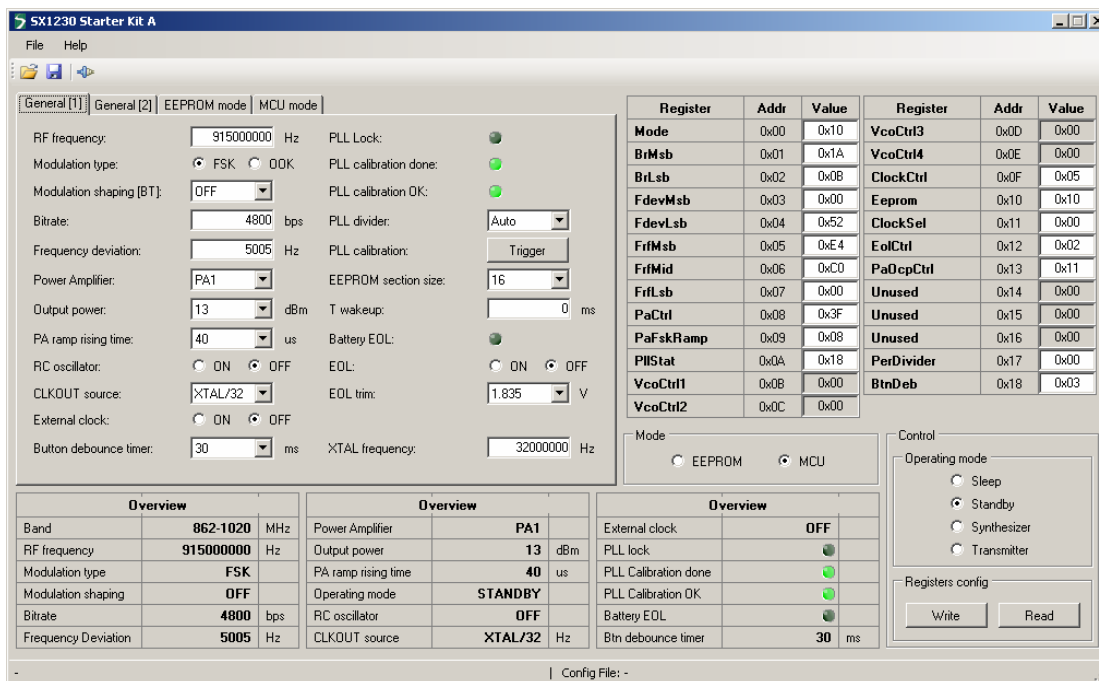


Figure 9. SX1230 User Interface, Default Settings

- The settings for communication between SX1211SKA and SX1230SKA are located on the installation CD-ROM provided with the kit. Use the File > Open from the menu bar, or the open short-cut button to load a configuration file.
- Load the "XXX_SX1230_pingpong.cfg" file from the "SX1230 Demo Files" folder on the CD-ROM. Where XXX corresponds to the frequency band of the SX1230SKA (either 868 or 915 MHz).
- The display will then appear as shown in Figure 10Figure 7. These are the link parameters which match those which will be programmed to the SX1211SKA.



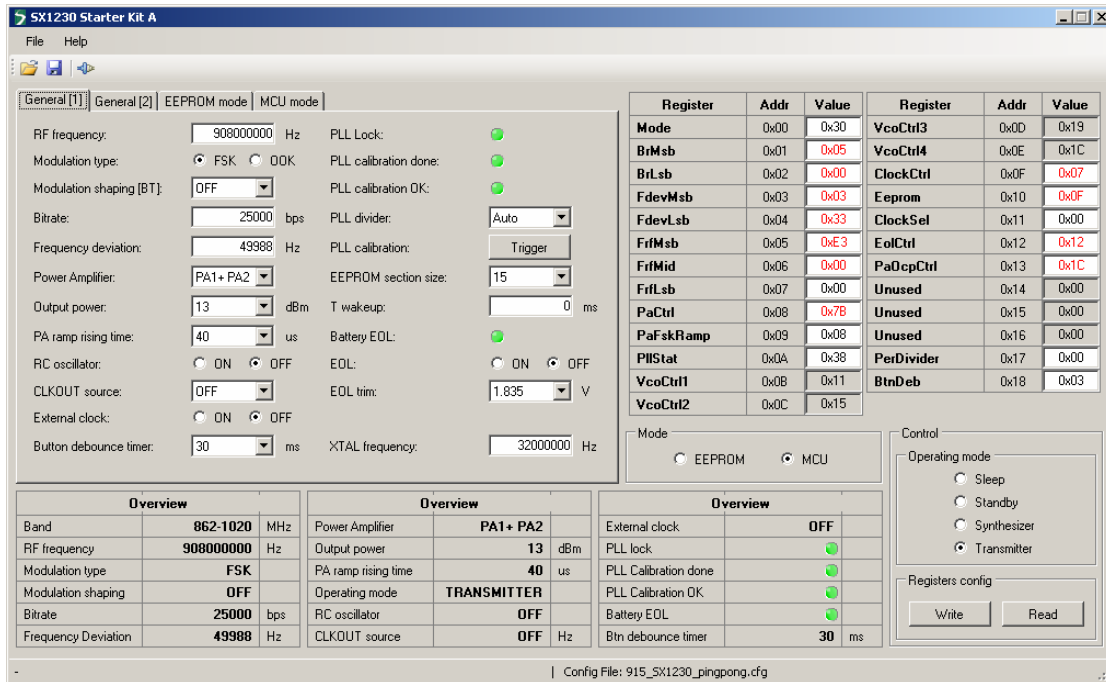


Figure 10. The New SX1230 Configuration: Ready to be Written

8. By clicking on the write button in the 'Registers config' section, the new register values are written to the SX1230 registers. If successful, the red values in the hexadecimal register summary table will turn black. As a double check, the register read button may be pressed – the values presented on the user interface should remain unchanged.



9. Once successfully configured, the SX1230 must be placed in packet transmission mode. This is done by selecting the 'MCU mode' tab – note that a pre-configured frame format identical to that for the SX1211SKA is already entered into the display. It suffices simply to click on the 'Start' button to begin continuous transmission of this frame. For clarity a screenshot illustrating the display during transmission is shown in Figure 11.

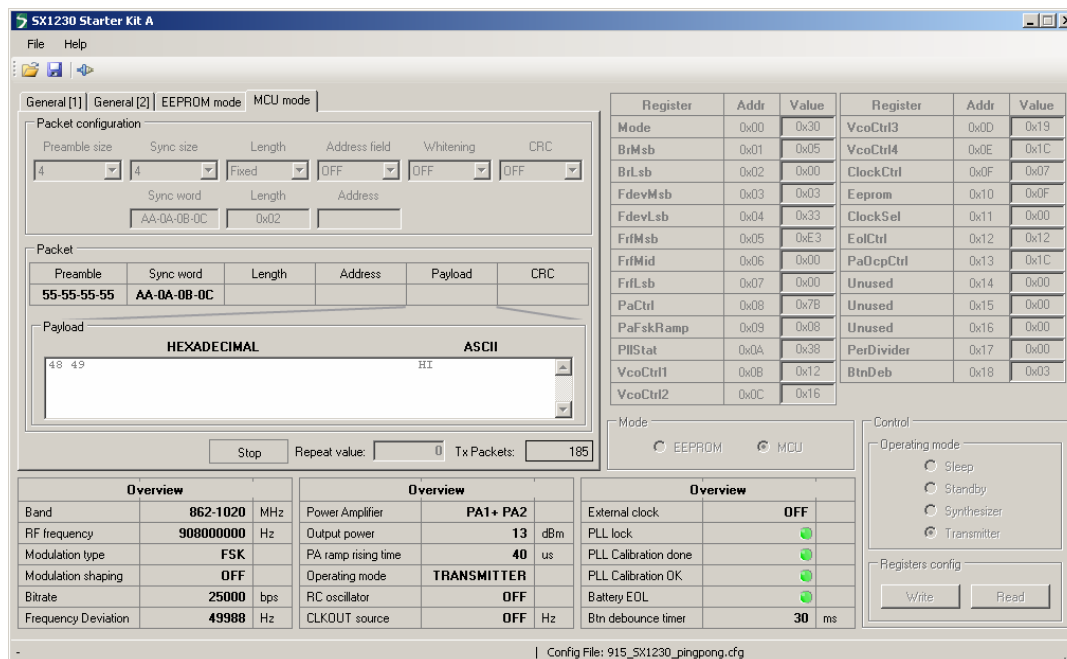


Figure 11. SX1230 During MCU Mode Packet Transmission

4.3 Link Test

With both devices configured as described in the preceding two sections, reception of valid packets by the SX1211 should be visible. Note that during link testing be sure that the USB kits are separated by several cm. Note also, that it is possible to install the SX1211SKA user interface on one machine and the SX1230 SKA user interface on another allowing range test evaluation with full control over the link parameters.

Where a pair of computers is not available, the SX1230SKA can be configured in stand alone mode. Please see the next section for a quick start guide on operation of the SX1230SKA in this mode.

5 Quick Start Guide: Stand Alone Mode

5.1 SX1211SKA Configuration

Initiation of the SX1211SKA for operation in Stand Alone Mode is identical to that described in Section 4.1. Please configure the SX1211SKA as described therein and refer to the following section for configuration of the SX1230.

5.2 SX1230SKA Configuration

There are a few simple steps to follow to configure the SX1230SKA for stand alone mode operation. Figure 12 shows both top and bottom views of the SX1230SKA hardware. The SX1230SKA companion EEPROM comes pre-programmed with a band specific configuration file already loaded.

1. Insert the CR2032 button cell into the cell holder (1), taking care to respect the polarity. Note that there is some quiescent current drain caused by the USB interface, so to maximise battery life ensure this is removed when not in use.
2. Three of the four push buttons (labeled 0 to 3 on the PCB silkscreen) are connected to the general purpose digital inputs of the SX1230. The button labeled 3 is configured as a reset button. Push this button following connection of the cell. There should now be no LEDs illuminated on the SX1230SKA.

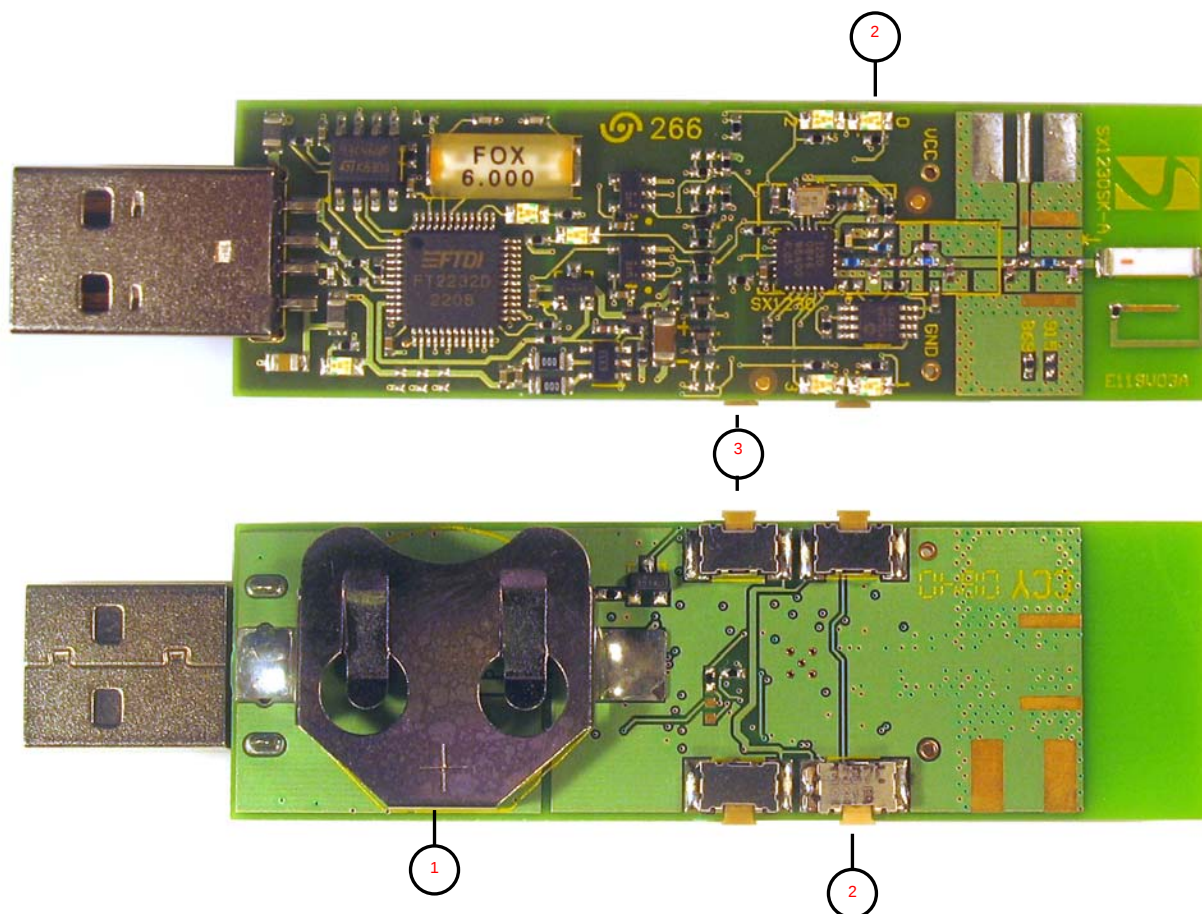


Figure 12. Hardware for E²PROM (Stand Alone) Operation

3. The SX1230SKA is not ready to be used in conjunction with the SX1211SKA in frame reception mode, as described in Section 4.1.

5.3 Link Test

Each push button has the same payload mapped to it. Push button 0 transmits this single, standard format frame, once. Push button 1 has a demonstration of packet repetition. Here the packet is programmed to be resent five times. Note that the SX1211SKA may not receive all five frames successfully. This is due to the time required to empty the FIFO, whereas SX1230 will transmit all five frames in quick succession. Finally, push button 2 gives a demonstration of periodic mode. Here the frame is configured to repeat several times a second whilst the push button is held down.

To modify the E²PROM contents please see Section 6.7. Note also that the original quick start configuration is included on the CD. Please also refer to Section 6.7 on how to load a non-volatile memory configuration file and program the E²PROM.

Otherwise, guidance for performing link testing is the same as that already given in Section 4.3.

6 SX1230SKA Software Description

6.1 Overview

Figure 13 shows the SX1230SKA graphical user interface (GUI). Each of the numbers surrounding the display corresponds to the Chapter within this section gives the description of that feature.


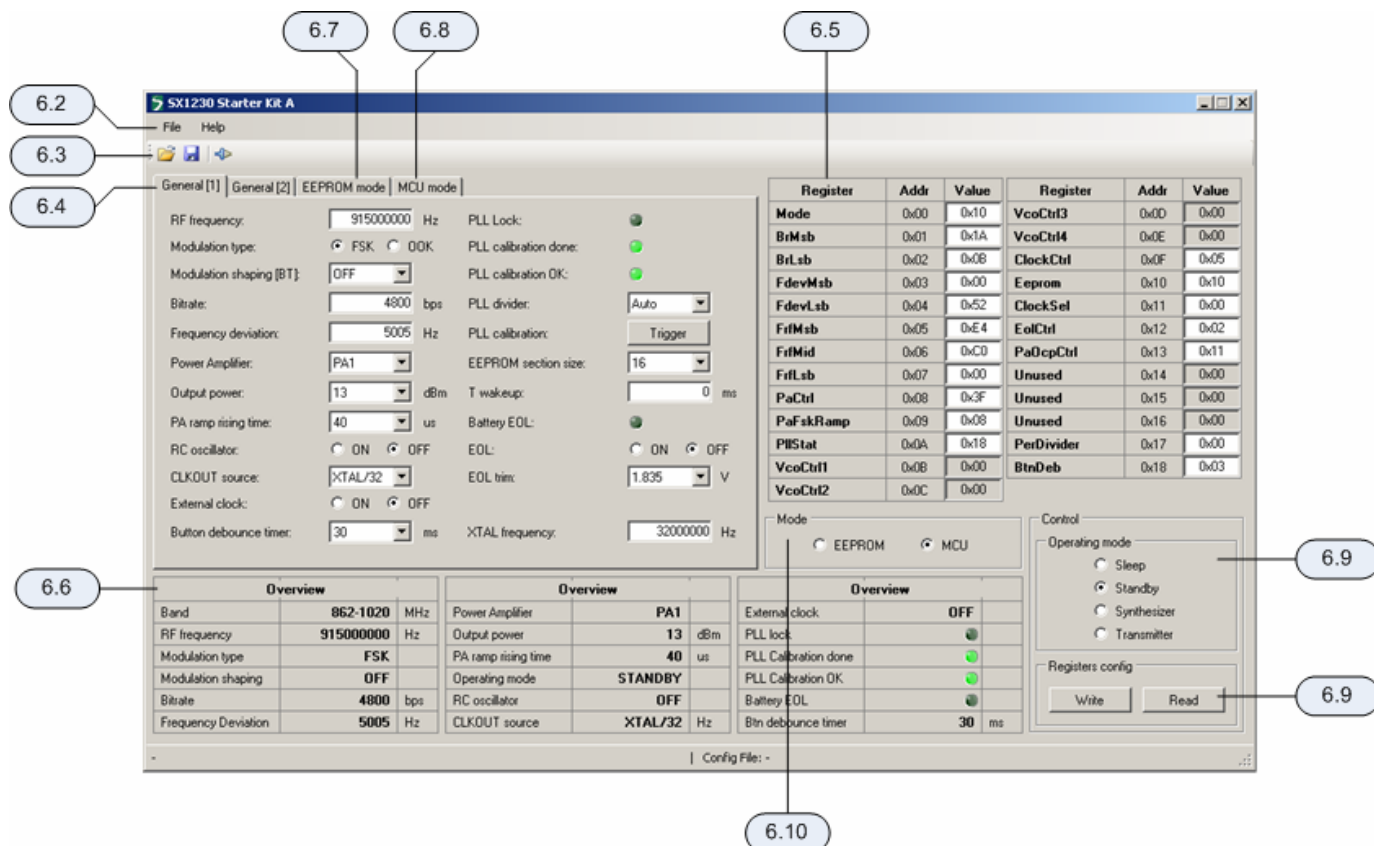


Figure 13: SX1230SKA GUI Overview and References to the User Guide Description of this Chapter.


6.2 File Menu

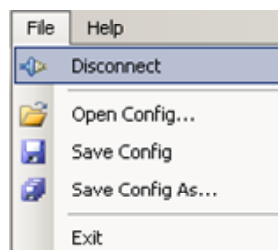

File menu contains some general purpose functions. The first feature in the list provides the possibility of connecting or disconnecting to the USB kit. Care must be taken to ensure that the USB port is closed before unplugging the USB kit. This functionality may also be accessed through the short cut buttons (see Section 6.3).

The possibility of opening configuration files and saving the present configuration is also provided. This is done through a standard Windows file dialog box.

The Help menu contains two menu items. The first item provides a link to this user guide in PDF format. The second, 'About SX1230 Starter kit...', gives information in the revision of the software installed.

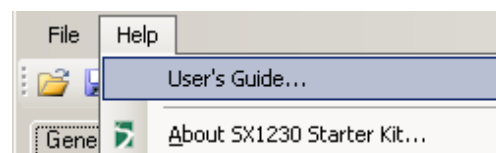

6.3 Shortcut Buttons

The shortcut buttons provide identical functionality to those listed under the file menu



The configuration 'file open' shortcut button. This opens a windows file dialog box to allow access to previously saved SX1230 register configuration files.



The 'save' configuration file shortcut button immediately saves and overwrites the existing configuration file.



The 'connect / disconnect' button allows the user to manage manually connection and disconnection of the kit. Note that any time the SX1230SKA is to be removed from the system; the kit must first be disconnected.

The saved configuration files are designed to be a useful tool for embedded software development. The file can be opened in any text editor to display the programmed register name, address and hexadecimal value programmed to that address.

#Type	Register Name	Address [Hex]	Value [Hex]
REG	Mode	0x00	0x30
REG	BrMsb	0x01	0x05
REG	BrLsb	0x02	0x00
REG	FdevMsb	0x03	0x03
REG	FdevLsb	0x04	0x33
REG	FrfMsb	0x05	0xE3
REG	FrfMid	0x06	0x00
REG	FrfLsb	0x07	0x00
REG	PaCtrl	0x08	0x7B
REG	PaFskRamp	0x09	0x08
REG	PllStat	0x0A	0x38
REG	VcoCtrl1	0x0B	0x12
REG	VcoCtrl2	0x0C	0x16
REG	VcoCtrl3	0x0D	0x19
REG	VcoCtrl4	0x0E	0x1C
REG	ClockCtrl	0x0F	0x07
REG	Eeprom	0x10	0x0F
REG	ClockSel	0x11	0x00
REG	EolCtrl	0x12	0x12
REG	PaOcpCtrl	0x13	0x1C
REG	Unused	0x14	0x00
REG	Unused	0x15	0x00
REG	Unused	0x16	0x00
REG	PerDivider	0x17	0x00
REG	BtnDeb	0x18	0x03
PKT	4;4;1;0;0;0;AA-0A-0B-0C;2;0;48,49		

Figure 14. Example Text Editor Output of the SX1230 Configuration File

6.4 General Configuration Tabs

For clarity and ease of use the general configuration settings have been split between two tabs.

6.4.1 General [1]

The most commonly used configuration parameters are located on the General [1] tab. Each field is directly editable by the user and is refreshed every time a register read or write is performed.

The screenshot shows the 'General [1]' tab of a configuration interface. It contains two columns of settings. The left column includes: RF frequency (915000000 Hz), Modulation type (FSK selected, OOK unselected), Modulation shaping [BT] (OFF), Bitrate (4800 bps), Frequency deviation (5005 Hz), Power Amplifier (PA1), Output power (13 dBm), PA ramp rising time (40 us), RC oscillator (OFF selected, ON unselected), CLKOUT source (XTAL/32), External clock (OFF selected, ON unselected), and Button debounce timer (30 ms). The right column includes: PLL Lock (green indicator), PLL calibration done (green indicator), PLL calibration OK (green indicator), PLL divider (Auto), PLL calibration (Trigger button), EEPROM section size (16), T wakeup (0 ms), Battery EOL (green indicator), EOL (OFF selected, ON unselected), EOL trim (1.835 V), and XTAL frequency (32000000 Hz).

Figure 15. The General Configuration Tab Features the most Commonly Used Configuration Parameters

Where the data entry field allows direct keyboard entry, the following background highlight conventions are used to aid the user in their choice of programmed value:

RF frequency: 915000001 Hz

An orange background highlight indicates that the precise value entered into the data entry field is not directly addressable by the SX1230. Instead the closest (rounded) value will be used.

RF frequency: 1915000000 Hz

Conversely a red background highlight indicates where the maximum or minimum value for that register parameter has been exceeded.

Each data entry field and user control of the General [1] tab is described below.

RF Frequency

RF frequency: Hz

The RF frequency field accepts a numerical text input from the keyboard. Values in any one of the three frequency bands from 862 to 1020 MHz are permitted. Please note that the entry units are Hz.

Modulation Type

Modulation type: ☒ FSK ☐ OOK

The SX1230 is capable of both FSK and OOK modulation, they are selectable through the user interface by clicking with the mouse on the appropriate radio button.

Modulation Shaping

Modulation shaping [BT]:

The Tx bit-stream may be pre-filtered before modulation. Varying strengths of filtering are accessible. The filter type also depends upon the type of modulation used. Filter coefficients are selectable from a drop-down menu.

Bitrate

Bitrate: bps

The bit rate of the transmitted signal (in bps) can be directly edited in this data entry field.

Frequency Deviation

Frequency deviation: Hz

Text entry field for the frequency deviation when using FSK modulation.

Power Amplifier

Power Amplifier:

Selection of single (low power) or dual (high power) operation. Note that PAs 1 and 2 must be enabled for +17 dBm operation.

Output Power

Output power: dBm

The output power is selectable from a drop down list in the programmable 1 dB increments.

PA Ramping

PA ramp rising time: us

The PA ramp rise time is selectable from the list of programmable values.

Oscillator

RC oscillator: ☐ ON ☒ OFF
 CLKOUT source:
 External clock: ☐ ON ☒ OFF

Although not directly accessible from the SX1230SKA, for completeness, the source of the clock output signal can be selected and its frequency altered in accordance with the range of programmable divider values. For more information please consult the SX1230 datasheet.

Push Button Debouncer

Button debounce timer: ms

The four general purpose digital inputs – here connected to the four push buttons – has a variable debounce timer. Several common values are accessible from a drop down menu.

PLL Lock Detection Parameters

PLL Lock: ☒

PLL calibration done: ☒

PLL calibration OK: ☒

PLL divider:

PLL calibration:

Three LED type indicators display the status of the SX1230 following the last register read cycle of the SX1230. Various options exist for changing the PLL divider ratio and triggering PLL calibration. Please consult the SX1230 datasheet for a more detailed description.

E²PROM Mode Parameters

EEPROM section size:

T wakeup: ms

These two register settings are used to determine the size of each section in the E²PROM memory and the wake-up time if periodic mode is enabled respectively. Please see Section 6.7, in conjunction with the SX1230 datasheet, for a description of how to use these E²PROM parameters.

Low Battery Detection Parameters

Battery EOL: ☒

EOL: ☐ ON ☒ OFF

EOL trim: V

The battery end of life (EOL) indicator is set if the EOL is enabled (here controlled by a radio button input) and the supply voltage passes the corresponding threshold – EOL trim.

Crystal Frequency

XTAL frequency: Hz

Most of the programmable communication setting parameters are a function of the crystal frequency used. This field allows other crystal frequencies to be tried, however, the SX1230SKA comes fitted with a 32 MHz crystal. The value should hence not be changed.

6.4.2 General [2]

Figure 16. Second Page of the General Configuration Parameters

The second page of general configuration settings (see Figure 16) contains the user inputs for enabling of the power amplifier over current protection (OCP) and setting the current limit from a drop down menu. The current limit must be increased to 100 mA or higher for operation of the SX1230 at the maximum output power of +17 dBm.

6.5 Register Hexadecimal Display

Figure 17 shows the register summary of the SX1230. In addition to manual user entry in the fields described in the previous section, direct hexadecimal entries may be made into the register display. Note that values yet to be written to the SX1230 registers appear in red. Note, also, that for full control flexibility, incorrect (red) values entered in the hexadecimal section *will still be written* in the event of a register 'write'. So care must be exercised when editing the hexadecimal values.

Register	Addr	Value	Register	Addr	Value
Mode	0x00	0x10	VcoCtrl3	0x0D	0x19
BrMsb	0x01	0x1A	VcoCtrl4	0x0E	0x1C
BrLsb	0x02	0x0B	ClockCtrl	0x0F	0x05
FdevMsb	0x03	0x01	Eeprom	0x10	0x10
FdevLsb	0x04	0x52	ClockSel	0x11	0x00
FrfMsb	0x05	0xE4	EolCtrl	0x12	0x12
FrfMid	0x06	0xC0	PaOcpCtrl	0x13	0x1B
FrfLsb	0x07	0x00	Unused	0x14	0x00
PaCtrl	0x08	0x3F	Unused	0x15	0x00
PaFskRamp	0x09	0x08	Unused	0x16	0x00
PllStat	0x0A	0x10	PerDivider	0x17	0x00
VcoCtrl1	0x0B	0x12	BtnDeb	0x18	0x03
VcoCtrl2	0x0C	0x16			

Figure 17. Register Hexadecimal Display

Note that values changed in this portion of the display cause the values in the tabbed configuration section to be changed dynamically.

6.6 Overview Panel

A summary of the values presently entered into the user interface software is shown in the overview display at the bottom of the screen. This covers all of the SX1230 register values, including those not displayed on the tab presently selected, and indicates the true value which will be written to the SX1230 configuration registers.

Overview			Overview			Overview		
Band	862-1020	MHz	Power Amplifier	PA1		External clock	OFF	
RF frequency	915000000	Hz	Output power	13	dBm	PLL lock		
Modulation type	FSK		PA ramp rising time	40	us	PLL Calibration done		
Modulation shaping	OFF		Operating mode	STANDBY		PLL Calibration OK		
Bitrate	4800	bps	RC oscillator	OFF		Battery EOL		
Frequency Deviation	5005	Hz	CLKOUT source	XTAL/32	Hz	Btn debounce timer	30	ms

Figure 18. The Configuration Overview Display

6.7 E²PROM Mode Tab

The E²PROM mode tab is used to configure the contents of the E²PROM for stand alone mode operation of the SX1230SKA. In this mode the SX1230 acts as SPI master and can download both configuration and payload information from an SPI E²PROM. The E²PROM memory map is shown below:

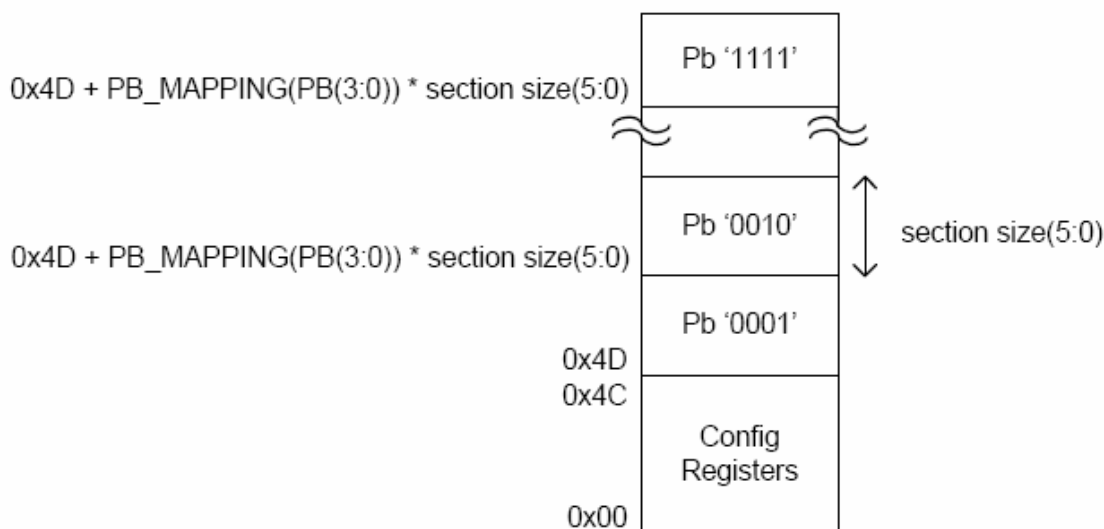


Figure 19. E²PROM Memory Mapping

The bottom 0x4C locations in the E²PROM are reserved general configuration information – configuration which is the same for every button press. The subsequent sections are then mapped to the remaining 15 possible combinations of the 4 digital inputs (for mapping details please see the SX1230 datasheet). These may contain either i) solely payload or ii) a combination of supplementary configuration information and payload.

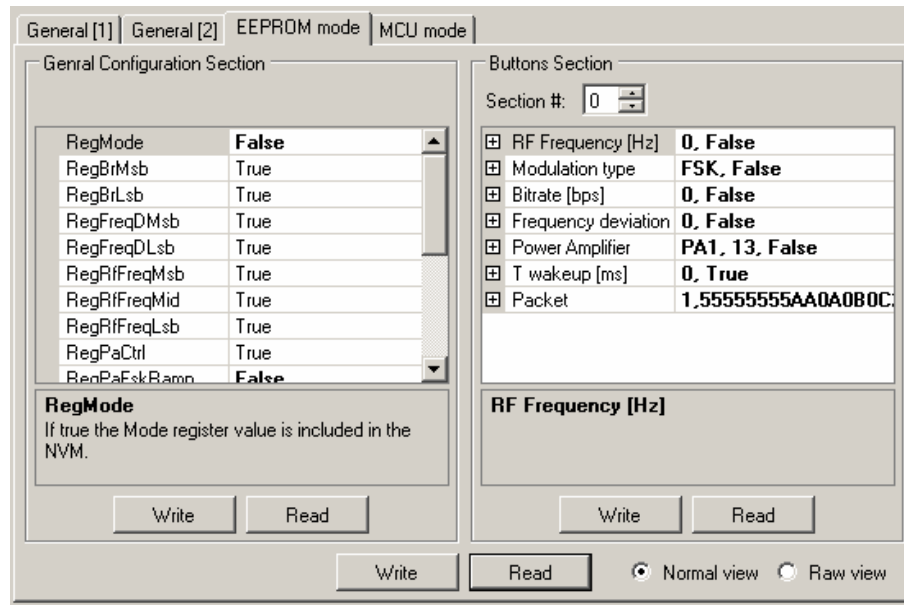


Figure 20. The E²PROM Mode Tab 'Normal View'

The E²PROM mode display is broken down into two types, selectable by the radio button control in the bottom right hand corner of the display. The default is 'Normal view' which shows the E²PROM contents in human readable format (see Figure 20). The left hand 'General Configuration Section' dictates which registers are to be written to the general configuration section – True indicating that the value will be written, False that it will not. The values written to the configuration section are taken from the General setting tabs of Sections 6.4.1 and 6.4.2. The general configuration settings may be read or written independently of the rest of the E²PROM contents by clicking the Read or Write button within the section.

The rightmost frame contains the contents of each of the input specific sections. The contents of a particular section are displayed individually. The section may be changed by entering the desired section in the 'Section #:' input. Several useful common parameters and the payload itself are listed within the 'Buttons' section. Each can be edited directly. The input specific section of the E²PROM memory can be written or read independently of the rest of the E²PROM contents by clicking on the write or read button within the Buttons Section.

At the bottom of the display are the controls for global read or write of the E²PROM contents. These cause the whole E²PROM to be read or written, respectively.

The radio button control in the bottom right hand corner allows selection between Normal and Raw views of the E²PROM contents.

An alternative perspective of the E²PROM contents is available in 'Raw view', illustrated in Figure 21. Here we see the E²PROM contents in hexadecimal (centre column) and ASCII (right column) versus the E²PROM address in hexadecimal (left column) in tabular format. Note also the addition of several short-cut buttons. These allow the user to save or recall E²PROM (.NVM – non volatile memory) files to or from disc storage. Copy, cut and paste functionality is also provided.

Once programmed the SX1230 may be disconnected from the USB port, unplugged and used in stand-alone mode. The SX1230SKA comes pre-programmed with an example E²PROM contents (see the quick start Section for more details).



6.8 MCU Mode Tab

General [1] General [2] EEPROM mode **MCU mode**

Packet configuration

Preamble size: 4 Sync size: 4 Length: Fixed Address field: OFF Whitening: OFF CRC: OFF

Sync word: AA-0A-0B-0C Length: 0x02 Address:

Packet

Preamble	Sync word	Length	Address	Payload	CRC
55-55-55-55	AA-0A-0B-0C				

Payload

HEXADECIMAL: 48 49 ASCII: HI

Start Repeat value: 0 Tx Packets: 0

Figure 23. MCU Mode Tab Display

The MCU mode tab allows the user to define a custom packet for transmission by the SX1230SKA. The packet configuration section (top) allows the user enable and set the length of a pulse train preamble (sent at the data rate). A custom synchronisation word of up to 4 bytes may also be added. Fixed or variable length packets may also be stipulated (see the SX1211 datasheet for more information), as may an optional 1 byte address.

With these options entered the constructed packet is shown in the 'Packet' frame. The packet payload may also be edited in either ASCII or hexadecimal. Packet transmission starts when the 'Start' button is pressed. Either infinite transmission (repeat value = 0) or a finite number of packets may be transmitted by editing the repeat value.

6.9 The Mode Control Box



Figure 24. The Control Box


The control box gives access to the operating modes of the SX1230. By selecting one of the radio buttons, the SX1230 is immediately transferred into that mode without the need to read or write to the registers. The control for reading and writing to the registers is also within the control frame. The Read button will read the contents of the SX1230 configuration registers and display them in the hexadecimal, overview and tabbed configuration areas.

Similarly, a register write can be performed by clicking the write button. Here the contents of the hexadecimal display are written directly to the SX1230 configuration registers.

Note that the E²PROM contents cannot be manipulated from this section instead see Section 6.7.

6.10 MCU / E²PROM Mode Selection

In the frame labeled 'Mode' either MCU or Stand Alone (E²PROM) operation can be selected. This allows the stand alone mode to be entered whilst connected to the USB port. Note that transition to and from E²PROM mode generates a hardware reset (transition cannot be made dynamically) and so the register contents of the SX1230 will be lost upon transition.

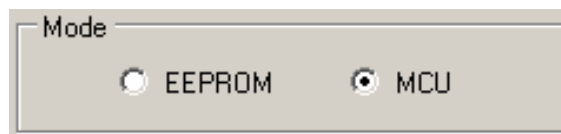

7 SX1211SKA Software Description

7.1 Overview

Figure 25 shows the SX1211SKA graphical user interface. Each of the numbers surrounding the display corresponds to the Chapter within this section which corresponds to the description of that GUI feature.


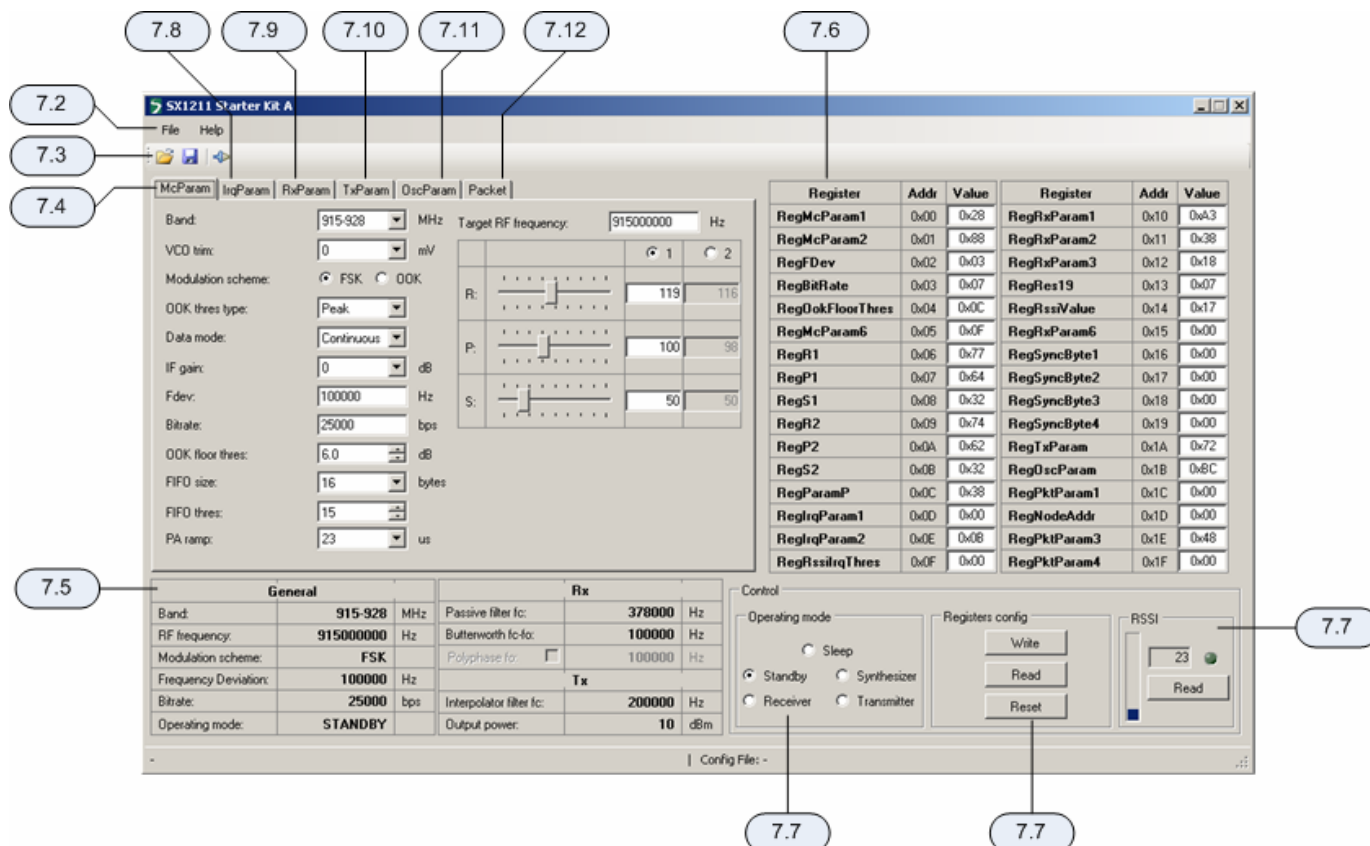


Figure 25. SX1211SKA GUI Overview and References to the User Guide Description of this Chapter


7.2 File Menu

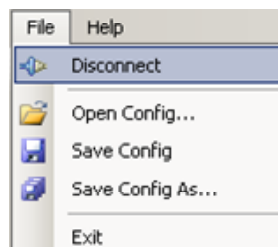

File menu contains some general purpose functions. Some of them can also be accessed on the toolbar by clicking directly on the icon. The first feature in the list provides the possibility of connecting or disconnecting to the USB kit. Care must be taken to ensure that the USB port is closed before removing the USB kit. This functionality may also be accessed through the short cut buttons (see Section 7.3).

The possibility of opening configuration files and saving the present configuration is also provided. This is done through a standard Windows file dialog box.

The Help menu contains two menu items. The first item provides a link to this user guide in PDF format. The second, About SX1230 Starter kit..., gives information in the revision of the software installed.

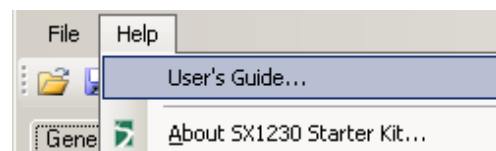

7.3 Shortcut Buttons

The shortcut buttons provide identical functionality to those listed under the file menu



The configuration file open shortcut button. This opens a windows file dialog box to allow access to previously saved SX1211 register configuration files.




The save configuration file shortcut button immediately saves and overwrites the existing configuration file.



The connect / disconnect button allows the user to manage manually connection and disconnection of the kit. Note that any time the SX1211SKA is to be removed from the system; the kit must first be disconnected.

The saved configuration files are designed to be a useful tool for embedded software development. The file can be opened in any text editor to display the programmed register name, address and hexadecimal value programmed to that address.

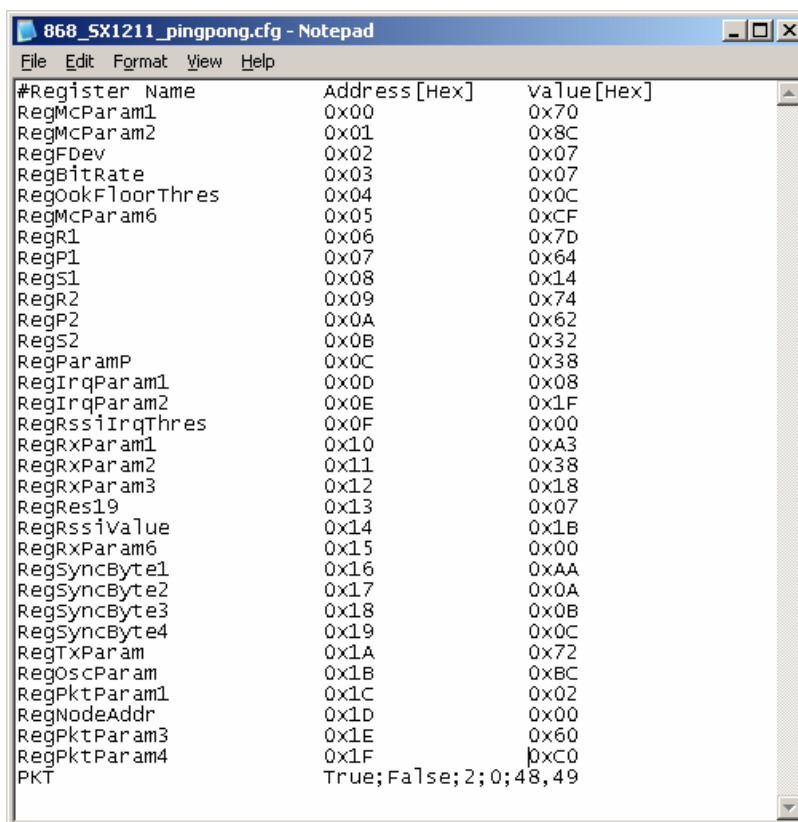

```

868_SX1211_pingpong.cfg - Notepad
File Edit Format View Help
#Register Name      Address [Hex]      value [Hex]
RegMcParam1         0x00               0x70
RegMcParam2         0x01               0x8C
RegFDev             0x02               0x07
RegBitRate          0x03               0x07
RegOOKFloorThres    0x04               0x0C
RegMcParam6         0x05               0xCF
RegR1               0x06               0x7D
RegP1               0x07               0x64
RegS1               0x08               0x14
RegR2               0x09               0x74
RegP2               0x0A               0x62
RegS2               0x0B               0x32
RegParamP           0x0C               0x38
RegIrqParam1        0x0D               0x08
RegIrqParam2        0x0E               0x1F
RegRssiIrqThres     0x0F               0x00
RegRxParam1         0x10               0xA3
RegRxParam2         0x11               0x38
RegRxParam3         0x12               0x18
RegRes19            0x13               0x07
RegRssiValue        0x14               0x1B
RegRxParam6         0x15               0x00
RegSyncByte1        0x16               0xAA
RegSyncByte2        0x17               0x0A
RegSyncByte3        0x18               0x0B
RegSyncByte4        0x19               0x0C
RegTxParam          0x1A               0x72
RegOscParam         0x1B               0xBC
RegPktParam1        0x1C               0x02
RegNodeAddr         0x1D               0x00
RegPktParam3        0x1E               0x60
RegPktParam4        0x1F               0xC0
PKT                  True;False;2;0;48,49
  
```

Figure 26. Example Text Editor Output of the SX1211 Configuration File

7.4 McParam Tab

Band Selection

Band: MHz

One of the three operating bands for the SX1211 may be selected here. The SX1211SKA hardware is band specific and so the corresponding band should be selected.

VCO Voltage Trim

VCO trim: mV

In some designs the VCO voltage requires trimming. The SX1211SKA reference design does not require this function, but is included here for completeness.

Modulation Selection

Modulation scheme: ☒ FSK ☐ OOK

The SX1211 is capable of both FSK and OOK modulation, they are selectable through the user interface by clicking with the mouse on the appropriate radio button.

OOK Receiver Detection Type

OOK thres type:

Several modes of OOK detection are possible, please see the SX1211 datasheet for mode information on configuring the OOK receiver.

Data Mode

Data mode:

Three data modes are available for the SX1211, typically packet mode is selected automatically, requiring no user selection, upon launching the Packet Test (see Section 7.12).

Gain of the IF Stage

IF gain: dB

The gain of the intermediate frequency amplifier chain can be adjusted manually.

Frequency Deviation

Fdev: Hz

Text entry field for the frequency deviation when using FSK modulation.

Bit Rate

Bitrate: bps

The bit rate of the transmitted signal (in bps) can be directly edited in this data entry field.

Floor Threshold for OOK Detection

OOK floor thres: dB

Margin to the OOK demodulation threshold – see SX1211 datasheet for more details.

FIFO Settings

FIFO size: bytes
FIFO thres:

Both the working size of the FIFO and the number of bytes it must store before generating a hardware interrupt are user defined. Again this functionality is largely automated in the packet test mode (Section 7.12).

PA Ramping

PA ramp: us

The PA ramp rise time is selectable from the list of programmable values.

Frequency of Operation

Target RF frequency: Hz

		☒ 1	☐ 2
R:	119	119	116
P:	100	100	98
S:	50	50	50

The frequency of operation of the SX1211 is a set by three frequency divider ratios. (See the illustration below). Based upon the frequency of the crystal oscillator and the values of these divider ratios the local oscillator frequency may be determined.

To simplify this process, the SX1211SKA user interface sees this process completely automated. By entering the desired operating frequency in the text field at the top of the display, the resultant R, P and S divider ratios are calculated (see the SX1211 datasheet for information on their calculation).

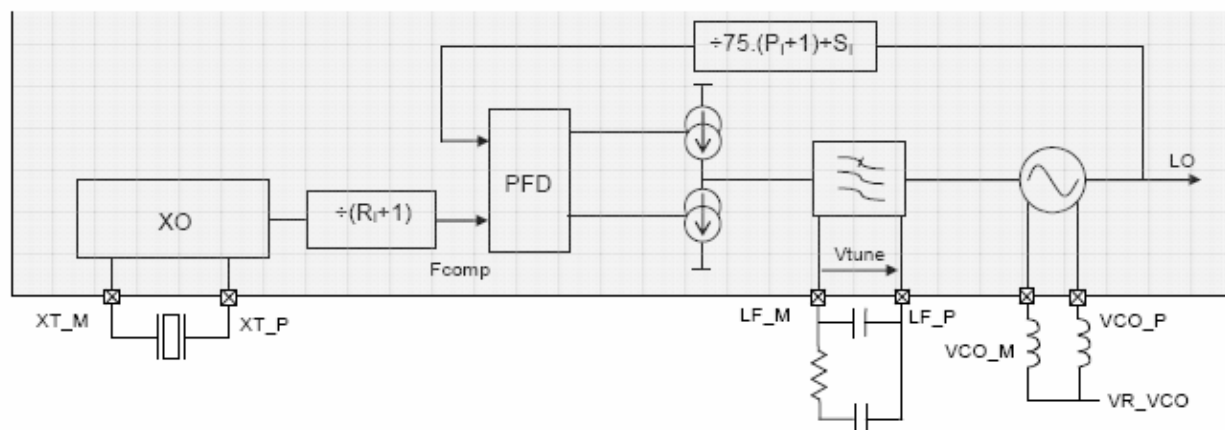


Figure 27. SX1211 Local Oscillator Generation

7.5 Overview Panel

A summary of the values presently entered into the user interface software is shown in the overview display at the bottom of the screen. This is sub-divided into three sections pertaining to: general configuration, transmitter settings and receiver parameters.

General			Rx		
Band:	915-928	MHz	Passive filter fc:	378000	Hz
RF frequency:	915000000	Hz	Butterworth fc-fc:	100000	Hz
Modulation scheme:	FSK		Polyphase fc:	☐ 100000	Hz
Frequency Deviation:	100000	Hz	Tx		
Bitrate:	25000	bps	Interpolator filter fc:	200000	Hz
Operating mode:	STANDBY		Output power:	10	dBm

Figure 28. The Overview Panel

7.6 Register Hexadecimal Display

Figure 29 shows the register summary of the SX1211. In addition to manual user entry in the fields described in the previous section, direct hexadecimal entries may be made into the register display. Note that values yet to be written to the SX1211 registers appear in red. Note, also, that for full control flexibility, incorrect (red) values entered in the hexadecimal section *will still be written* in the event of a register 'write'. So care must be exercised when editing the hexadecimal values.

Register	Addr	Value	Register	Addr	Value
RegMcParam1	0x00	0x28	RegRxParam1	0x10	0xA3
RegMcParam2	0x01	0x88	RegRxParam2	0x11	0x38
RegFDev	0x02	0x03	RegRxParam3	0x12	0x18
RegBitRate	0x03	0x07	RegRes19	0x13	0x07
RegOokFloorThres	0x04	0x0C	RegRssiValue	0x14	0x00
RegMcParam6	0x05	0x0F	RegRxParam6	0x15	0x00
RegR1	0x06	0x8F	RegSyncByte1	0x16	0x00
RegP1	0x07	0x79	RegSyncByte2	0x17	0x00
RegS1	0x08	0x14	RegSyncByte3	0x18	0x00
RegR2	0x09	0x74	RegSyncByte4	0x19	0x00
RegP2	0x0A	0x62	RegTxParam	0x1A	0x72
RegS2	0x0B	0x32	RegOscParam	0x1B	0xBC
RegParamP	0x0C	0x38	RegPktParam1	0x1C	0x00
RegIrqParam1	0x0D	0x00	RegNodeAddr	0x1D	0x00
RegIrqParam2	0x0E	0x09	RegPktParam3	0x1E	0x48
RegRssiIrqThres	0x0F	0x00	RegPktParam4	0x1F	0x00

Figure 29. The Hexadecimal Register Display Summary

7.7 The Mode Control Box

The mode control box is sub-divided into three sections. The first 'Operating mode' allows the user to change the operating mode of the SX1211 by clicking on the radio button corresponding to the desired mode. Note that the transition between modes is instantaneous. The centre section, 'Registers config' allows the register settings entered elsewhere in the user interface to be written to the configuration registers of the SX1211 by clicking the write button. The read operation will read the configuration registers and refresh the user interface display with the values read from the SX1211.

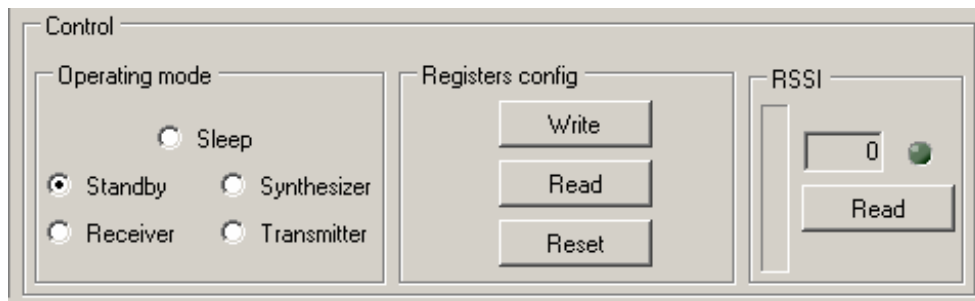


Figure 30. The Mode Control Box also Incorporates RSSI

The third, rightmost, section of the mode control box allows an instantaneous RSSI (received signal strength indicator) measurement. Please note that this feature is only accessible when the SX1211 is in the receiver operating mode.

7.8 The IrqParam Tab

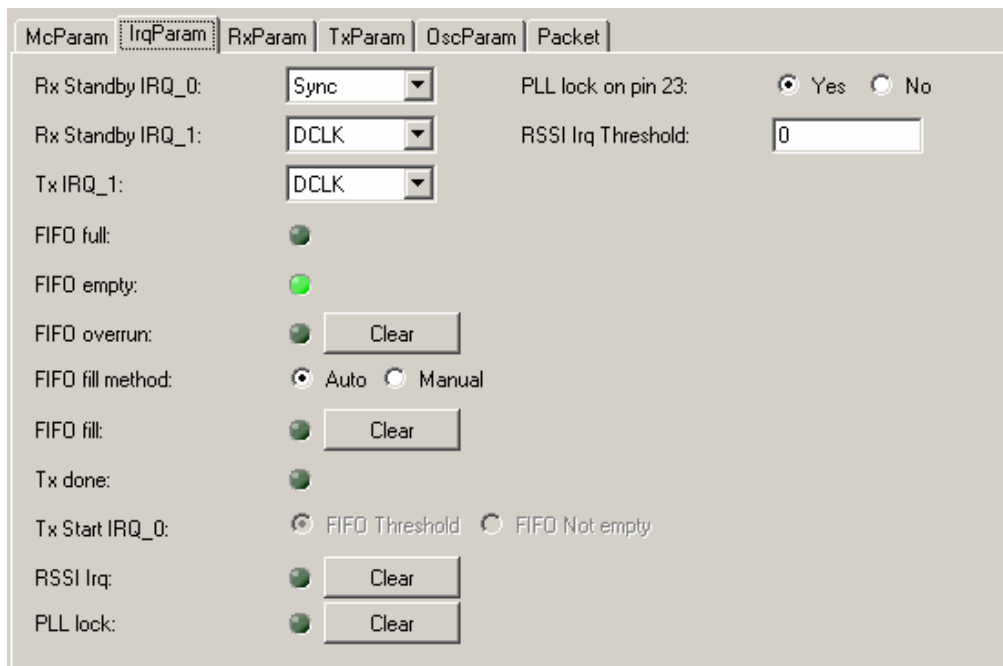


Figure 31. The Interrupt Mapping Display

For total register coverage by the user interface, the interrupt mapping for the SX1211 can be controlled through the configuration of the IrqParam display. Note, however, that the hardware interrupt feature is not used directly by the GUI. For further information please see the corresponding register descriptions in the SX1211 datasheet and the PCB layout and schematics of Section 9.

7.9 The RxParam Tab

The receiver parameter field provides full access to all of the software configurable settings of the SX1211. For reference, a simplified block schematic of the SX1211 receiver is shown in figure Figure 32. The settings configurable in the receiver parameter tab correspond to the programmable baseband receiver functions.

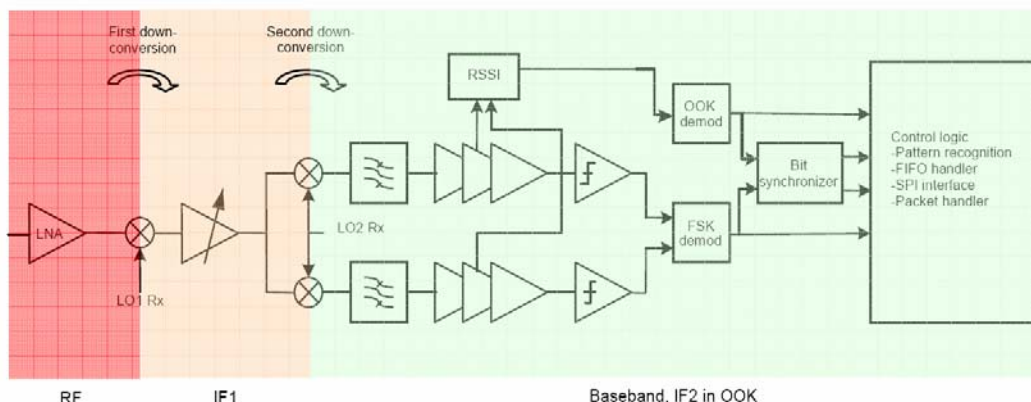


Figure 32. SX1211 Receiver Block Diagram, the Colours Correspond to the Frequency of Operation.

McParam	IrqParam	RxParam	TxParam	OscParam	Packet								
Rx passive filter [fc]: 378000 Hz													
Rx butterworth filter [fc-fo]: 100000 Hz													
Rx polyphase filter [fo]: 100000 Hz													
Polyphase filter: ☐ ON ☒ OFF													
Bit synchronizer: ☒ ON ☐ OFF													
Sync word recognition: ☐ ON ☒ OFF													
Sync word tolerance: 0 error													
RSSI Value: 0													
OOK threshold step: 0.5 dB													
OOK threshold dec period: 1 per chip periods													
OOK avg threshold cutoff: Bitrate / 8*PI													
Sync word Sync word size [1-4]: 4 <table border="1"> <thead> <tr> <th>Byte[1]</th> <th>Byte[2]</th> <th>Byte[3]</th> <th>Byte[4]</th> </tr> </thead> <tbody> <tr> <td>0x00</td> <td>0x00</td> <td>0x00</td> <td>0x00</td> </tr> </tbody> </table>						Byte[1]	Byte[2]	Byte[3]	Byte[4]	0x00	0x00	0x00	0x00
Byte[1]	Byte[2]	Byte[3]	Byte[4]										
0x00	0x00	0x00	0x00										

Figure 33. Receiver Parameter Display

For a complete description of the functionality of the receiver section please consult the SX121 datasheet. However, the principle fields of interest for general use are:

Rx Filters:

The first three text entry fields of the receiver parameters correspond to the baseband filtering section. Note that the Butterworth filter is the narrowest of the three filters and determines the receiver channel bandwidth.

Bit Synchroniser:

This block performs timing recovery and synchronises the decision on whether a given bit is logical high or low based upon the received bit stream. This block yields a substantial improvement in receiver sensitivity performance and it is hence recommended that it be left enabled.

Sync Word:

The synchronisation word is applicable to operation in buffered and packet modes. For packet mode operation the sync word is set using the packet editor – this may be found in the 'Packet' Tab (Section 7.12). Link testing by the SX1211SKA is done in packet mode only – sync word provision is made here for completeness.

OOK Settings:

OOK demodulation is based upon measurements from the RSSI block and there are a rich variety of settings for how the OOK signal is detected and processed. These techniques and the corresponding settings are given a detailed treatment in the SX1211 datasheet.

7.10 The TxParam Tab

The transmitter configuration of the SX1211 is shown in Figure 34. This shows that the modulating signal is generated by direct digital synthesis (DDS), unconverted through the superheterodyne mixer stages and then amplified by a power amplifier chain.

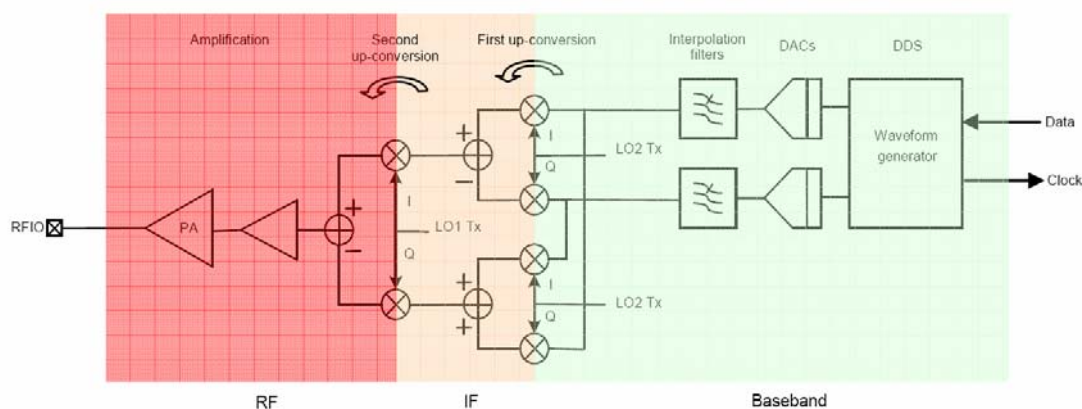


Figure 34. SX1211 Simplified Transmitter Block Schematic Diagram

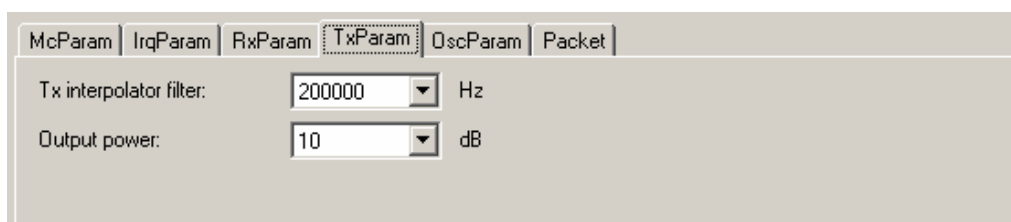


Figure 35. The Transmitter Parameter Tab Display

The two parameters which are configurable for transmit operation of the SX121 are:

Output Power:

The output power of the SX1211 can be programmed in 3 dB steps. Valid programmable powers are selected from a drop-down list of valid values.

Interpolation Filter Setting:

The DDS output requires filtering to remove the spurs common in the generation of signals through this technique; this is performed by the interpolation filters. The cut-off frequency of the interpolation filters can be selected from the drop down menu of valid values. The technique for calculating the cut-off frequency may be found in the SX1211 datasheet.

7.11 The OscParam Tab

Figure 36. The Oscillator Parameter Display

The oscillator parameter display gives access to the clock output functionality. This can be enabled or disabled and the frequency changed by entering a value in the 'CLK out frequency' text field. Note also that there is provision to change the frequency of the crystal. Changing of the crystal frequency has a knock on effect on all parameters that are a function of the reference frequency, for example bit rate, filter settings, RF output frequency. The SX1211SKA is fitted with the 12.8 MHz crystal recommended in the SX1211 reference design. For this reason the crystal value should, typically, be left unchanged.

7.12 The Packet Test Tab

The 'Packet' tab is the principle interface for conducting transmission or reception testing. The display, as shown in Figure 35 is divided into three horizontal portions. The top portion of the display is given to the packet editor. Here the configuration of the packet, either to be transmitted or received by the SX1211SKA is constructed.

The packet layout contains all of the features described in the SX1211 datasheet. This includes:

Preamble

This input allows the user enable and set the length of a pulse train preamble (sent at the data rate).

Sync word size

A custom synchronisation word of up to 4 bytes may also be added.

Sync tol

The number of errors which may be accommodated in the sync word (bits), before the packet is rejected.

Format / Length / Address

Fixed or variable length packets may also be stipulated (see the SX1211 datasheet for more information), as may an optional 1 byte address.

Digital Coding

Optional channel coding including CRC, data whitening and Manchester coding are also available.

With these options entered the constructed packet is shown in the 'Packet' frame. Where the SX1211SKA is to be used in transmit mode, the packet payload may also be edited in either ASCII or hexadecimal. Packet transmission

is enabled by selecting the 'Transmission' radio button. This starts when the 'Start' button is pressed. Either infinite transmission (repeat value = 0) or a finite number of packets may be transmitted by editing the repeat value.

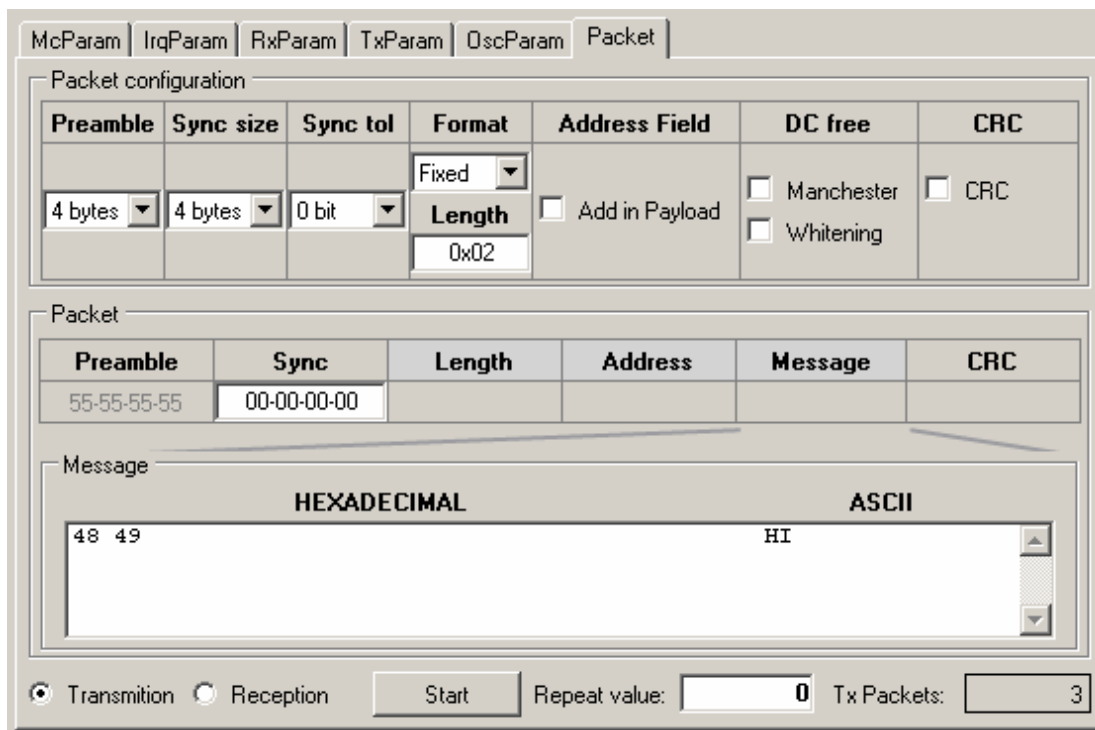


Figure 37. The Packet Receiver / Transmitter Test Display

For receive mode, the normal mode of operation in conjunction with the SX1230SKA, the reception the 'Reception' radio button is selected and the start button pressed. From this moment the SX1211 is placed in receive mode and listens continuously for a packet corresponding to the format entered in the packet editor. Upon successful reception, the payload received is shown in the 'Message Box' and the number of received packets is incremented. For indication of the signal strength received by the SX1211SKA, the RSSI display (see Section 7.7) is activated and continuously refreshed.

By way of example, Figure 38 shows the entire user interface display whilst receiving a valid packet payload.




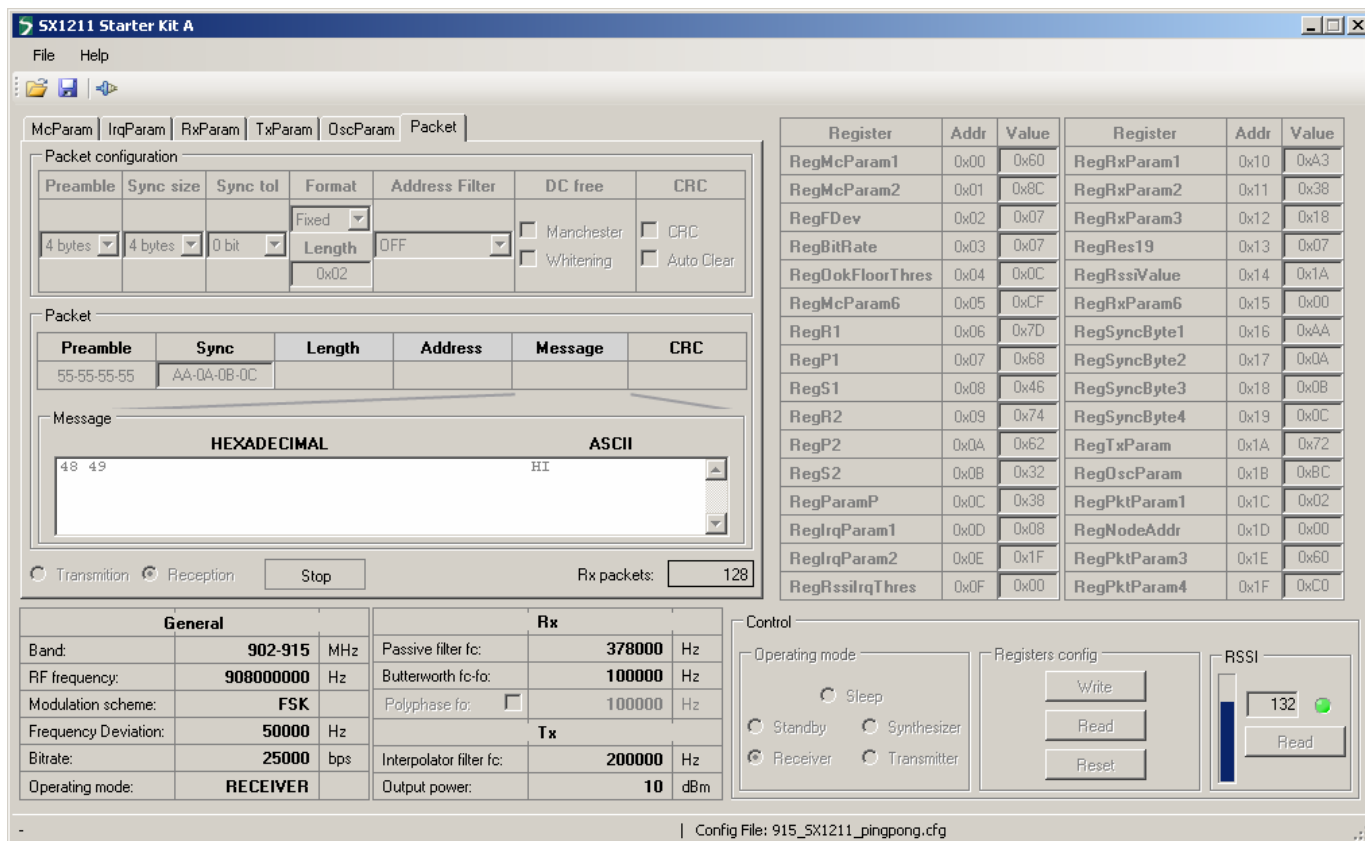


Figure 38. Software Display: Successful Packet Mode Reception


8 Schematics and 4-Layer PCB Layout: SX1230SKA

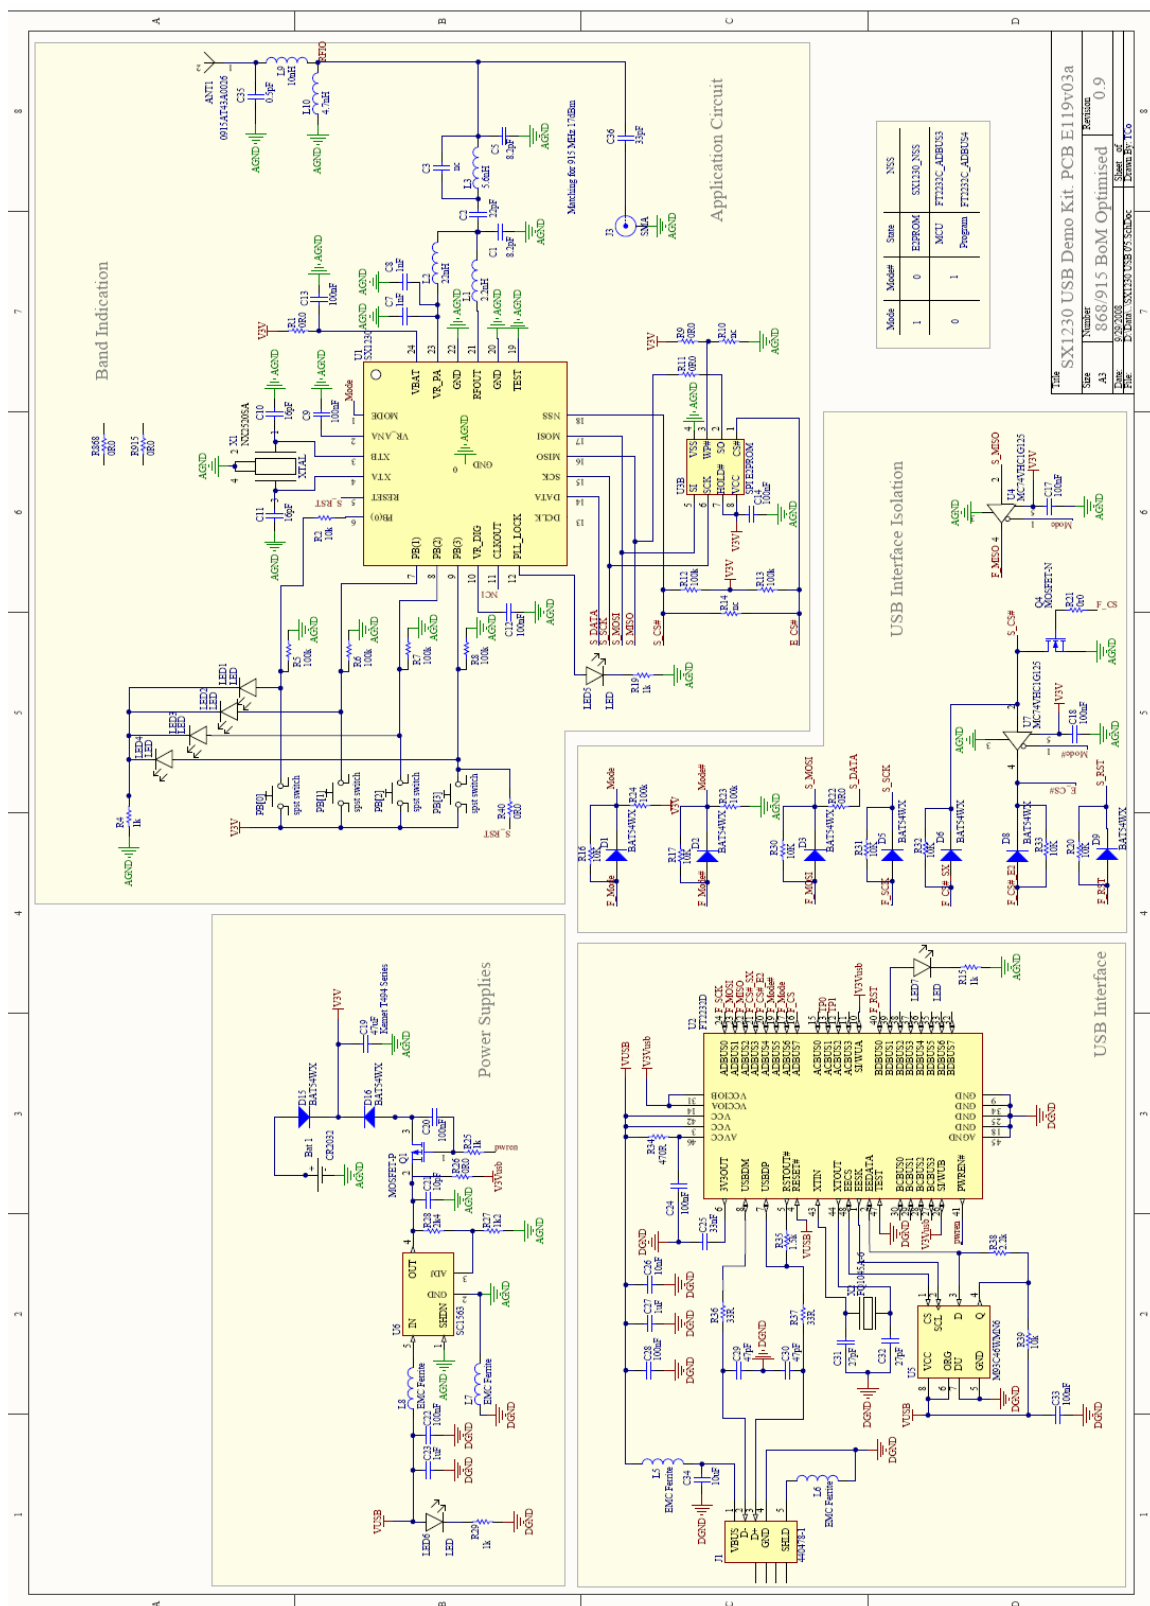

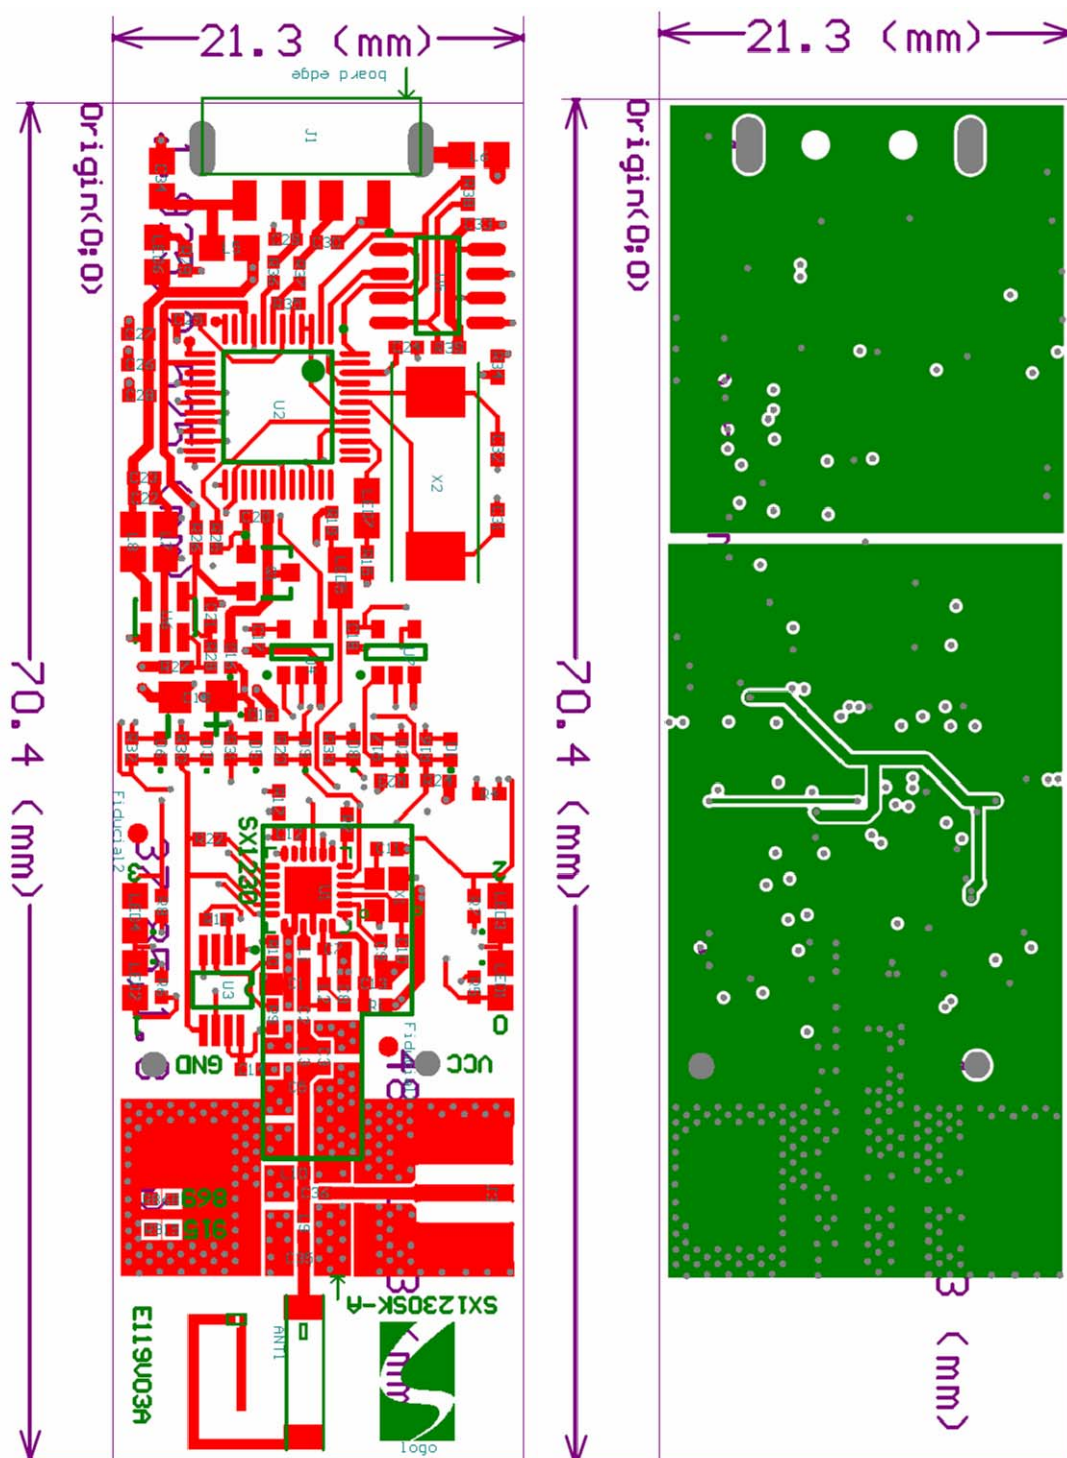


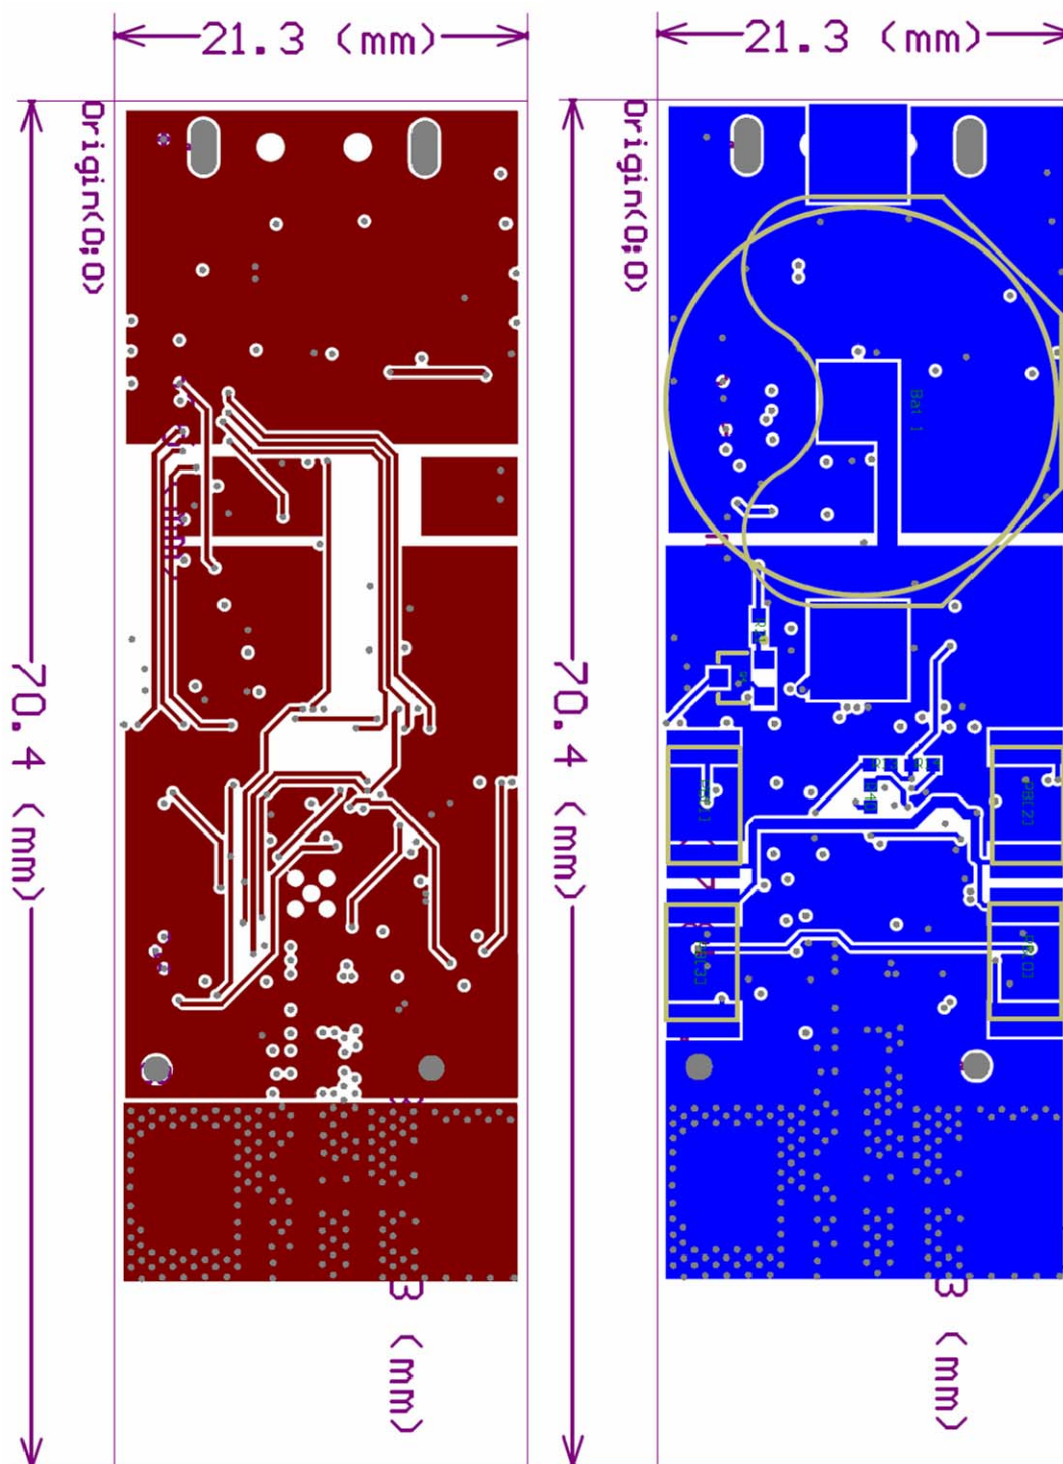

9 Schematics and 2-Layer PCB Layout: SX1211SKA

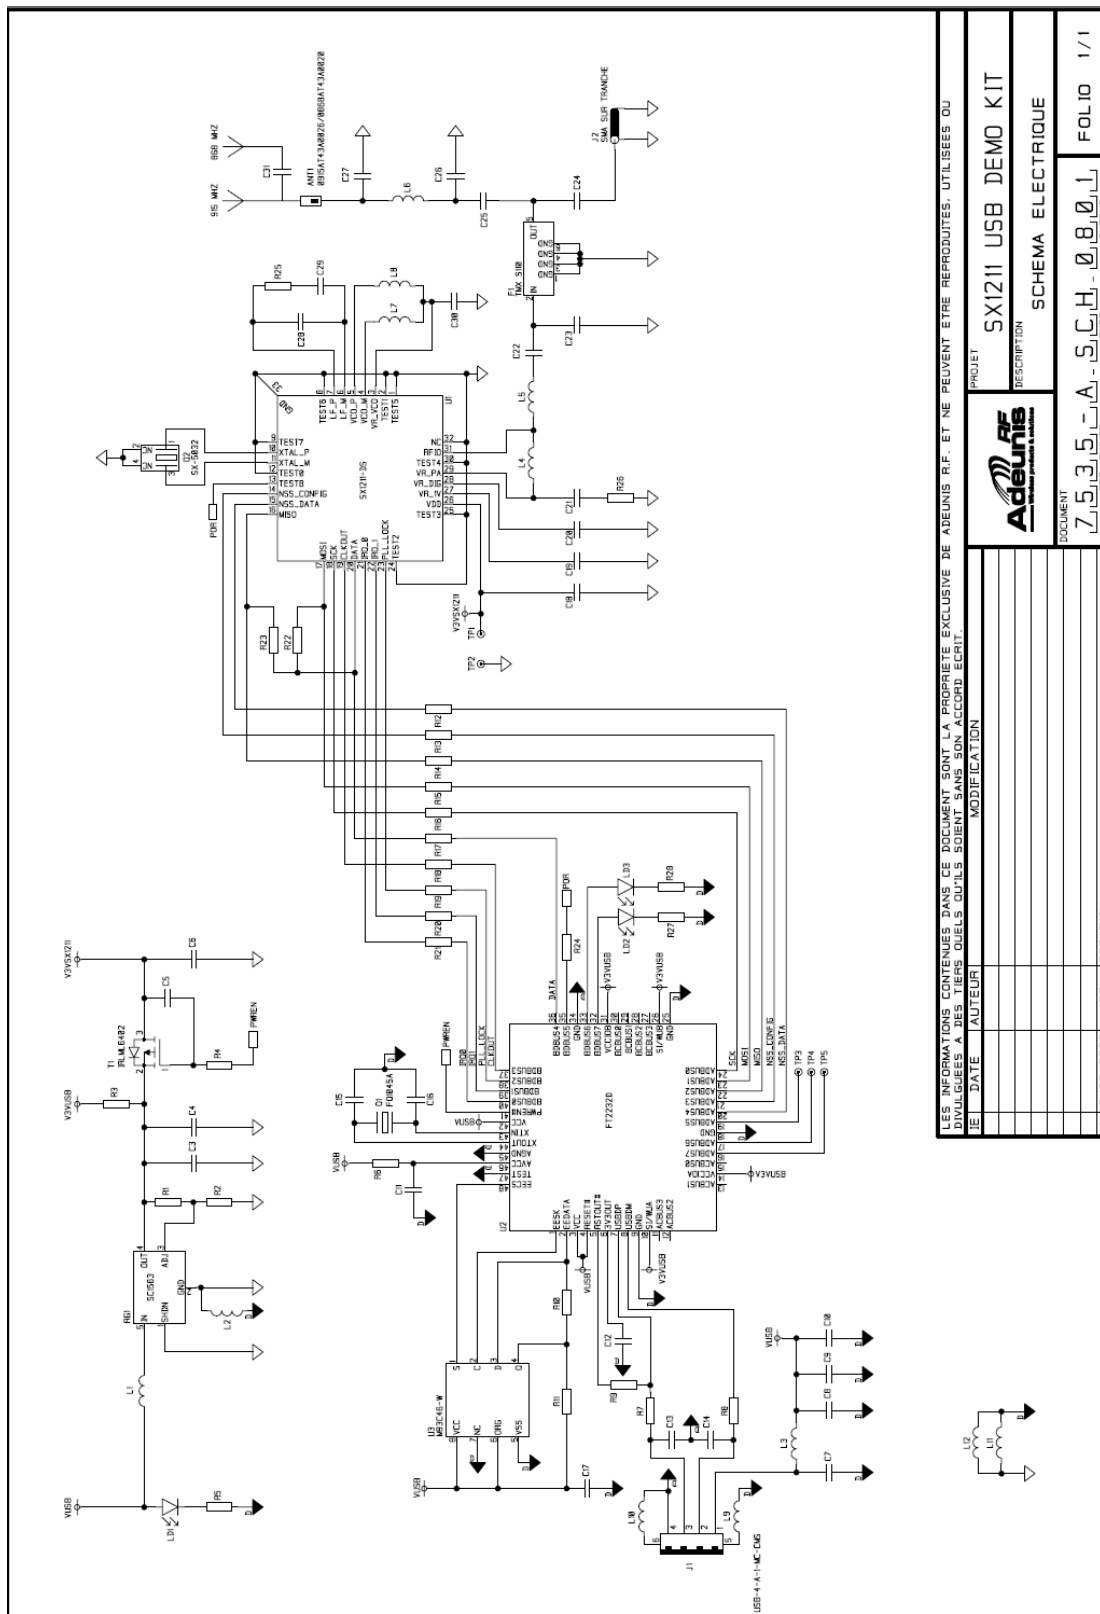

LES INFORMATIONS CONTENUES DANS CE DOCUMENT SONT LA PROPRIÉTÉ EXCLUSIVE DE ADEUNIS R.F. ET NE PEUVENT ÊTRE REPRODUITES, UTILISEES OU DIVULGUÉES À DES TIERS QUEL'S SOIENT SANS SON ACCORD ÉCRIT.	
RE	DATE
1	AUTEUR
2	MODIFICATION
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	
31	
32	
33	
34	
35	
36	
37	
38	
39	
40	
41	
42	
43	
44	
45	
46	
47	
48	
49	
50	
51	
52	
53	
54	
55	
56	
57	
58	
59	
60	
61	
62	
63	
64	
65	
66	
67	
68	
69	
70	
71	
72	
73	
74	
75	
76	
77	
78	
79	
80	
81	
82	
83	
84	
85	
86	
87	
88	
89	
90	
91	
92	
93	
94	
95	
96	
97	
98	
99	
100	
101	
102	
103	
104	
105	
106	
107	
108	
109	
110	
111	
112	
113	
114	
115	
116	
117	
118	
119	
120	
121	
122	
123	
124	
125	
126	
127	
128	
129	
130	
131	
132	
133	
134	
135	
136	
137	
138	
139	
140	
141	
142	
143	
144	
145	
146	
147	
148	
149	
150	
151	
152	
153	
154	
155	
156	
157	
158	
159	
160	
161	
162	
163	
164	
165	
166	
167	
168	
169	
170	
171	
172	
173	
174	
175	
176	
177	
178	
179	
180	
181	
182	
183	
184	
185	
186	
187	
188	
189	
190	
191	
192	
193	
194	
195	
196	
197	
198	
199	
200	
201	
202	
203	
204	
205	
206	
207	
208	
209	
210	
211	
212	
213	
214	
215	
216	
217	
218	
219	
220	
221	
222	
223	
224	
225	
226	
227	
228	
229	
230	
231	
232	
233	
234	
235	
236	
237	
238	
239	
240	
241	
242	
243	
244	
245	
246	
247	
248	
249	
250	
251	
252	
253	
254	
255	
256	
257	
258	
259	
260	
261	
262	
263	
264	
265	
266	
267	
268	
269	
270	
271	
272	
273	
274	
275	
276	
277	
278	
279	
280	
281	
282	
283	
284	
285	
286	
287	
288	
289	
290	
291	
292	
293	
294	
295	
296	
297	
298	
299	
300	
301	
302	
303	
304	
305	
306	
307	
308	
309	
310	
311	
312	
313	
314	
315	
316	
317	
318	
319	
320	
321	
322	
323	
324	
325	
326	
327	
328	
329	
330	
331	
332	
333	
334	
335	
336	
337	
338	
339	
340	
341	
342	
343	
344	
345	
346	
347	
348	
349	
350	
351	
352	
353	
354	
355	
356	
357	
358	
359	
360	
361	
362	
363	
364	
365	
366	
367	
368	
369	
370	
371	
372	
373	
374	
375	
376	
377	
378	
379	
380	
381	
382	
383	
384	
385	
386	
387	
388	
389	
390	
391	
392	
393	
394	
395	
396	
397	
398	
399	
400	
401	
402	
403	
404	
405	
406	
407	
408	
409	
410	
411	
412	
413	
414	
415	
416	
417	
418	
419	
420	
421	
422	
423	
424	
425	
426	
427	
428	
429	
430	
431	
432	
433	
434	
435	
436	
437	
438	
439	
440	
441	
442	
443	
444	
445	
446	
447	
448	
449	
450	
451	
452	
453	
454	
455	
456	
457	
458	
459	
460	
461	
462	
463	
464	
465	
466	
467	
468	
469	
470	
471	
472	
473	
474	
475	
476	
477	
478	
479	
480	
481	
482	
483	
484	
485	
486	
487	
488	
489	
490	
491	
492	
493	
494	
495	
496	
497	
498	
499	
500	
501	
502	
503	
504	
505	
506	
507	
508	
509	
510	
511	
512	
513	
514	
515	
516	
517	
518	
519	
520	
521	
522	
523	
524	
525	
526	
527	
528	
529	
530	
531	
532	
533	
534	
535	
536	
537	
538	
539	
540	
541	
542	
543	
544	
545	
546	
547	
548	
549	
550	
551	
552	
553	
554	
555	
556	
557	
558	
559	
560	
561	
562	
563	
564	
565	
566	
567	
568	
569	
570	
571	
572	
573	
574	
575	
576	
577	
578	
579	
580	
581	
582	
583	
584	
585	
586	
587	
588	
589	
590	
591	
592	
593	
594	
595	
596	
597	
598	
599	
600	
601	
602	
603	
604	
605	
606	
607	
608	
609	
610	
611	
612	
613	
614	
615	
616	
617	
618	
619	
620	
621	
622	
623	
624	
625	
626	
627	
628	
629	
630	
631	
632	
633	
634	
635	
636	
637	
638	
639	
640	
641	
642	
643	
644	
645	
646	
647	
648	
649	
650	
651	
652	
653	
654	
655	
656	
657	
658	
659	
660	
661	
662	
663	
664	
665	
666	
667	
668	
669	
670	
671	
672	
673	
674	
675	
676	
677	
678	
679	
680	
681	
682	
683	
684	
685	
686	
687	
688	
689	
690	
691	
692	
693	
694	
695	
696	
697	
698	
699	
700	
701	
702	
703	
704	
705	
706	
707	
708	
709	
710	
711	
712	
713	
714	
715	
716	
717	
718	
719	
720	
721	
722	
723	
724	
725	
726	
727	
728	
729	
730	
731	
732	
733	
734	
735	
736	
737	
738	
739	
740	
741	
742	
743	
744	
745	
746	
747	
748	
749	
750	
751	
752	
753	
754	
755	
756	
757	
758	
759	
760	
761	
762	
763	
764	
765	
766	
767	
768	
769	
770	
771	
772	
773	
774	
775	

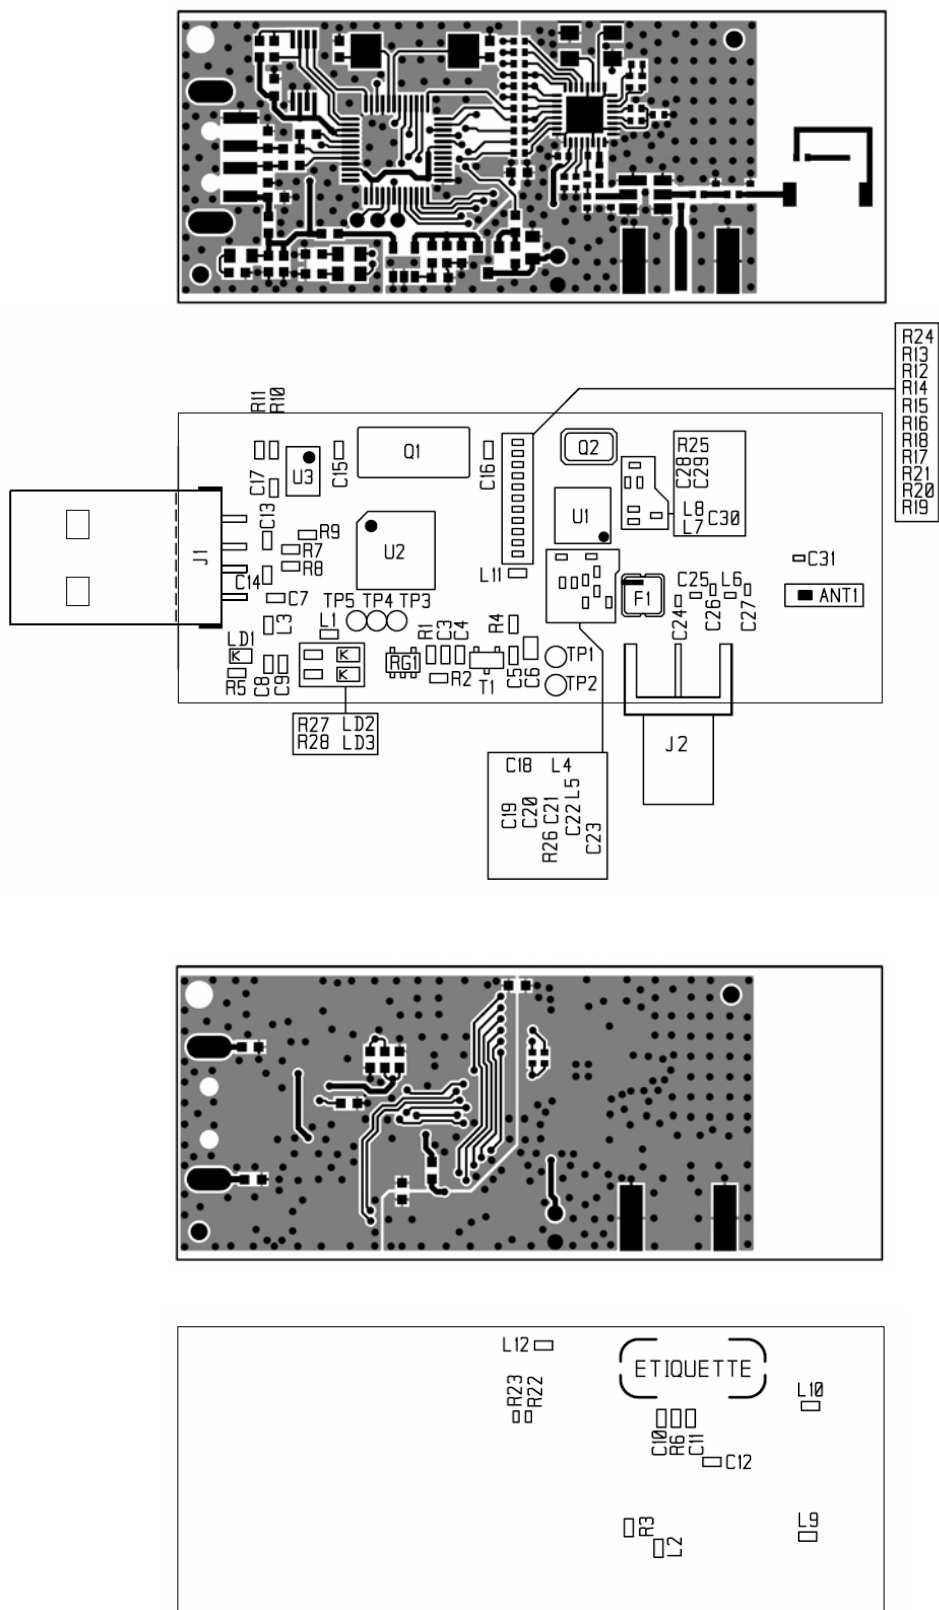

10 References

- [1] SX1230 Datasheet
- [2] SX1211 Datasheet

© Semtech 2008

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent or other industrial or intellectual property rights. Semtech assumes no responsibility or liability whatsoever for any failure or unexpected operation resulting from misuse, neglect improper installation, repair or improper handling or unusual physical or electrical stress including, but not limited to, exposure to parameters beyond the specified maximum ratings or operation outside the specified range.

SEMTECH PRODUCTS ARE NOT DESIGNED, INTENDED, AUTHORIZED OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS OR OTHER CRITICAL APPLICATIONS. INCLUSION OF SEMTECH PRODUCTS IN SUCH APPLICATIONS IS UNDERSTOOD TO BE UNDERTAKEN SOLELY AT THE CUSTOMER'S OWN RISK. Should a customer purchase or use Semtech products for any such unauthorized application, the customer shall indemnify and hold Semtech and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs damages and attorney fees which could arise.

Contact Information

Semtech Corporation
Advanced Communications and Sensing Products Division
200 Flynn Road, Camarillo, CA 93012
Phone: (805) 498-2111 Fax: (805) 498-3804