


* NOTE *


• Please read this notice carefully before starting.

To insert a new tape cartridge


· REMOVE THE STOPPER.

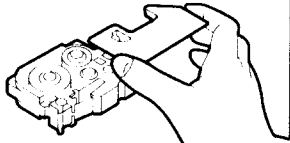

· USE YOUR FINGER TO TIGHTEN THE RIBBON.

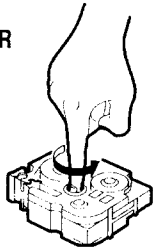

· INSTALL AND PRESS CODE+FEED.

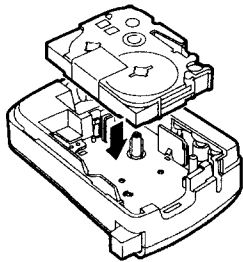


Cutting tape

· DO NOT PULL TAPE TO ADVANCE IT.




· TO CUT TAPE, USE THE BUILT-IN CUTTER LEVER. UNDER NO CIRCUMSTANCES ATTEMPT TO CUT THE TAPE WHILE PRINTING OR FEEDING.

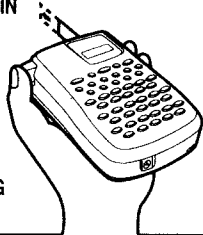

AC adaptor connection

· ONLY USE THE AC ADAPTOR DESIGNED FOR THIS MACHINE.

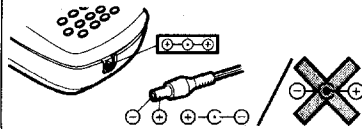


P-touch

TZ TAPE

200

USER'S GUIDE

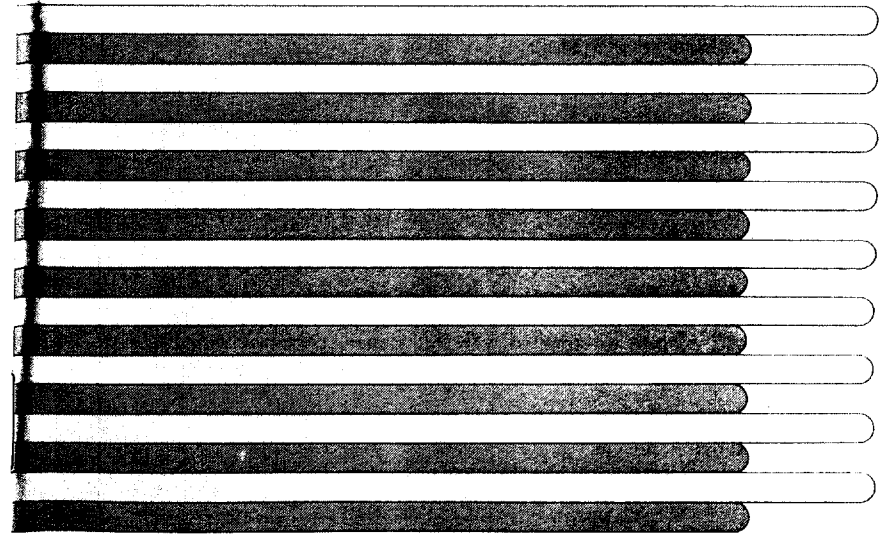

- Read this User's Guide before you start using your P-Touch.
- Keep this User's Guide in a handy place for future reference.

INTRODUCTION

Your new PT-200 will help you design and print labels for any application. Since it is extremely versatile, you will be able to create characters of many sizes and styles. In addition, by using the variety of tape cartridges available, you can print labels with different widths and exciting colours.

You no longer have to worry about urgent tasks that require professional printing. In the office, the factory, the lab and the home, the quality and performance of the PT-200 makes it a very versatile machine.

Although this machine is easy to use, we suggest that you read this manual carefully before starting and keep the manual in a handy place for future reference.

We are sure you will enjoy making custom labels with your PT-200.



Declaration of Conformity	
We	Brother International Europe Ltd. Brother House 1, Tame Street Audenshaw Manchester M34 5JE U.K.
declare that the Labelling System PT-200 conforms with the following normative documents:	
EMC:	EN 55022 1987 Class B EN 50082-1 1992
and follows the provisions of the Electromagnetic Compatibility Directive 89/336/EEC (as amended by 91/263/EEC and 92/31/EEC). The AC adapter, as supplied with this system, conforms with EN 60950 and follows the provisions of the Low Voltage Directive 73/23/EEC.	
Issued by:	BIE Ltd. European Development and Technical Services Division

Use only the adapter designed exclusively for this machine. See GENERAL PRECAUTIONS on page 4.


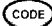 

CONTENTS

OVERVIEW	2
GENERAL PRECAUTIONS	4
BEFORE YOU START	5
TAPE CASSETTES	5
POWER SUPPLY	6
ENTERING A MESSAGE	7
STARTING	7
KEY OPERATIONS	7
DISPLAY	8
CURSOR MOVEMENT	8
DELETE KEY	8
SPACE/SET KEY	9
COMPOSITE CHARACTERS	9
ACCENTED CHARACTERS	10
SYMBOLS	11
CHANGING THE FORMAT	12
SIZE	12
STYLE	13
UNDERLINE/FRAME	14
LABEL LENGTH	15
DOUBLE-LINE PRINTING	16
PRINTING A LABEL	17
TAPE FEED	17
MIRROR PRINTING	18
PRINTING & CUTTING	18
REPEAT PRINTING	19
NUMBERING	20
STORING MESSAGES	21
PHRASE MEMORY	21
MEMORY SIZE	21
STORING THE MESSAGE	21
RECALLING & DELETING FROM PHRASE MEMORY	22
MESSAGE LIST	23
TROUBLESHOOTING	24
SPECIFICATIONS	25
ACCESSORIES	26

OVERVIEW

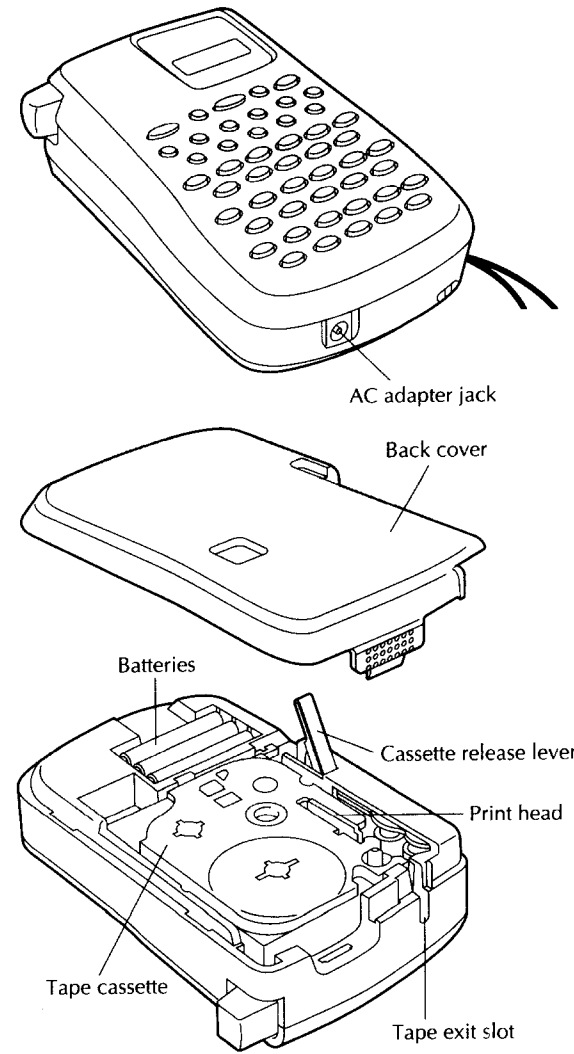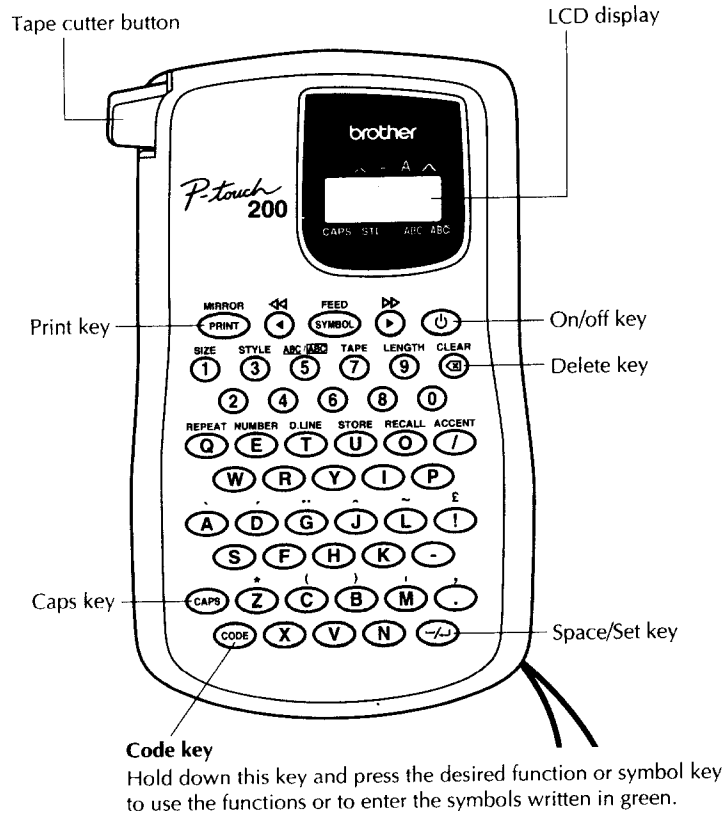

GENERAL PRECAUTIONS

- Use only Brother TZ tapes with this machine. Do not use tapes that do not have the  mark.
- Three different tape widths are available: 6 mm, 9 mm and 12 mm.
- Do not pull the tape. This may damage the tape cassettes.
- Do not attempt to cut the tape while printing or feeding since this will damage the tape.
- Do not clean the machine with alcohol or other organic solvents. Use only a soft, dry cloth.
- Remove the batteries and/or disconnect the AC adapter if you do not intend to use your machine for an extended period of time.
(Note: When power is disconnected for more than three minutes, any messages in the working area or the Phrase Memory will be lost.)
- Do not put any foreign objects onto or into the machine.
- Do not expose the machine to high temperatures or high humidity. Never leave it on the dashboard or in the back of your car.
- Do not use the machine in dusty places. Keep it out of both direct sunlight and rain.
- Do not leave any rubber or vinyl on the machine for an extended period of time. Doing so may cause staining.
- After inserting a new tape cassette, advance the tape by holding down  and pressing  once.
- Do not touch the print head mechanism. If the head is touched, clean it immediately with a soft wipe (e.g. a cotton swab) to avoid permanent damage.
- To avoid injuries, do not touch the cutter's edge.
- Use only the AC adapter designed exclusively for this machine. Use of any other adapter will void the warranty.
Please contact your Brother dealer for details.



BEFORE YOU START



A TZ tape cassette is supplied with this unit.
The Brother TZ tapes used in this machine are available in a variety of colours and three tape widths (6 mm, 9 mm and 12 mm).

To change the tape cassette:

- (1) Press in on the rough area at the top end of the machine and pull off the back cover. At the same time, the cassette release lever on the back of the machine is lifted.
- (2) If there is a tape cassette already in the compartment, remove it by pulling it straight up.
- (3) Remove the stopper from the new tape cassette and if the tape inside the cassette is loose, use your finger to wind the toothed wheel in the direction of the arrow on the tape cassette.
- (4) Insert the tape cassette firmly into the compartment.

Note: When inserting the tape cassette, make sure that the inner ribbon does not get caught on the corner of the metal guide.

- (5) Replace the back cover by inserting the tab on the bottom end of the cover into the slot on the bottom end of the machine, then securely fitting it into place. Lock the back cover by pushing the release lever back into place.
- (6) Feed the tape by holding down  and pressing  once, then press in on the tape cutter button to cut the tape.

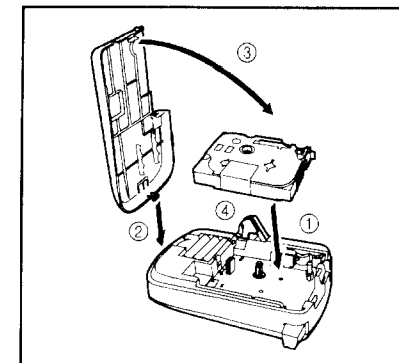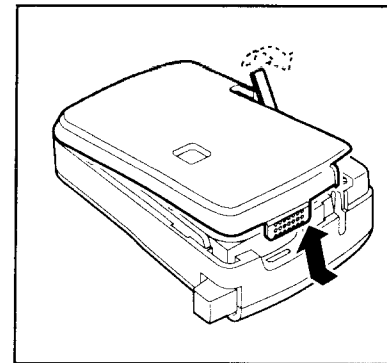

POWER SUPPLY


Since this machine is compact and portable, it can be used anywhere by installing six AAA **alkaline** batteries. When changing the batteries, always replace all six at the same time.

To insert the batteries:

- (1) Press in on the rough area at the top end of the machine and pull off the back cover. At the same time, the cassette release lever on the back of the machine is lifted.
- (2) Insert the batteries in the direction shown by the illustration on the bottom of the battery compartment. The positive end of the three batteries in the bottom row point toward the right, while the positive end of the top three point in the opposite direction.

Note: When replacing the batteries, insert the new ones within three minutes of removing the old ones, otherwise any message in the working area or Phrase Memory will be lost unless the machine is plugged into an outlet with the AC adapter.

- (3) Replace the back cover by inserting the tab on the bottom end of the cover into the slot on the bottom end of the machine, then securely fitting it into place. Lock the back cover by pushing the release lever back into place.

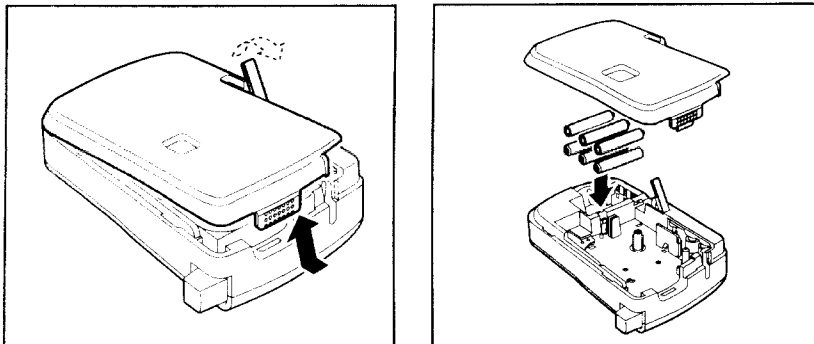

The AC adapter allows you to use this machine wherever an electrical outlet is available.

To connect the AC adapter:

- (1) Insert the small plug on the adapter into the adapter jack on the bottom end of the machine.
- (2) Insert the large plug into the nearest standard electrical outlet.

ENTERING A MESSAGE

To turn on the machine:


Press .

The machine's internal memory retains the last message created and displays it when you turn on the machine. This feature allows you to stop work on a message, turn off the machine and return to it later without having to re-enter the message.



The machine has an automatic power-off feature. If no key is pressed within five minutes while the machine is on, it will automatically turn off. The message will be retained in memory until the machine is turned on again.

Most characters can be entered by simply pressing their keys. However, to use special functions or to enter uppercase letters, composite characters and some common symbols, two special keys are necessary.

CODE KEY


By holding down  and pressing a key with a function, symbol or accent written in green above it, you can use the corresponding function or add the corresponding character to your message.

CAPS KEY

By pressing  to enter CAPS mode, you can add uppercase letters to your message by simply pressing the character keys. When this mode is on, the CAPS indicator in the bottom left-hand corner of the display comes on. To exit CAPS mode, press  to turn off the CAPS indicator.

DISPLAY

This machine's LCD display is 4 characters wide. Actually though, you can create messages up to 55 characters in length. The 4-character display is like a window which moves across your message.

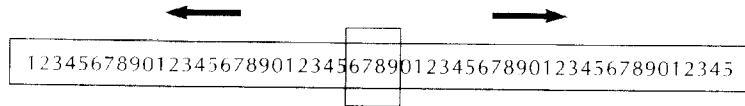

CURSOR MOVEMENT

You can review and edit different parts of your message by moving the cursor backward and forward.

To move the cursor through your message:

Press and to move the cursor one space at a time.

- Note:**
- Hold down and press to return the cursor to the beginning of the message.
 - Hold down and press to advance the cursor to the end of the message.

DELETE KEY

This key can be used to remove characters from your message, delete the entire message or cancel some settings.

To delete a character:

Press to delete the character to the left of the one above the cursor.

To delete the current message:

Hold down and press .

SPACE/SET KEY

As on a typewriter, press to add a blank space to your message. This key can also be used to select some settings, such as an accented character, a symbol, the label length or a Phrase Memory area.

Note: and have different functions. Press to move the cursor forward through the message without adding blank spaces.

COMPOSITE CHARACTERS

You can create composite characters, which consist of a letter and an accent. The accents available are $\grave{}$, $\acute{}$, $\tilde{}$, and $\`{}$.

Diacritical Mark	Letters which can be combined	Diacritical Mark	Letters which can be combined
$\grave{}$	a e i o u y A E I O U	$\acute{}$	a e i o u A E I O U
$\tilde{}$	a e i o u A E I O U	$\`{}$	a o n A O N
$\`{}$	a e i o u A E I O U		

To create a composite character:

- (1) Hold down and press the key to enter the accent you want.
- (2) Press the key of the letter you wish to join with the accent. The letter and accent will be displayed together in your message.

Note: • If the letter cannot be properly combined with the accent, the letter will take the place of the accent.

- If you press or after inputting the accent, the error message "ERR" appears for a short time, then the message is displayed.
- More accented characters are available by holding down and pressing . (Refer to ACCENTED CHARACTERS.)

ACCENTED CHARACTERS

You can choose from a list to add other accented characters to your message.

Letter	Accented characters	Letter	Accented characters
A	Á Â Ã Ä Å Æ	N	Ñ
a	á â ã ä å æ	n	ñ
C	Ç	O	Ö Ó Ò Ó Ô Ø Æ
c	ç	o	ö ó ò ó ô ø œ
E	É Ê Ë Ì	U	Ü Ú Û Ü
e	é ê ë ì	u	ü ú û ü
I	Í Î Ï	y	ÿ
i	í î ï		

To enter an accented character:

- (1) Press **Ⓢ** if you want the accented character to be an uppercase letter.
- (2) Hold down **Ⓜ** and press **Ⓛ**. The message "A-Y?" is displayed.
- (3) Press the key corresponding to the letter in the desired accented character.
- (4) Press **⏪** and **⏩** to move the cursor under the accented character that you wish to use.
- (5) Press **⏵** to add the selected character to your message.

In addition to the letters, symbols, and numerals on the key tops, there are 50 symbols available in Symbol mode. These symbols are divided into 13 groups, corresponding to the letters A through M.

Group No.	SYMBOLS	Group No.	SYMBOLS
A	+ ± + ×	H	Ⓜ Ⓛ μ √
B	= \]	I	← → ↑ ↓
C	< > « »	J	\$ £ DM Fr
D	· ? ¿ ¡	K	ij ° % ★
E	: ; " &	L	Ⓢ Ⓛ Ⓜ Ⓨ
F	# \$ @ ß	M	Ⓛ Ⓜ
G	° ° Đ ð		

To input a symbol from Symbol mode:

- (1) Press **Ⓛ** to enter Symbol mode. The message "A-M?" is displayed.
- (2) Press the key of the letter whose group contains the symbol you wish to use. The symbols in that letter's group will be displayed.
- (3) Press **⏪** and **⏩** to move the cursor under the symbol you want.
- (4) Press **⏵** to display your message with the selected character added to it.
- (5) Repeat steps (1) through (4) if you wish to add another symbol to your message.

CHANGING THE FORMAT

SIZE

There are five different character sizes that you can select for your message. The indicator at the top of the display shows the currently selected size.

^ (1) Standard size

J.SMITH

^ (4) Double width & double height

J.SMITH

^ (W2) Double width

J.SMITH

^ (8) 4 × Width & double height

J.SMITH

 
^ (12) Double height

J.SMITH

To choose a character size:

(1) Hold down **CODE** and press **SIZE 1** to change the character size.

(2) Continue holding down **CODE** and pressing **SIZE 1** until your desired character size is indicated. The sizes change in the following order:

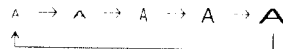

- Note:**
- Since the size of the characters that can be printed depends on the width of the installed tape, only characters of size ^ (1) and ^ (W2) can be printed on 6-mm-wide tape.
 - Since the size of the characters that can be printed using the VERT print style depends on the width of the installed tape, only characters of size ^ (1) and ^ (12) can be printed using the vertical style on 6-mm-wide tape.
 - If the set character size cannot be used with the installed tape when **MIRROR PRINT** is pressed, the error message "ERR" will be displayed and the label will not be printed.

STYLE

You can also use one of nine different print styles for the characters in your label.

NORM (normal)

J.SMITH

IT+O (italic + outline)

J.SMITH

OUTL (outline)

J.SMITH

IT+B (italic + bold)

J.SMITH

BOLD

J.SMITH

IT+S (italic + shadow)

J.SMITH

SHAD (shadow)

J.SMITH

VERT (vertical)

J . S M I T H

ITAL (italic)

J.SMITH

To choose a print style:


(1) Hold down **CODE** and press **STYLE 3** once. The current print style is displayed.

(2) Continue holding down **CODE** and pressing **STYLE 3** until your desired print style appears. If you select a style other than normal, the STI indicator on the bottom of the display comes on.

Note: Only normal style characters can be printed vertically.

UNDERLINE/FRAME

You can add an underline or frame to your message when you wish to emphasize the text.

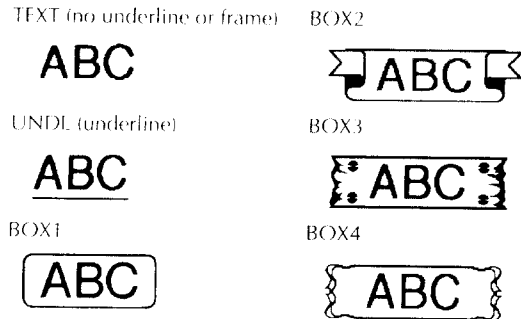

To choose an underline/frame setting:

- (1) Hold down **CODE** and press **5** ^{ABC/ABC} once. The current underline/frame setting appears on the display.
- (2) Continue holding down **CODE** and pressing **5** ^{ABC/ABC} until your desired underline/frame appears. If you select underlining or a frame, the **ABC/ABC** indicator on the bottom of the display comes on.

- Note:**
- Underlining and a frame cannot be set simultaneously.
 - The underline or frame will not be printed when the VERT print style is used.

Although the length of the printed label automatically adjusts to fit the length of the entered text, there may be times when you will want to make a label with a specific length. The Label length mode allows you to set the label to a length between 50 and 300 mm.

To set the label length:

- (1) Hold down **CODE** and press **9** ^{LENGTH} once. The current label length setting appears on the display. If "L--" is displayed, the Label length mode is off. When the Label length mode is on, "L" and the current setting (in millimetres) are shown.
- (2) Continue holding down **CODE** and pressing **9** ^{LENGTH} until the Label length mode is turned on and the current setting is displayed.
- (3) Use the number keys or press **←** and **→** to enter the label length that you want to use.
- (4) Press **L** to display the length of the currently entered text and check that it is less than the set length.
- (5) Press **←/→** to set the label length.

- Note:**
- If you set a label length that is shorter than the entered text and press **MIRROR PRINT**, the error message "ERR" will be displayed and the label will not be printed.
 - The label length function turns off when the machine is turned off. If you want to set the label length again after the power has been turned off, you must turn on the label length function. (At this time, the previous setting is displayed.)

DOUBLE-LINE PRINTING

This option enables two lines of text to be printed, one above the other. Double-line printing can only be used if 9- or 12-mm-wide tape is installed.

To create a two-line message.

(1) Enter the text for the upper line.

(2) Hold down **CODE** and press **D.LINE T**. The lower line marker (▼) will appear on the display.

(3) Type the text for the lower line.

- Note:**
- To change back to single-line printing, use **CLEAR X** to delete ▼.
 - The text in a two-line message is always printed with the A (1) character size and normal print style, regardless of the size and style settings.

PRINTING A LABEL

TAPE FEED

This function can be used to leave equal margins of 8 mm (#), 12 mm (##) and 24 mm (###) on the left and right sides of the label. In addition, one label with multiple format styles can be printed using the setting (-) which does not feed the tape after printing the label.

To choose a tape feed:

(1) Hold down **CODE** and press **TAPE 7** once. The current tape feed setting appears on the display.

(2) Continue holding down **CODE** and pressing **TAPE 7** until your desired setting appears.


- Note:**
- After printing a label using the "...", "#", or "##" setting, hold down **CODE** and press **FEED SYMBOL** once to feed the tape before cutting it. If the tape is not fed before being cut, some of the printed characters may be cut off. (See the illustration below.)



- After pressing the tape cutter button to cut off a label that was printed using the "#", "##", or "###" settings, center the text within the label by cutting along the printed dots.

MIRROR PRINTING

This function prints your label so that the text is legible from the adhesive side of the tape. If mirror-printed labels are attached to glass, such as a showroom, or some other transparent material, they can be read correctly from the opposite side. For this application, transparent tape must be used.

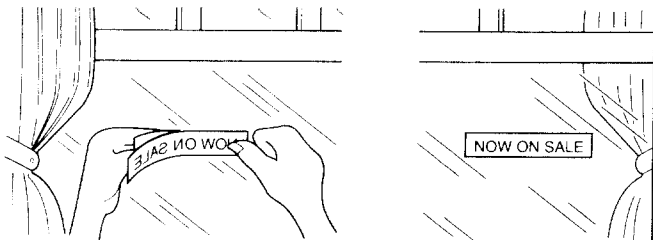

To use the mirror printing function:

- Hold down **CODE** and press **MIRROR PRINT** once. The current mirror printing setting appears on the display. When "M: X" is displayed, the text is printed normally. If "M: O" appears, the mirror printing function is on.
- Continue holding down **CODE** and pressing **MIRROR PRINT** until your desired setting appears.

Note: The mirror printing function turns off when the machine is turned off. If you want to use mirror printing again after the power has been turned off, you must turn on the mirror printing function.

PRINTING & CUTTING

After you have changed the format of the text, you are ready to print the label.

To print a label:

Press **MIRROR PRINT**. The message "PRNT" is displayed while the message is being printed. The label comes out of the tape exit slot on the top end of the machine.

To cut the tape:

- If the tape margins are set to "-", "#", or "##", hold down **CODE** and press **FEED SYMBOL**. (Refer to TAPE FEED.) The message "FEED" is displayed while the tape is fed.
- Push in the tape cutter button on the left side of the machine.

Note:

- Pulling on the tape may damage the tape cassette.
- Pushing in the tape cutter button too far may break it.
- In order to prevent damaging the tape, do not attempt to cut it while the messages "PRNT" or "FEED" are displayed.

This function allows you to repeatedly print the same label up to nine times.

To use the repeat printing function:

It is recommended to set the tape margins to "#", or "##". (Refer to TAPE FEED.)

- Hold down **CODE** and press **REPEAT Q**. The message "1-9?" is displayed.
- Press the number key (1-9) corresponding to the number of labels you want.

For example, if you want to print nine labels, press **LENGTH 9**.

- Press **MIRROR PRINT** and the set number of labels will be printed. If the margins are set to "-", "#", or "##", hold down **CODE** and press **FEED SYMBOL** before cutting the tape. (Refer to TAPE FEED.)
- Push in the tape cutter button to cut the tape, then cut along the printed dots to separate the labels.

Note:

- Before printing, you can press **CLEAR CE** to display the previous screen.
- In order to prevent damaging the tape, do not attempt to cut it while the messages "PRNT" or "FEED" are displayed.
- Before starting a repeat print, check that there is sufficient tape in the cassette. Press **STOP** immediately if the tape runs out (striped tape appears) before all the printing is finished.

NUMBERING

This function can be used to print a set number of labels in which the designated number automatically increases by 1 after the label is printed, for example when printing labels containing a date ("JULY 4, 1962", "JULY 5, 1962", and "JULY 6, 1962").

To use the numbering function when printing:

It is recommended to set the tape margins to "-" or "##". (Refer to TAPE FEED.)

- (1) Position the cursor beneath the number in the text to be increased, then hold down **CODE** and press **E**. The message "1-9?" is displayed.
- (2) Press the number key (1-9) corresponding to the last number that is to be printed. For the example explained above, press **6**.
- (3) Press **PRINT** and the labels will be printed. Printing will be repeated, with the specified number increased by 1, until the entered number is reached. If the margins are set to "-", "#", or "##", hold down **CODE** and press **FEED SYMBOL** before cutting the tape. (Refer to TAPE FEED.)
- (4) Push in the tape cutter button to cut the tape, then cut along the printed dots to separate the labels.

- Note:**
- Before printing, you can press **CLEAR** to display the previous screen.
 - If you enter a number that is lower than the one originally entered in the text and press **PRINT**, the error message "ERR" will be displayed and the labels will not be printed.
 - Numbers only increase by one.
 - If the battery becomes weak while printing using the numbering function, the machine will stop printing.
 - In order to prevent damaging the tape, do not attempt to cut it while the messages "PRNT" or "FEED" are displayed.

STORING MESSAGES

PHRASE MEMORY

You can use the Phrase Memory to store your most frequently used messages. Text stored in the Phrase Memory will not be deleted by the usual message deletion operation (holding down **CODE** and pressing **CLEAR**).

You can easily recall your message from this Phrase Memory any time you want to work with it.

MEMORY SIZE

In the Phrase Memory you can store up to a total of 300 characters. These 300 characters can be divided into as many as nine areas. The maximum capacity for any single area is 55 characters.

Note: When replacing the batteries, insert the new ones within three minutes of removing the old ones, otherwise any message in the working area or Phrase Memory will be lost unless the machine is plugged into an outlet with the AC adapter.

STORING THE MESSAGE

To store the currently displayed message in the Phrase Memory:

- (1) Hold down **CODE** and press **STORE U**. The message "1-9?" is displayed.
- (2) Press the number key (1-9) corresponding to the Phrase Memory area that you wish to select. Your message is stored in the chosen area and the message previously shown in the working area reappears on the display.

If the area you select is already being used, the error message "ERR" will briefly appear, then you will again be asked to choose an area. In this case, select a different area between 1 and 9.

If messages are already stored in all nine areas, you must delete one of them before you can store your current message.

Also, when 300 characters are already stored in the Phrase Memory and you try to store more, the message "FULL" will appear on the display. You must delete one of the memory areas before you can store your current message.

RECALLING & DELETING FROM PHRASE MEMORY

To recall or delete a message stored in one of the nine Phrase Memory areas:

- (1) Hold down **CODE** and press **REGALL** **O**. The message "1-9?" is displayed.
- (2) Press the number key (1-9) corresponding to the Phrase Memory area containing the message that you want to recall or delete. The number and the beginning of the selected message appear on the display. If you selected the wrong number, you can now press a different number key (1-9) to display the correct message.
- (3) Recalling: Press **←/→** to recall the message selected from the Phrase Memory and display it in the working area for use.

Deleting: Hold down **CODE** and press **CLEAR** **⊗** to delete the selected message from the Phrase Memory.

- Note:**
- The character size, print style and underline/box that were saved with the text are also recalled.
 - When a message is recalled from the Phrase Memory, any message currently shown in the display is cleared.

MESSAGE LIST

ERR	An error occurred.
BATT	The batteries are weak.
BATI	The batteries are empty.
FULL	The working area is full (max.: 55 characters) or the Phrase Memory is full (see STORING THE MESSAGE).
A-M?	See SYMBOLS .
A-Y?	See ACCENTED CHARACTERS .
NORM	See STYLE .
OUTL	
BOLD	
HAD	
ITAL	
IT+O	
IT+B	
IT+S	See UNDERLINE/FRAME .
VERT	
TEXT	
UNDL	
BOX1	
BOX2	See TAPE FEED .
BOX3	
BOX4	
-	
#	See TAPE FEED .
##	
###	
L---	No label length is set.
L***	See LABEL LENGTH .
>050	The set label length is too short.
<300	The set label length is too long.
M: O	See MIRROR PRINTING .
M: X	
PRNT	The label is being printed.
FEED	The tape is being fed.
1 - 9?	See REPEAT PRINTING , NUMBERING , STORING THE MESSAGE and RECALLING & DELETING FROM PHRASE MEMORY .

TROUBLESHOOTING

Problem	What To Do
1. The display stays blank after you have turned on the machine.	<ul style="list-style-type: none"> ● Check that the batteries are correctly installed. ● Check the batteries. Replace them if they are weak. ● Check that the adapter is working properly.
2. The machine does not print, or the printed characters are blurred.	<ul style="list-style-type: none"> ● Check that the tape cassette has been installed properly. ● Check the tape cassette. Replace it if it is empty. ● Check that the character size is appropriate for the width of the tape that is used.
3. The printed characters are not formed properly.	<ul style="list-style-type: none"> ● Check the batteries. Replace them if they are weak.
4. Striped tape appears.	<ul style="list-style-type: none"> ● You have reached the end of the tape. Replace the tape cassette.
5. The memory has cleared on its own.	<ul style="list-style-type: none"> ● The batteries may be weak. Replace them.
6. A blank horizontal line appears through the printed label.	<ul style="list-style-type: none"> ● There may be some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe the print head (see page 3) with an up-and-down motion. ● If dust still remains, dip the cotton swab in isopropyl (rubbing) alcohol and gently wipe the print head again.

SPECIFICATIONS

Input device:	49 keys (40 character keys and 9 function keys)
Print speed:	10 mm/sec.
Character size:	Standard size (1) Double width (W2) Double height (H2) Double width & double height (4) 4 × Width & double height (8)
Internal character:	Font: HELSINKI
Print tape:	Pressure-sensitive adhesive-based (TZ tape only) 12 mm (W) × 8 m (L) 9 mm (W) × 8 m (L) 6 mm (W) × 8 m (L)
LCD:	7 × 5 dots 1 line × 4 columns
Power supply:	Six AAA size alkaline batteries (SUM4/LR03) or optional AC adapter (7V, 1.2A) The power automatically turns off if no key is pressed within five minutes.
Dimensions:	99 mm (W) × 164 mm (D) × 48.5 mm (H)
Weight:	0.40 kg (without batteries and tape cassette)
Buffer memory size:	55 characters
Phrase memory size:	300 characters maximum, 9 storage areas available

ACCESSORIES

- **Supplies**

Obtain tape cassettes and AC adapters from your nearest authorized dealer. Brother cannot be held responsible for trouble caused by the use of unauthorized supplies.

Use only Brother TZ tapes with this machine. Do not use tapes that do not have the **TZ** mark.

Stock No.	Description
12 mm laminated tapes	
TZ-131	Black characters on clear adhesive
TZ-132	Red characters on clear adhesive
TZ-133	Blue characters on clear adhesive
TZ-231	Black characters on white adhesive
TZ-232	Red characters on white adhesive
TZ-233	Blue characters on white adhesive
TZ-334	Gold characters on black adhesive
TZ-335	White characters on black adhesive
TZ-431	Black characters on red adhesive
TZ-435	White characters on red adhesive
TZ-531	Black characters on blue adhesive
TZ-535	White characters on blue adhesive
TZ-631	Black characters on yellow adhesive
TZ-635	White characters on orange adhesive
TZ-731	Black characters on green adhesive
TZ-735	White characters on green adhesive
TZ-B31	Black characters on fluorescent orange adhesive
TZ-C31	Black characters on fluorescent yellow adhesive
TZ-D31	Black characters on fluorescent green adhesive
TZ-M31	Black characters on clear (mat) adhesive

Stock No.	Description
9 mm laminated tapes	
TZ-121	Black characters on clear adhesive
TZ-122	Red characters on clear adhesive
TZ-123	Blue characters on clear adhesive
TZ-221	Black characters on white adhesive
TZ-222	Red characters on white adhesive
TZ-223	Blue characters on white adhesive
TZ-324	Gold characters on black adhesive
TZ-325	White characters on black adhesive
TZ-421	Black characters on red adhesive
TZ-521	Black characters on blue adhesive
TZ-621	Black characters on yellow adhesive
TZ-721	Black characters on green adhesive
6 mm laminated tapes	
TZ-111	Black characters on clear adhesive
TZ-211	Black characters on white adhesive
TZ-315	White characters on black adhesive
TZ-611	Black characters on yellow adhesive
12 mm non-laminated tapes	
TZ-N231	Black characters on white adhesive
TZ-N232	Red characters on white adhesive
TZ-N233	Blue characters on white adhesive
TZ-N531	Black characters on blue adhesive
TZ-N631	Black characters on yellow adhesive
TZ-N731	Black characters on green adhesive
TZ-NF31	Black characters on purple adhesive
9 mm non-laminated tapes	
TZ-N221	Black characters on white adhesive
6 mm non-laminated tapes	
TZ-N211	Black characters on white adhesive