



VW3 A31101

Separate parts

The Lexium 05 servo drive can be connected to a remote display terminal. The remote display terminal can be mounted on the door of an enclosure with IP 65 protection on the front panel.

The terminal provides access to the same functions as the integrated display and keypad on the servo drive. It can be used to:

- Configure, adjust and control the servo drive remotely
- Provide a remote display

Description	Use	Reference	Weight kg
Remote display terminal	For all Lexium 05. Kit comprising: <ul style="list-style-type: none"> ■ Display terminal, 5 m cable equipped with 2 connectors ■ Seal and screws for IP 65 mounting on an enclosure door 	VW3 A31101	0.380
Plates for mounting on └┘ rail width 35 mm	For LXM 05●D10F1/M2/M3X	VW3 A11851	0.200
	For LXM 05●D17F1/M2/M3X and LXM 05●D14N4	VW3 A31852	0.220

Connectors

Description		Reference	Weight kg
Molex connectors (order in multiples of 5)	10-way female connectors for CN5	VW3 M8 212	–
	12-way female connectors for CN2	VW3 M8 213	–

Documentation

Description		Reference	Weight kg
Simplified Lexium 05 user's manual and CD-ROM, containing: <ul style="list-style-type: none"> ■ A variables user's manual ■ A Modbus and CANopen user's manual ■ A Profibus DP user's manual 	Supplied with the Lexium 05 servo drive	–	–

Note: The manuals and quick reference guides for servo drives and servo motors are available on the website: www.telemecanique.com.