

Datasheet

RS Pro Battery Tester For Various Battery

RS Stock No: **197-0326**



Product Details

RS Pro dual purpose battery tester is used to check battery charge, when connected terminal to terminal with the integral load resistors connected. This gauge will also show the setting of the voltage regulator and the output of the generator, when connected terminal to terminal with the lead resistors disconnected. The tester shows voltage drop in the battery, when starting the engine. It provides clear and separate scales for 6 and 12 V ranges. The indicator lamp on the tester indicates the usage of load resistor.

Features and Benefits

- Connect terminal to terminal with the integral load resistors connected to check battery charge
- Connect terminal to terminal with the lead resistors disconnected, gauge will show the setting of the voltage regulator and the output of the generator
- Shows the voltage drop of the battery when starting the engine
- Clear and separate scales for 6 and 12 V ranges
- Indicator lamp to show when the load resistors are in use
- Encased load resistors to remove the risk of burn injury

