






Pushbuttons and Selector Switches	Class	Enclosure Type	Controller Size or (Lighting Rating)	Type	Catalog Number	List Price \$
 <p>49SBPB5</p>	14, 40, LEN, CLM	Open	00-4	Start, Stop Push Buttons	49SAPB5	
				Hand-Off-Auto Selector Switch	49SASB1	
				Off-On Selector Switch	49SASB4	
		1	00-4 or (20-100A)	Start, Stop Push Buttons	49SBPB5	
				Hand-Off-Auto Selector Switch	49SBSB1	
				Off-On Selector Switch	49SBSB4	
			5-6 or (200-400A)	Start, Stop Push Buttons	49SAP05	
				Hand-Off-Auto Selector Switch	49SAS01	
				Keyed Hand-Off-Auto (key removable in all positions)	49SAS09	
		12, 4/4X	00-6 or (20-400A)	Off-On Selector Switch	49SAS04	
				Start, Stop Push Buttons	49SAP05	
				Hand-Off-Auto Selector Switch	49SAS01	
00-6 or (20-400A)	Keyed Hand-Off-Auto (key removable in all positions)		49SAS09			
	Off-On Selector Switch		49SAS04			
	Off-On Selector Switch		49SAS04			
 <p>49SBSB1</p>	22, 43	Open	00-4	Forward-Off-Reverse Selector Switch	49SASB2	
				Forward-Off-Reverse Selector Switch	49SBSB2	
		1	5-6	Forward, Reverse, Stop Push Buttons	49SAP02	
				Forward-Off-Reverse Selector Switch	49SAS02	
		12, 4/4X	0-6	Forward, Reverse, Stop Push Buttons	49SAP02	
				Forward-Off-Reverse Selector Switch	49SAS02	
 <p>49SAP05</p>	30 (2S1W)	Open	0-4	High-Off-Low Selector Switch	49SASB3	
				High-Off-Low Selector Switch	49SBSB3	
				High, Low, Stop Push Buttons	49SAP03	
		1	0-1 3/4	High-Off-Low Selector Switch	49SAS03	
				High, Low, Stop Push Buttons	49SAP03	
				High-Off-Low Selector Switch	49SAS03	
12, 4/4X	0-4	High, Low, Stop Push Buttons	49SAP03			
		High-Off-Low Selector Switch	49SAS03			
		High-Off-Low Selector Switch	49SAS03			
 <p>49SAS01</p>	30 (2S2W)	Open	0-4	High-Off-Low Selector Switch	49SASB3	
				High-Off-Low Selector Switch	49SBSB3	
		1	0-4	High, Low, Stop Push Buttons	49SAP03	
 <p>49SAS01</p>	17, 18, 36, 37, 70, 71, LED, LEF, LEB, CMN, CMF, CMB	1, 12, 4/4X	0-6	High-Off-Low Selector Switch	49SAS03	
				High-Off-Low Selector Switch	49SAS03	
				Start, Stop Push Buttons	49SAP05	
		1, 12, 4/4X	0-6	Hand-Off-Auto Selector Switch	49SAS01	
				Keyed Hand-Off-Auto (key removable in all positions)	49SAS09	
				Off-On Selector Switch	49SAS04	
25, 26	1, 12, 4/4X	0-6	0-6	Forward, Reverse, Stop Push Buttons	49SAP02	
				Forward-Off-Reverse Selector Switch	49SAS02	
32	1, 12, 4/4X	0-6	0-6	High, Low, Stop Push Buttons	49SAP03	
				High-Off-Low Selector Switch	49SAS03	