

Accessories for DIN rail terminal blocks



**Cross connector
for feed-through blocks**



**Notching tool
for cross connectors**



Test plug with spring clamp connection
for WKF/WKC terminal blocks

PSWKC/F

solid	fine-stranded	V	A
0.13–1.5 mm ²	0.13–1.5 mm ²	400 V	13,5
*5 mm/6 mm			8 mm

Type	Part No.	Std. Pack	Type	Part No.	Std. Pack	Type	Part No.	Std. Pack
1.5 mm², 4 mm wide			1.5 mm², 4 mm wide					
IVB WKF 1,5-2	Z7.260.0227.0	10	AKW /A	95.300.0500.0	1			
IVB WKF 1,5-3	Z7.268.0327.0	10						
IVB WKF 1,5-4	Z7.268.0427.0	10						
IVB WKF 1,5-5	Z7.268.0527.0	10						
IVB WKF 1,5-10	Z7.268.1027.0	10						
IVB WKF 1,5-20	Z7.268.2027.0	10						
2.5 mm², 5 mm wide			2.5 mm², 5 mm wide			2.5 mm², 5 mm wide		
IVB WKF 2,5-2	Z7.280.6227.0	10	AKW /A	95.300.0500.0	1	Test plug PSWKC/F	Z1.299.9753.0	10
IVB WKF 2,5-3	Z7.280.6327.0	10				Blind piece	01.299.9753.0	10
IVB WKF 2,5-4	Z7.280.6427.0	10	Jumping cross connectors			End plate ZP/AP PS	07.312.6053.0	10
IVB WKF 2,5-5	Z7.280.6527.0	10	3 pole 1-3	99.013.9999.9	10			
IVB WKF 2,5-6	Z7.280.6627.0	10	4 pole 1-4	99.014.9999.9	10			
IVB WKF 2,5-7	Z7.280.6727.0	20	5 pole 1-5	99.015.9999.9	10			
IVB WKF 2,5-8	Z7.280.6827.0	20	5 pole 1 to 3 to 5	99.031.9999.9	10			
IVB WKF 2,5-9	Z7.280.6927.0	20	7 pole 1 to 3, 5 and 7	99.032.9999.9	10			
IVB WKF 2,5-10	Z7.280.7027.0	20	9 pole; 1 to 3, 5, 7 and 9	99.033.9999.9	10			
IVB WKF 2,5-20	Z7.280.8027.0	20	11 pole; 1 to 3, 5, 7, 9 u. 11	99.034.9999.9	10			
IVB WKF-V	Z7.261.1127.0	10	Additional combinations upon request					
4 mm², 6 mm wide			4 mm², 6 mm wide			4 mm², 6 mm wide		
IVB WKF 4-2	Z7.261.1227.0	10	AKW /A	95.300.0500.0	1	Test plug PSWKC/F	Z1.299.9753.0	10
IVB WKF 4-3	Z7.261.1327.0	10				Blind piece	01.299.9753.0	10
IVB WKF 4-4	Z7.261.1427.0	10				End plate ZP/AP PS	07.312.6053.0	10
IVB WKF 4-5	Z7.261.1527.0	10						
IVB WKF 4-6	Z7.261.1627.0	10	Please note the instructions for jumping cross connectors on page 31!			* For 6 mm spacings a ZP/AP PS is snapped on behind each test plug or blind piece.		
IVB WKF 4-7	Z7.261.1727.0	10						
IVB WKF 4-8	Z7.261.1827.0	10						
IVB WKF 4-9	Z7.261.1927.0	10						
IVB WKF 4-10	Z7.261.2027.0	10						
6 mm², 8 mm wide			You can cut a 10-pole jumper strip down into two 5-pole jumper strips however, an end plate or partition plate must then be installed at the point of separation.					
IVB WKFN 6-2	Z7.282.5227.0	10						
IVB WKFN 6-5	Z7.282.5527.0	10						
10 mm², 10 mm wide								
IVB WKF 10-2	Z7.283.8227.0	10						
16 mm², 12 mm wide								
IVB WKF 16-2	Z7.284.4227.0	10						
35 mm², 16 mm wide								
IVB WKF 35-2	Z7.285.6227.0	10						
IVB WKF 35R10-2	Z7.285.6427.0	10						