



IRISS®

See What You've Been Missing!

Installation Instructions - CAP-6

1. Place this label in the location where the IRISS CAP IR window is to be installed.
2. Drill 8 7mm (1/4") holes marked 'A'
3. Cut out required viewing window along line 'B' using a suitable cutting tool.
4. Deburr and treat all bare metal areas to prevent corrosion.
5. Fit IRISS unit on the front of the panel.
6. Fully tighten the locknuts ensuring that the star locking washers supplied are tightened to 17 ft/lb or 23 n/m.

Make certain that you complete all the data listed on the window ID label as this will be essential to ensure that your IRISS CAP unit gives you the best results possible for the life of the installation.

Your IRISS CAP IR window is now ready for use.