

**Rittal – The System.**

Faster – better – worldwide.

**► Catalog 33  
North American Edition 2012**

**500**

**Rittal. Power and Vision!**

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES



FRIEDHELM LOH GROUP

## Wall mounting

### Wall mounting bracket

#### for AE, WM

For attaching to the enclosure from the outside. Simply insert the expandable dowel into the enclosure hole from the outside, and screw-fasten the wall bracket from the outside.

#### Material:

Carbon steel


#### Surface finish:

Zinc-plated

#### Configuration:

Wall bracket pre-fitted with seal and expandable dowel

Wall distance inches (mm)	Packs of	Part No.
0.6 (15)	4	<b>2508.100</b>

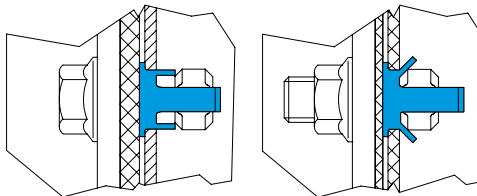

### Wall mounting bracket

For the attachment of KL, EB, BG, AE, CM and EL enclosures, TP consoles as well as wall-mounted distributors and small fiber-optic distributors.

#### Configuration:

Assembly parts for mounting on the enclosure

#### Possible alternative:

Hygienic Design wall spacer bracket, see page 208

Material	Wall distance (A) inches (mm)	PU	Part No.
Sheet steel zinc-plated, passivated	1.6 (40)	1	<b>2503.000<sup>1)</sup></b>
		4	<b>2503.200</b>
	0.4 (10)	1	<b>2508.000<sup>1)</sup></b>
		4	<b>2508.200</b>
Type 304 stainless steel	0.4 (10)	4	<b>2433.000</b>
Type 316L stainless steel	0.4 (10)	4	<b>2433.500</b>

<sup>1)</sup> Without assembly hardware.

