

SIRIUS 3SB3 Range (Phase Out starting in October 2018)			SIRIUS ACT (3SU1) direct 3SB3 replacement recommendation		
Siemens Order Number	RS Order Number	Description	Siemens Order Number	RS Order Number	Additional Note
3SB30000AA11	4111457	Front element for push button	3SU10000AB100AA0	8741718	Collar required: 8742272
3SB30000AA21	4111536	Front element for push button	3SU10000AB200AA0	8741712	Collar required: 8742272
3SB30000AA31	4111435	Front element for push button	3SU10000AB300AA0	1038487	Collar required: 8742272
3SB30000AA41	4111429	Front element for push button	3SU10000AB400AA0	8741689	Collar required: 8742272
3SB30000AA51	4112321	Front element for push button	3SU10000AB500AA0	8741683	Collar required: 8742272
3SB30000AA61	4111615	Front element for push button	3SU10000AB600AA0	8741692	Collar required: 8742272
3SB30000AA71	4112539	Front element for push button	3SU10000AB700AA0	8741695	Collar required: 8742272
3SB30000AB11	5067474	Front element for push button	3SU10000AB600AC0		Collar required: 8742272
3SB30000BA11	8470775	Front element for push button	3SU10000BB100AA0	1038490	Collar required: 8742272
3SB30000BA21	8470779	Front element for push button	3SU10000BB200AA0	1038491	Collar required: 8742272
3SB30000BA31	8470788	Front element for push button	3SU10000BB300AA0	1355589	Collar required: 8742272
3SB30000BA41	8470781	Front element for push button	3SU10000BB400AA0	1355590	Collar required: 8742272
3SB30000BA51	8470785	Front element for push button	3SU10000BB500AA0	1355592	Collar required: 8742272
3SB30000BA61	8470794	Front element for push button	3SU10000BB600AA0	1355593	Collar required: 8742272
3SB30000DA11	8470797	Front element for push button	3SU10000AA100AA0	8741715	Collar required: 8742272
3SB30000DA21	7450241	Front element for push button	3SU10000AA200AA0	1355580	Collar required: 8742272
3SB30000DA31	8470791	Front element for push button	3SU10000AA300AA0	1355582	Collar required: 8742272
3SB30000DA41	8470801	Front element for push button	3SU10000AA400AA0	1355583	Collar required: 8742272
3SB30000DA51	8470804	Front element for push button	3SU10000AA500AA0	1355584	Collar required: 8742272
3SB30000DA61	8470808	Front element for push button	3SU10000AA600AA0	1355591	Collar required: 8742272
3SB30001BA20	5067749	Emergency stop complete	3SU10001HF200AA0	8741699	Collar required: 8742272
3SB30001CA21	7352721	Front element for mushroom push-button	3SU10001BA200AA0	8741721	Collar required: 8742272
3SB30001DA11	8470817	Front element for mushroom push-button	3SU10001AD100AA0		Collar required: 8742272
3SB30001EA11	5067632	Front element for mushroom push-button	3SU10001AA100AA0		Collar required: 8742272
3SB30001EA21	5067711	Front element for mushroom push-button	3SU10001AA200AA0		Collar required: 8742272
3SB30001FA20	7450250	Emergency stop complete	3SU10001GB200AA0	8741728	Collar required: 8742272
3SB30001GA11	7450253	Front element for mushroom push-button	3SU10001BD100AA0	8741724	Collar required: 8742272
3SB30001GA21	8470810	Front element for mushroom push-button	3SU10001BD200AA0	1038493	Collar required: 8742272
3SB30001GA41	7450257	Front element for mushroom push-button	3SU10001BD400AA0		Collar required: 8742272
3SB30001HA20	4112753	Emergency stop complete	3SU10001HB200AA0	8741730	Collar required: 8742272
3SB30001HA26	8470814	Emergency stop complete	-		No replacement planned from Siemens
3SB30001KA20	8470823	Emergency stop complete	3SU10001HR200AA0	8741677	Collar required: 8742272

3SB30001QA11	8470826	Front element for mushroom push-button	3SU10001CD100AA0		Collar required: 8742272
3SB30001QA21	8470820	Front element for mushroom push-button	3SU10001CD200AA0		Collar required: 8742272
3SB30001TA20	8470839	Emergency stop complete	3SU10001HA200AA0	8741737	
3SB30002DA11	4556412	Front element for selector switch	3SU10022BL600AA0	8741787	Collar required: 8742272
3SB30002EA11	4556428	Front element for selector switch	3SU10022BM600AA0	8741780	Collar required: 8742272
3SB30002FA11	8470832	Front element for selector switch	3SU10022BN600AA0		Collar required: 8742272
3SB30002GA11	7450266	Front element for selector switch	3SU10022BP600AA0		Collar required: 8742272
3SB30002HA11	7450269	Front element for selector switch	3SU10022BF600AA0	8741778	Collar required: 8742272
3SB30002KA11	4556563	Front element for selector switch	3SU10022BF600AA0	8741778	Collar required: 8742272
3SB30002LA11	4556541	Front element for selector switch	3SU10022BC600AA0	8741774	Collar required: 8742272
3SB30003AH11	5067761	Front element for selector switch	3SU10004FF110AA0		Collar required: 8742272
3SB30003AK11	5067783	Front element for selector switch	3SU10004JF110AA0		Collar required: 8742272
3SB30004AD01	7450263	Front element for selector switch	3SU10004BF010AA0	1038497	Collar required: 8742272
3SB30004AD11	4556377	Front element for selector switch	3SU10004BF110AA0	8741743	round, Collar 8742272 required
3SB30004BD01	4556478	Front element for selector switch	3SU10004BC010AA0	8741734	Collar required: 8742272
3SB30004DD11	4556484	Front element for selector switch	3SU10004BL110AA0	8741746	Collar required: 8742272
3SB30004ED01	7450272	Front element for selector switch	3SU10004BM010AA0	1736713	Collar required: 8742272
3SB30004HD11	7450275	Front element for selector switch	3SU10004BF110AA0	8741743	round, Collar 8742272 required
3SB30004LD01	7450279	Front element for selector switch	3SU10005BF010AA0	8741740	Collar required: 8742272
3SB30004LD05	7450288	Front element for selector switch	3SU10005JF010AA0		
3SB30004LD11	7450281	Front element for selector switch	3SU10005BF110AA0	8741636	Collar required: 8742272
3SB30004LD21	8470836	Front element for selector switch	3SU10005BF210AA0		Collar required: 8742272
3SB30004MD01	8470845	Front element for selector switch	3SU10005BC010AA0	1355586	Collar required: 8742272
3SB30004PD01	8470848	Front element for selector switch	3SU10005BL010AA0		Collar required: 8742272
3SB30004PD11	8470842	Front element for selector switch	3SU10005BL110AA0	8741639	
3SB30004PD21	8470851	Front element for selector switch	3SU10005BL210AA0		Collar required: 8742272
3SB30004PD31	8470854	Front element for selector switch	3SU10005BL310AA0		Collar required: 8742272
3SB30004PD41	8470858	Front element for selector switch	3SU10005BL410AA0		Collar required: 8742272
3SB30010AA01	8470867	Front element for push button	3SU10010AB000AA0		Collar required: 8742272
3SB30010AA21	4112523	Front element for push button	3SU10010AB200AA0	8741759	Collar required: 8742272
3SB30010AA31	4112517	Front element for push button	3SU10010AB300AA0	8741633	Collar required: 8742272
3SB30010AA41	4112501	Front element for push button	3SU10010AB400AA0	8741642	Collar required: 8742272
3SB30010AA51	4112494	Front element for push button	3SU10010AB500AA0	8741645	Collar required: 8742272
3SB30010AA61	4112488	Front element for push button	3SU10010AB600AA0	8741649	Collar required: 8742272
3SB30010AA71	4112444	Front element for push button	3SU10010AB700AA0	8741658	Collar required: 8742272
3SB30010BA21	7450285	Front element for push button	3SU10010BB200AA0		Collar required: 8742272
3SB30010BA31	7450294	Front element for push button	3SU10010BB300AA0		Collar required: 8742272
3SB30010BA41	7450297	Front element for push button	3SU10010BB400AA0		Collar required: 8742272
3SB30010BA51	8470860	Front element for push button	3SU10010BB500AA0		Collar required: 8742272
3SB30010BA71	7450291	Front element for push button	3SU10010BB700AA0		Collar required: 8742272

3SB30010DA51	8470864	Front element for push button	3SU10010AA500AA0		Collar required: 8742272
3SB30010DA61	7450301	Front element for push button	3SU10010AA600AA0		Collar required: 8742272
3SB30011CA21	7450304	Front element for mushroom push-button	3SU10011BA200AA0		Collar required: 8742272
3SB30012DA21	4112696	Front element for selector switch	3SU10022BL200AA0		Collar required: 8742272
3SB30012DA31	4112775	Front element for selector switch	3SU10022BL300AA0		Collar required: 8742272
3SB30012DA41	4112848	Front element for selector switch	3SU10022BL400AA0	1038505	Collar required: 8742272
3SB30012DA51	4112062	Front element for selector switch	3SU10022BL500AA0		Collar required: 8742272
3SB30012DA71	4111621	Front element for selector switch	3SU10022BL600AA0	8741787	Collar required: 8742272
3SB30012EA41	7450308	Front element for selector switch	3SU10022BM400AA0	1038506	Collar required: 8742272
3SB30012EA71	7450317	Front element for selector switch	3SU10022BM600AA0	8741780	Collar required: 8742272
3SB30012GA41	7450310	Front element for selector switch	3SU10022BP400AA0		Collar required: 8742272
3SB30012HA21	7352746	Front element for selector switch	3SU10022BF200AA0	1038502	
3SB30012KA21	4112359	Front element for selector switch	3SU10022BF200AA0	1038502	Collar required: 8742272
3SB30012KA31	4112286	Front element for selector switch	3SU10022BF300AA0	1355598	Collar required: 8742272
3SB30012KA41	4112826	Front element for selector switch	3SU10022BF400AA0	1038503	Collar required: 8742272
3SB30012KA51	4112832	Front element for selector switch	3SU10022BF500AA0	1038504	Collar required: 8742272
3SB30012KA71	4112731	Front element for selector switch	3SU10022BF600AA0	8741778	Collar required: 8742272
3SB30012LA21	7450314	Front element for selector switch	3SU10022BC200AA0		
3SB30016AA20	4112618	Front element for indicator light	3SU10016AA200AA0	8741752	Collar required: 8742272
3SB30016AA30	4112624	Front element for indicator light	3SU10016AA300AA0	8741756	Collar required: 8742272
3SB30016AA40	4112674	Front element for indicator light	3SU10016AA400AA0	8741765	Collar required: 8742272
3SB30016AA50	4112315	Front element for indicator light	3SU10016AA500AA0	8741768	Collar required: 8742272
3SB30016AA60	4112337	Front element for indicator light	3SU10016AA600AA0	8741762	Collar required: 8742272
3SB30016AA70	4112466	Front element for indicator light	3SU10016AA700AA0	8741771	Collar required: 8742272
3SB30016BA00	7450323	Front element for indicator light	3SU10016AA000AA0		Collar required: 8742272
3SB30016BA20	5067698	Front element for indicator light	3SU10016AA200AA0	8741752	Collar required: 8742272
3SB30016BA30	5067755	Front element for indicator light	3SU10016AA300AA0	8741756	Collar required: 8742272
3SB30016BA40	5067733	Front element for indicator light	3SU10016AA400AA0	8741765	Collar required: 8742272
3SB30016BA50	5067705	Front element for indicator light	3SU10016AA500AA0	8741768	Collar required: 8742272
3SB30016BA60	5067777	Front element for indicator light	3SU10016AA600AA0	8741762	Collar required: 8742272
3SB30016BA70	5067682	Front element for indicator light	3SU10016AA700AA0	8741771	Collar required: 8742272
3SB31008CC21	7450326	Front element for push button	3SU10003BB420AK0	1038496	Collar required: 8742272
3SB31018BC21	4556490	Front element for push button	3SU10013AB420AK0	1038500	Collar required: 8742272
3SB31018BC31	4556507	Front element for push button	3SU10013AB610AK0		Collar required: 8742272
3SB32010AA11	7448917	Push button, complete	3SU11000AB101FA0	1736863	
3SB32010AA110CC0	7448926	Push button, complete	3SU11000AB103FA0		
3SB32010AA21	7448771	Push button, complete	3SU11000AB201FA0		
3SB32010AA210CC0	7449109	Push button, complete	3SU11000AB203FA0		
3SB32010AA31	7448929	Push button, complete	3SU11000AB301FA0		
3SB32010AA41	7448923	Push button, complete	3SU11000AB401FA0		

3SB32010AA51	7448932	Push button, complete	3SU11000AB501FA0		
3SB32010AA61	7448935	Push button, complete	3SU11000AB601FA0		
3SB32010AB51	7449102	Push button, complete	3SU11000AB801FA0		
3SB32010BA51	8470873	Front element for push button	3SU10000BB500AA0	1355592	Collar 8742272 & Module required
3SB32010BA61	8470876	Front element for push button	3SU10000BB600AA0	1355593	Collar required: 8742272
3SB32011CA21	7448869	Push button, complete	3SU11001BA201FA0		
3SB32011CA210CC0	7449106	Push button, complete	3SU11001BA203FA0		
3SB32011HA200CC0	7448939	Push button, complete	3SU11001HB203FH0	1736762	
3SB32011HA26	7449115	Push button, complete	3SU10001NB200AA0		
3SB32011HA260CC0	7449118	Push button, complete	3SU10001NB200AA0		
3SB32011HP20	7449112	Push button, complete	3SU11001HB201FJ0		
3SB32011HR20	7448948	Push button, complete	3SU11001HB201FG0		
3SB32011HR26	7449121	Push button, complete	3SU10001NB200AA0		
3SB32011TA20	7448850	Push button, complete	3SU11001HA201FH0		
3SB32011TR20	8470870	Push button, complete	3SU11001HA201FG0		
3SB32012HA11	7448941	Selector switch, complete	3SU11002BF601MA0	8742049	
3SB32012KA11	7448787	Front element for selector switch	3SU10022BF600AA0	8741778	without collar & module
3SB32012KA110CC0	7449124	Selector switch, complete	3SU11002BF603MA0		
3SB32014AD11	7448945	Selector switch, complete	3SU11004BF111FA0	1736764	
3SB32014AD110CC0	7449128	Selector switch, complete	3SU11004BF113FA0		
3SB32020AA11	7352749	Push button, complete	3SU11000AB101BA0	8742020	
3SB32020AA110CC0	7449137	Push button, complete	3SU11000AB103BA0		
3SB32020AA21	7448954	Push button, complete	3SU11000AB201BA0	1736756	
3SB32020AA31	7448957	Push button, complete	3SU11000AB301BA0	1736757	
3SB32020AA310CC0	7449130	Push button, complete	3SU11000AB303BA0		
3SB32020AA41	7448853	Push button, complete	3SU11000AB401BA0	8742033	
3SB32020AA410CC0	7449134	Push button, complete	3SU11000AB403BA0		
3SB32020AA51	7448822	Push button, complete	3SU11000AB501BA0	8741932	
3SB32020AA510CC0	7449143	Push button, complete	3SU11000AB503BA0		
3SB32020AA61	7448913	Push button, complete	3SU11000AB601BA0	1736758	
3SB32020AA610CC0	7449146	Push button, complete	3SU11000AB603BA0		
3SB32020AA71	7449140	Push button, complete	3SU11000AB701BA0		
3SB32022HA11	7352743	Selector switch, complete	3SU11002BF601BA0	8742030	
3SB32022KA11	7448847	Selector switch, complete	3SU11002BF601BA0	8742030	
3SB32022KA110CC0	7448951	Selector switch, complete	3SU11002BF603BA0	1736763	
3SB32024AD11	7448800	Selector switch, complete	3SU11004BF111BA0	8741948	
3SB32024AD110CC0	7448960	Selector switch, complete	3SU11004BF113BA0		
3SB32030AA11	7448872	Push button, complete	3SU11000AB101CA0	1736755	
3SB32030AA21	7448963	Push button, complete	3SU11000AB201CA0	8742024	
3SB32031CA21	7448812	Push button, complete	3SU11001BA201CA0	1736759	

3SB32031CA210CC0	7449159	Push button, complete	3SU11001BA203CA0		
3SB32031HA200AC0	7449152	Push button, complete	3SU11001HB201CF0		
3SB32031HA200CC0	7449156	Push button, complete	3SU11001HB203CH0	1736761	
3SB32031HA26	7449165	Push button, complete	3SU10001NB200AA0		
3SB32031HA260CC0	7449168	Push button, complete	3SU10001NB200AA0		
3SB32031HP20	7449162	Push button, complete	3SU11001HB201CJ0		
3SB32031HR20	7450320	Push button, complete	3SU11001HB201CG0	1038532	
3SB32031TA20	7448967	Push button, complete	3SU11001HA201CH0	1736760	
3SB32046AA20	7448904	Indicator light complete	3SU11036AA201AA0		incl. LED 110 V
3SB32046AA200CC0	7449171	Indicator light complete	3SU11036AA203AA0		incl. LED 110 V
3SB32046AA30	7448907	Indicator light complete	3SU11036AA301AA0		incl. LED 110 V
3SB32046AA300CC0	7449174	Indicator light complete	3SU11066AA301AA0	1736779	incl. LED 110 V
3SB32046AA40	7448901	Indicator light complete	3SU11036AA401AA0		incl. LED 110 V
3SB32046AA400CC0	7449178	Indicator light complete	3SU11036AA403AA0		incl. LED 110 V
3SB32046AA50	7449187	Indicator light complete	3SU11036AA501AA0		incl. LED 110 V
3SB32046AA500CC0	7449180	Indicator light complete	3SU11036AA503AA0		incl. LED 110 V
3SB32046AA60	7448976	Indicator light complete	3SU11036AA601AA0		incl. LED 110 V
3SB32046AA600CC0	7449184	Indicator light complete	3SU11036AA603AA0		incl. LED 110 V
3SB32046AA70	7352752	Indicator light complete	3SU11036AA701AA0		incl. LED 110 V
3SB32046AA700CC0	7449193	Indicator light complete	3SU11036AA703AA0		incl. LED 110 V
3SB32046BA20	7448979	Indicator light complete	3SU11036AA201AA0		incl. LED 110 V
3SB32046BA200CC0	7449196	Indicator light complete	3SU11036AA203AA0		incl. LED 110 V
3SB32046BA30	7449190	Indicator light complete	3SU11036AA301AA0		incl. LED 110 V
3SB32046BA300CC0	7449200	Indicator light complete	3SU11066AA301AA0	1736779	incl. LED 110 V
3SB32046BA40	7449203	Indicator light complete	3SU11036AA401AA0		incl. LED 110 V
3SB32046BA400CC0	7448973	Indicator light complete	3SU11036AA403AA0		incl. LED 110 V
3SB32046BA50	7449207	Indicator light complete	3SU11036AA501AA0		incl. LED 110 V
3SB32046BA500CC0	7449216	Indicator light complete	3SU11036AA503AA0		incl. LED 110 V
3SB32046BA60	7449219	Indicator light complete	3SU11036AA601AA0		incl. LED 110 V
3SB32046BA600CC0	7449213	Indicator light complete	3SU11036AA603AA0		incl. LED 110 V
3SB32046BA70	7449222	Indicator light complete	3SU11036AA701AA0		incl. LED 110 V
3SB32050AA21	7449229	Front element for push button	3SU10010AB200AA0	8741759	Collar 8742272 & Module required
3SB32050AA210CC0	7449238	Front element for push button	3SU10010AB200AA0	8741759	Collar 8742272 & Module required
3SB32050AA31	7449231	Front element for push button	3SU10010AB300AA0	8741633	Collar 8742272 & Module required
3SB32050AA310CC0	7449235	Front element for push button	3SU10010AB300AA0	8741633	Collar 8742272 & Module required
3SB32050AA41	7448799	Front element for push button	3SU10010AB400AA0	8741642	Collar 8742272 & Module required
3SB32050AA410CC0	7449244	Front element for push button	3SU10010AB400AA0	8741642	Collar 8742272 & Module required
3SB32050AA51	7449247	Front element for push button	3SU10010AB500AA0	8741645	Collar 8742272 & Module required
3SB32050AA510CC0	7449241	Front element for push button	3SU10010AB500AA0	8741645	Collar 8742272 & Module required
3SB32050AA61	7449250	Front element for push button	3SU10010AB600AA0	8741649	Collar 8742272 & Module required

3SB32050AA610CC0	7449253	Front element for push button	3SU10010AB600AA0	8741649	Collar 8742272 & Module required
3SB32050AA71	7448828	Front element for push button	3SU10010AB700AA0	8741658	Collar 8742272 & Module required
3SB32050AA710CC0	7449257	Front element for push button	3SU10010AB700AA0	8741658	Collar 8742272 & Module required
3SB32060AA31	7448982	Front element for push button	3SU10010AB300AA0	8741633	Collar 8742272 & Module required
3SB32060AA310CC0	7449266	Front element for push button	3SU10010AB300AA0	8741633	Collar 8742272 & Module required
3SB32060AA41	7448783	Front element for push button	3SU10010AB400AA0	8741642	Collar 8742272 & Module required
3SB32060AA410CC0	7449269	Front element for push button	3SU10010AB400AA0	8741642	Collar 8742272 & Module required
3SB32060AA51	7448985	Front element for push button	3SU10010AB500AA0	8741645	Collar 8742272 & Module required
3SB32060AA510CC0	7449263	Front element for push button	3SU10010AB500AA0	8741645	Collar 8742272 & Module required
3SB32060AA61	7448774	Front element for push button	3SU10010AB600AA0	8741649	Collar 8742272 & Module required
3SB32060AA610CC0	7448989	Front element for push button	3SU10010AB600AA0	8741649	Collar 8742272 & Module required
3SB32060AA71	7352755	Front element for push button	3SU10010AB700AA0	8741658	Collar 8742272 & Module required
3SB32060AA710CC0	7449272	Front element for push button	3SU10010AB700AA0	8741658	Collar 8742272 & Module required
3SB32070AA21	7352759	Front element for push button	3SU10010AB200AA0	8741759	Collar 8742272 & Module required
3SB32070AA210CC0	7448991	Front element for push button	3SU10010AB200AA0	8741759	Collar 8742272 & Module required
3SB32082DA11	7448995	Front element for selector switch	3SU10022BL600AA0	8741787	without collar & module
3SB32082EA11	7448819	Front element for selector switch	3SU10022BM600AA0	8741780	without collar & module
3SB32102DA11	7449008	Selector switch, complete	3SU11002BL601NA0	8742042	
3SB32102DA110CC0	7449275	Selector switch, complete	3SU11002BL603NA0		
3SB32102EA11	7448806	Selector switch, complete	3SU11002BM601NA0	8742046	
3SB32102EA110CC0	7449279	Front element for selector switch	3SU10022BM600AA0	8741780	without collar & module
3SB32111XA20	7449288	Push button, complete	3SU11001LB201PH0		
3SB32126AA20	7448881	Indicator light complete	3SU11066AA201AA0	8742070	
3SB32126AA30	7449281	Indicator light complete	3SU11066AA301AA0	1736779	
3SB32126AA40	7449285	Indicator light complete	3SU11066AA401AA0	8742074	
3SB32126AA50	7449294	Indicator light complete	3SU11066AA501AA0		
3SB32126AA60	7448884	Indicator light complete	3SU11066AA601AA0	8742083	
3SB32126AA70	7449001	Indicator light complete	3SU11066AA701AA0		
3SB32130AA21	7449297	Push button, complete	3SU11060AB201CA0	1736777	1S required
3SB32130AA31	7448866	Push button, complete	3SU11060AB301BA0		
3SB32130AA41	7449291	Push button, complete	3SU11060AB401BA0	1736778	
3SB32130AA51	7449301	Push button, complete	3SU11060AB501BA0		
3SB32130AA61	7449304	Push button, complete	3SU11060AB601BA0		
3SB32140AA31	7449317	Push button, complete	3SU11060AB301BA0		
3SB32140AA41	7449310	Push button, complete	3SU11060AB401BA0	1736778	
3SB32140AA51	7449314	Push button, complete	3SU11060AB501BA0		
3SB32140AA61	7449323	Push button, complete	3SU11060AB601BA0		
3SB32140AA71	7449326	Push button, complete	3SU11060AB701BA0		
3SB32140AB11	7449320	Push button, complete	3SU11060AB601BA0ZY10		
3SB32160AA21	7449339	Push button, complete	3SU11060AB201CA0	1736777	

3SB32176AA20	7352768	Indicator light complete	3SU11026AA203AA0		
3SB32176AA30	7352761	Indicator light complete	3SU11026AA301AA0	8742061	
3SB32176AA40	7352765	Indicator light complete	3SU11026AA401AA0	8742064	
3SB32176AA50	7449332	Indicator light complete	3SU11026AA501AA0	1355647	
3SB32176AA60	7449014	Indicator light complete	3SU11026AA601AA0	8742068	
3SB32176AA70	7449336	Indicator light complete	3SU11026AA701AA0	1736776	
3SB32180AA21	7449345	Push button, complete	3SU11020AB201CA0	1736769	
3SB32200AA31	7449348	Push button, complete	3SU11020AB301BA0	1736771	
3SB32200AA41	7449342	Push button, complete	3SU11020AB401BA0	8742055	
3SB32200AA51	7449351	Push button, complete	3SU11020AB501BA0	1736774	
3SB32200AA61	7449017	Push button, complete	3SU11020AB601BA0	8742058	
3SB32200AA71	7449354	Push button, complete	3SU11020AB701BA0	8741936	
3SB32210AA21	7449358	Push button, complete	3SU11020AB201FA0	1736770	
3SB32210AA31	7449367	Push button, complete	3SU11020AB301FA0		
3SB32210AA41	7449360	Push button, complete	3SU11020AB401FA0	1736773	
3SB32210AA51	7449011	Push button, complete	3SU11020AB501FA0		
3SB32210AA61	7449364	Push button, complete	3SU11020AB601FA0		
3SB32210AA71	7449373	Push button, complete	3SU11020AB701FA0	1736775	
3SB32337BA10	5067553	Acoustic indicator	3SU12006KB101AA0	1736813	IP40
3SB32347BA10	7449376	Acoustic indicator	3SU12006KC101AA0		IP40, 110V
3SB32357BA10	5067569	Acoustic indicator	3SU12006KF101AA0		IP40
3SB32406BA60	7449370	Front element for indicator light	3SU10016AA600AA0	8741762	round, collar 8742272 & module required
3SB32446AA20	7448816	Indicator light complete	3SU11026AA201AA0	8742052	
3SB32446AA200CC0	7449389	Indicator light complete	3SU11026AA203AA0		
3SB32446AA30	7448862	Indicator light complete	3SU11026AA301AA0	8742061	
3SB32446AA300CC0	7449382	Indicator light complete	3SU11026AA303AA0		
3SB32446AA40	7448910	Indicator light complete	3SU11026AA401AA0	8742064	
3SB32446AA400CC0	7449020	Indicator light complete	3SU11026AA403AA0		
3SB32446AA50	7449023	Indicator light complete	3SU11026AA501AA0	1355647	
3SB32446AA500CC0	7449386	Indicator light complete	3SU11026AA503AA0		
3SB32446AA60	7448796	Indicator light complete	3SU11026AA601AA0	8742068	
3SB32446AA600CC0	7449027	Indicator light complete	3SU11026AA603AA0		
3SB32446AA70	7448825	Indicator light complete	3SU11026AA701AA0	1736776	
3SB32446AA700CC0	7449395	Indicator light complete	3SU11026AA703AA0		
3SB32446BA20	7448856	Indicator light complete	3SU11026AA201AA0	8742052	
3SB32446BA200CC0	7449036	Indicator light complete	3SU11026AA203AA0		
3SB32446BA30	7448888	Indicator light complete	3SU11026AA301AA0	8742061	
3SB32446BA300CC0	7449398	Indicator light complete	3SU11026AA303AA0		
3SB32446BA40	7449039	Indicator light complete	3SU11026AA401AA0	8742064	
3SB32446BA400CC0	7449033	Indicator light complete	3SU11026AA403AA0		

3SB32446BA50	7448831	Indicator light complete	3SU11026AA501AA0	1355647	
3SB32446BA500CC0	7449392	Indicator light complete	3SU11026AA503AA0		
3SB32446BA60	7449402	Indicator light complete	3SU11026AA601AA0	8742068	
3SB32446BA600CC0	7449405	Indicator light complete	3SU11026AA603AA0		
3SB32446BA70	7449042	Indicator light complete	3SU11026AA701AA0	1736776	
3SB32446BA700CC0	7449409	Indicator light complete	3SU11026AA703AA0		
3SB32450AA31	7449045	Push button, complete	3SU11020AB301BA0	1736771	
3SB32450AA41	7448878	Push button, complete	3SU11020AB401BA0	8742055	
3SB32450AA51	7449049	Push button, complete	3SU11020AB501BA0	1736774	
3SB32450AA61	7449058	Push button, complete	3SU11020AB601BA0	8742058	
3SB32450AA71	7448840	Push button, complete	3SU11020AB701BA0	8741936	
3SB32460AA21	7448844	Push button, complete	3SU11020AB201CA0	1736769	
3SB32470AA21	7448834	Push button, complete	3SU11020AB201FA0	1736770	
3SB32470AA31	7449051	Push button, complete	3SU11020AB301FA0		
3SB32470AA310CC0	7449418	Push button, complete	3SU11020AB303FA0		
3SB32470AA41	7448897	Push button, complete	3SU11020AB401FA0	1736773	
3SB32470AA51	7449411	Front element for push button	3SU10010AB500AA0	8741645	Collar 8742272 & Module required
3SB32470AA61	7448890	Push button, complete	3SU11020AB601FA0		
3SB32470AA71	7449055	Push button, complete	3SU11020AB701FA0	1736775	
3SB32470AA710CC0	7449415	Push button, complete	3SU11020AB703FA0		
3SB32486AA20	7449424	Indicator light complete	3SU11036AA201AA0		
3SB32486AA30	7449427	Indicator light complete	3SU11036AA301AA0		
3SB32486AA40	7449421	Indicator light complete	3SU11036AA401AA0		
3SB32486AA60	7449433	Indicator light complete	3SU11036AA601AA0		
3SB32486AA70	7449437	Indicator light complete	3SU11036AA701AA0		
3SB32486BA20	7449446	Indicator light complete	3SU11036AA201AA0		
3SB32486BA30	7449064	Indicator light complete	3SU11036AA301AA0		
3SB32486BA40	7449449	Indicator light complete	3SU11036AA401AA0		
3SB32486BA60	7449452	Indicator light complete	3SU11036AA601AA0		
3SB32486BA70	7449455	Indicator light complete	3SU11036AA701AA0		
3SB32500AA21	7449459	Push button, complete	3SU11030AB201CA0		
3SB32510AA21	7449468	Push button, complete	3SU11030AB201FA0		
3SB32510AA41	7449465	Push button, complete	3SU11030AB401FA0		
3SB32510AA61	7449477	Push button, complete	3SU11030AB601FA0		
3SB32526AA20	7449067	Indicator light complete	3SU11066AA201AA0	8742070	
3SB32526AA200CC0	7449480	Indicator light complete	3SU11066AA203AA0		
3SB32526AA30	7449061	Indicator light complete	3SU11066AA301AA0	1736779	
3SB32526AA300CC0	7449483	Indicator light complete	3SU11066AA303AA0		
3SB32526AA40	7449070	Indicator light complete	3SU11066AA401AA0	8742074	
3SB32526AA400CC0	7449487	Indicator light complete	3SU11066AA403AA0		

3SB32526AA50	7449073	Indicator light complete	3SU11066AA501AA0		
3SB32526AA500CC0	7449496	Indicator light complete	3SU11066AA503AA0		
3SB32526AA60	7448894	Indicator light complete	3SU11066AA601AA0	8742083	
3SB32526AA600CC0	7449499	Indicator light complete	3SU11066AA603AA0		
3SB32526AA70	7449077	Indicator light complete	3SU11066AA701AA0		
3SB32526AA700CC0	7449493	Indicator light complete	3SU11066AA703AA0		
3SB32526BA20	7449086	Indicator light complete	3SU11066AA201AA0	8742070	
3SB32526BA200CC0	7449089	Indicator light complete	3SU11066AA203AA0		
3SB32526BA30	7448875	Indicator light complete	3SU11066AA301AA0	1736779	
3SB32526BA300CC0	7449503	Indicator light complete	3SU11066AA303AA0		
3SB32526BA40	7449083	Indicator light complete	3SU11066AA401AA0	8742074	
3SB32526BA400CC0	7449506	Indicator light complete	3SU11066AA403AA0		
3SB32526BA50	7449500	Indicator light complete	3SU11066AA501AA0		
3SB32526BA500CC0	7449519	Indicator light complete	3SU11066AA503AA0		
3SB32526BA60	7449512	Indicator light complete	3SU11066AA601AA0	8742083	
3SB32526BA600CC0	7449092	Indicator light complete	3SU11066AA603AA0		
3SB32526BA70	7449516	Indicator light complete	3SU11066AA701AA0		
3SB32526BA700CC0	7449525	Indicator light complete	3SU11066AA703AA0		
3SB32530AA31	7449528	Push button, complete	3SU11060AB301BA0		
3SB32530AA41	7448793	Push button, complete	3SU11060AB401BA0	1736778	
3SB32530AA51	7449522	Push button, complete	3SU11060AB501BA0		
3SB32530AA61	7449531	Push button, complete	3SU11060AB601BA0		
3SB32530AA71	7449534	Push button, complete	3SU11060AB701BA0		
3SB32540AA21	7448803	Push button, complete	3SU11060AB201CA0	1736777	
3SB32550AA21	7449095	Push button, complete	3SU11060AB201FA0		
3SB32550AA210CC0	7449538	Push button, complete	3SU11060AB203FA0		
3SB32550AA31	7449547	Push button, complete	3SU11060AB301FA0		
3SB32550AA310CC0	7449540	Push button, complete	3SU11060AB303FA0		
3SB32550AA41	7449099	Push button, complete	3SU11060AB401FA0		
3SB32550AA410CC0	7449544	Push button, complete	3SU11060AB403FA0		
3SB32550AA51	7448780	Push button, complete	3SU11060AB501FA0		
3SB32550AA510CC0	7449553	Push button, complete	3SU11060AB503FA0		
3SB32550AA61	7449556	Push button, complete	3SU11060AB601FA0		
3SB32550AA610CC0	7449550	Push button, complete	3SU11060AB603FA0		
3SB32550AA71	7449569	Push button, complete	3SU11060AB701FA0		
3SB32550AA710CC0	7449562	Push button, complete	3SU11060AB703FA0		
3SB32570AA41	7448838	Push button, complete	3SU11030AB401BA0		
3SB32570AA61	7448998	Push button, complete	3SU11030AB601BA0		
3SB32570AA71	7449005	Push button, complete	3SU11030AB701BA0		
3SB32661HR20	7450339	Emergency stop complete	3SU10001HB200AA0	8741730	Collar required: 8742272

3SB33020AA51	7450332	Front element for push button	3SU10000AB500AA0	8741683	round, collar 8742272 & module required
3SB34000A	4112983	Auxiliary contact block	3SU14001AA101FA0	1736816	
3SB34000AA	7429568	Auxiliary contact block	3SU14001AA101QA0		
3SB34000B	4111340	Auxiliary contact block	3SU14001AA101BA0	8742210	
3SB34000BA	7429458	Auxiliary contact block	3SU14001AA101LA0	1736817	
3SB34000C	4111362	Auxiliary contact block	3SU14001AA101CA0	8742229	
3SB34000CA	7429433	Auxiliary contact block	3SU14001AA101MA0	1736818	
3SB34000D	4112012	Auxiliary contact block	3SU14001AA101DA0	1736814	
3SB34000DA	7429492	Auxiliary contact block	3SU14001AA101NA0		
3SB34000E	4112006	Auxiliary contact block	3SU14001AA101EA0	1736815	
3SB34000EA	7429562	Auxiliary contact block	3SU14001AA101PA0	1736864	
3SB34000H	7429495	Auxiliary contact block	3SU14001AA101GA0		
3SB34000HA	7429571	Auxiliary contact block	3SU14001AA101RA0		
3SB34000J	7429499	Auxiliary contact block	3SU14001AA101BA0	8742210	
3SB34000K	7429489	Auxiliary contact block	3SU14001AA101CA0	8742229	
3SB34000L	7429574	Auxiliary contact block	-		No replacement planned from Siemens
3SB34000M	7429578	Auxiliary contact block	3SU14001AA101HA0	1355658	
3SB34000Q	7429509	Auxiliary contact block	3SU14001AA101EA0	1736815	incl. label plate 3SU19000AY610AA0
3SB34001A	4111839	Lamp holder block for control circuit devices	-		No replacement, only LEDmodule required
3SB34001B	7429587	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	
3SB34001C	4555289	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	
3SB34001D	7429506	Lamp holder block for control circuit devices	3SU14011BB601AA0	8742250	
3SB34001F	7429515	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	
3SB34001G	7352774	Lamp holder block for control circuit devices	3SU14001CK101AA0	1736820	
3SB34001H	7429518	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	
3SB34001L	7429580	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	LED module
3SB34001M	7429584	Lamp holder block for control circuit devices	3SU14011BG601AA0	1736833	Screw terminal connection, for front plate mounting
3SB34001N	7429593	Lamp holder block for control circuit devices	-		no replacement
3SB34001PA	4111952	Lamp holder block for control circuit devices	3SU14011BB301AA0	8742241	
3SB34001PB	4111946	Lamp holder block for control circuit devices	3SU14011BB201AA0	8742232	
3SB34001PC	4111930	Lamp holder block for control circuit devices	3SU14011BB401AA0	8742244	
3SB34001PD	4111788	Lamp holder block for control circuit devices	3SU14011BB501AA0	8742257	
3SB34001PE	4111902	Lamp holder block for control circuit devices	3SU14011BB601AA0	8742250	
3SB34001QA	4532860	Lamp holder block for control circuit devices	3SU14011BC301AA0		
3SB34001QB	4532876	Lamp holder block for control circuit devices	3SU14011BC201AA0		
3SB34001QC	4532882	Lamp holder block for control circuit devices	3SU14011BC401AA0	1736827	
3SB34001QD	4532898	Lamp holder block for control circuit devices	3SU14011BC501AA0		
3SB34001QE	4532905	Lamp holder block for control circuit devices	3SU14011BC601AA0	1355645	
3SB34001RA	4112028	Lamp holder block for control circuit devices	3SU14011BF301AA0	8742266	
3SB34001RB	4111889	Lamp holder block for control circuit devices	3SU14011BF201AA0	8742263	

3SB34001RC	4111873	Lamp holder block for control circuit devices	3SU14011BF401AA0	8742260	
3SB34001RD	4111867	Lamp holder block for control circuit devices	3SU14011BF501AA0	1355664	
3SB34001RE	4111845	Lamp holder block for control circuit devices	3SU14011BF601AA0	8742077	
3SB34002A	7352777	Lamp holder block for control circuit devices	3SU14001CK101AA0	1736820	
3SB34003A	7429596	n/a	-		no replacement, only LEDmodule required
3SB34003C	7429461	n/a	-		no replacement, only LEDmodule required
3SB34003F	7429590	n/a	-		no replacement, only LEDmodule required
3SB34003M	7429600	n/a	-		no replacement, only LEDmodule required
3SB34003P	7429455	n/a	-		no replacement, only LEDmodule required
3SB34003S	7429603	n/a	-		no replacement, only LEDmodule required
3SB34003U	7429607	n/a	-		no replacement, only LEDmodule required
3SB34030A	7429521	Auxiliary contact block	3SU14001AA103FA0		
3SB34030AA	7429619	Auxiliary contact block	3SU14001AA103QA0		
3SB34030B	4532911	Auxiliary contact block	3SU14001AA103BA0	8742222	
3SB34030BA	7429613	Auxiliary contact block	3SU14001AA103LA0		
3SB34030C	4532927	Auxiliary contact block	3SU14001AA103CA0	8742169	
3SB34030CA	7429622	Auxiliary contact block	3SU14001AA103MA0		
3SB34030D	7429524	Auxiliary contact block	3SU14001AA103DA0	1736819	
3SB34030DA	7429625	Auxiliary contact block	3SU14001AA103NA0		
3SB34030E	7429528	Auxiliary contact block	3SU14001AA103EA0		
3SB34030EA	7429629	Auxiliary contact block	3SU14001AA103PA0		
3SB34030H	7429638	Auxiliary contact block	3SU14001AA103GA0		
3SB34030M	7429635	Auxiliary contact block	3SU14001AA103HA0	1355659	
3SB34031A	4532933	Lamp holder block for control circuit devices	-		no replacement, only LEDmodule required
3SB34031C	4555223	Lamp holder block for control circuit devices	3SU14011BH603AA0		
3SB34031PA	7429644	Lamp holder block for control circuit devices	3SU14011BB303AA0	1355661	
3SB34031PB	7429445	Lamp holder block for control circuit devices	3SU14011BB203AA0	1355660	
3SB34031PC	7429486	Lamp holder block for control circuit devices	3SU14011BB403AA0	8742248	
3SB34031PD	7429537	Lamp holder block for control circuit devices	3SU14011BB503AA0	1355663	
3SB34031PE	7429442	Lamp holder block for control circuit devices	3SU14011BB603AA0	8742254	
3SB34031QA	7429647	Lamp holder block for control circuit devices	3SU14011BC303AA0		
3SB34031QB	7429641	Lamp holder block for control circuit devices	3SU14011BC203AA0		
3SB34031QC	7429650	Lamp holder block for control circuit devices	3SU14011BC403AA0		
3SB34031QD	7429653	Lamp holder block for control circuit devices	3SU14011BC503AA0		
3SB34031QE	7429657	Lamp holder block for control circuit devices	3SU14011BC603AA0		
3SB34031RA	7429666	Lamp holder block for control circuit devices	3SU14011BF303AA0	1736829	
3SB34031RB	7429530	Lamp holder block for control circuit devices	3SU14011BF203AA0	1736828	
3SB34031RC	7429669	Lamp holder block for control circuit devices	3SU14011BF403AA0	1736830	
3SB34031RD	7429663	Lamp holder block for control circuit devices	3SU14011BF503AA0	1736831	
3SB34031RE	7429473	Lamp holder block for control circuit devices	3SU14011BF603AA0	1736832	

3SB34110B	4532949	Auxiliary contact block	3SU14003AA105BA0		
3SB34110C	4532955	Auxiliary contact block	3SU14003AA105CA0		
3SB34111A	4532977	Lamp holder block for control circuit devices	-		no replacement, only LEDmodule required
3SB34200B	4555469	Auxiliary contact block	3SU14002AA101BA0	8742153	
3SB34200BA	7429467	Auxiliary contact block	3SU14002AA101LA0	1736822	
3SB34200C	4555330	Auxiliary contact block	3SU14002AA101CA0	8742162	
3SB34200CA	7429439	Auxiliary contact block	3SU14002AA101MA0	1736824	
3SB34201A	4555346	Lamp holder block for control circuit devices	-		no replacement, only LEDmodule required
3SB34201C	7429534	Lamp holder block for control circuit devices	-		no replacement, only LEDmodule required
3SB34201PA	7429543	Lamp holder block for control circuit devices	3SU14012BB301AA0	1736836	
3SB34201PB	7429477	Lamp holder block for control circuit devices	3SU14012BB201AA0	1736834	
3SB34201PC	7429470	Lamp holder block for control circuit devices	3SU14012BB401AA0	1736838	
3SB34201PD	7429546	Lamp holder block for control circuit devices	3SU14012BB501AA0	1736841	
3SB34201PE	7429427	Lamp holder block for control circuit devices	3SU14012BB601AA0	8742279	
3SB34201QA	7429672	Lamp holder block for control circuit devices	3SU14012BC301AA0		
3SB34201QB	7429675	Lamp holder block for control circuit devices	3SU14012BC201AA0		
3SB34201QC	7429679	Lamp holder block for control circuit devices	3SU14012BC401AA0		
3SB34201QE	7429681	Lamp holder block for control circuit devices	3SU14012BC601AA0		
3SB34201RA	7429685	Lamp holder block for control circuit devices	3SU14012BF301AA0		
3SB34201RB	7429694	Lamp holder block for control circuit devices	3SU14012BF201AA0		
3SB34201RC	7429464	Lamp holder block for control circuit devices	3SU14012BF401AA0		
3SB34201RD	7429697	Lamp holder block for control circuit devices	3SU14012BF501AA0		
3SB34201RE	7429436	Lamp holder block for control circuit devices	3SU14012BF601AA0	1355671	
3SB34230B	7429540	Auxiliary contact block	3SU14002AA103BA0	8742165	
3SB34230BA	7429691	Auxiliary contact block	3SU14002AA103LA0		
3SB34230C	7429451	Auxiliary contact block	3SU14002AA103CA0	8742178	
3SB34230CA	7429701	Auxiliary contact block	3SU14002AA103MA0	1736825	
3SB34231PA	7429559	Lamp holder block for control circuit devices	3SU14012BB303AA0	1736837	
3SB34231PB	7429552	Lamp holder block for control circuit devices	3SU14012BB203AA0	1736835	
3SB34231PC	7429556	Lamp holder block for control circuit devices	3SU14012BB403AA0	1736840	
3SB34231PD	7429704	Lamp holder block for control circuit devices	3SU14012BB503AA0	1736842	
3SB34231PE	7429565	Lamp holder block for control circuit devices	3SU14012BB603AA0	1736843	
3SB34231QB	7429717	Lamp holder block for control circuit devices	3SU14012BC203AA0		
3SB34231QC	7429710	Lamp holder block for control circuit devices	3SU14012BC403AA0		
3SB34231QE	7429723	Lamp holder block for control circuit devices	3SU14012BC603AA0		
3SB34231RA	7429726	Lamp holder block for control circuit devices	3SU14012BF303AA0		
3SB34231RB	7429720	Lamp holder block for control circuit devices	3SU14012BF203AA0		
3SB34231RC	7429739	Lamp holder block for control circuit devices	3SU14012BF403AA0		
3SB34231RD	7429732	Lamp holder block for control circuit devices	3SU14012BF503AA0		
3SB34231RE	7429736	Lamp holder block for control circuit devices	3SU14012BF603AA0		

3SB34232F	7429745	n/a	3SU14002DA103AA0		
3SB34232G	7429748	n/a	3SU14002DA503AA0		
3SB34232H	7429742	n/a	3SU14002DA433AA0		
3SB35000AA11	4532983	Front element for push button	3SU10500AB100AA0	8741673	Collar required: 8742288
3SB35000AA12	7429940	Front element for push button	3SU10500CB100AA0		Collar required: 8742288
3SB35000AA21	4532999	Front element for push button	3SU10500AB200AA0	8741897	Collar required: 8742288
3SB35000AA22	7429944	Front element for push button	3SU10500CB200AA0		Collar required: 8742288
3SB35000AA31	4533009	Front element for push button	3SU10500AB300AA0	1355623	Collar required: 8742288
3SB35000AA32	7429953	Front element for push button	3SU10500CB300AA0		Collar required: 8742288
3SB35000AA41	4533015	Front element for push button	3SU10500AB400AA0	8741891	Collar required: 8742288
3SB35000AA42	7429956	Front element for push button	3SU10500CB400AA0		
3SB35000AA51	4533021	Front element for push button	3SU10500AB500AA0	8741901	Collar required: 8742288
3SB35000AA52	7429950	Front element for push button	3SU10500CB500AA0		Collar required: 8742288
3SB35000AA61	4533043	Front element for push button	3SU10500AB600AA0	8741904	Collar required: 8742288
3SB35000AA610AA0	7429969	Front element for push button	3SU10500AB600AB0		Collar required: 8742288
3SB35000AA62	7429962	Front element for push button	3SU10500CB600AA0		
3SB35000AA71	7429818	Front element for push button	3SU10500AB700AA0	8741908	Collar required: 8742288
3SB35000AA81	7429811	Front element for push button	3SU10500AB400AC0	1038529	Collar required: 8742288
3SB35000AB01	7429815	Front element for push button	3SU10500AB200AD0	1038528	Collar required: 8742288
3SB35000AB11	7429824	Front element for push button	3SU10500AB600AC0	1736720	Collar required: 8742288
3SB35000AB21	7429827	Front element for push button	3SU10500AB100AD0		Collar required: 8742288
3SB35000AB51	7429975	Front element for push button	3SU10500AB800AA0		
3SB35000AC81	7429978	Front element for push button	3SU10500AB500AR0		Collar required: 8742288
3SB35000BA11	7429972	Front element for push button	3SU10500BB100AA0	1736721	Collar required: 8742288
3SB35000BA21	7429821	Front element for push button	3SU10500BB200AA0	1736723	Collar required: 8742288
3SB35000BA31	7429830	Front element for push button	3SU10500BB300AA0	1736724	Collar required: 8742288
3SB35000BA41	7429981	Front element for push button	3SU10500BB400AA0	1736725	Collar required: 8742288
3SB35000BA51	7429833	Front element for push button	3SU10500BB500AA0	1736726	Collar required: 8742288
3SB35000BA61	7429984	Front element for push button	3SU10500BB600AA0	1736727	Collar required: 8742288
3SB35000CA21	7429988	Front element for push button	3SU10500BA200AA0		
3SB35000DA11	5186907	Front element for push button	3SU10500AA100AA0	1355615	Collar required: 8742288
3SB35000DA21	5186913	Front element for push button	3SU10500AA200AA0	1355616	Collar required: 8742288
3SB35000DA31	7429997	Front element for push button	3SU10500AA300AA0	1355618	Collar required: 8742288
3SB35000DA41	5186929	Front element for push button	3SU10500AA400AA0	1355619	Collar required: 8742288
3SB35000DA51	7429990	Front element for push button	3SU10500AA500AA0	1355620	
3SB35000DA61	7429795	Front element for push button	3SU10500AA600AA0	1355621	
3SB35001AA20	7430004	Emergency stop complete	3SU10501JB200AA0	1736729	Collar required: 8742288
3SB35001BA20	4533059	Emergency stop complete	3SU10501HF200AA0	1355627	Collar required: 8742288
3SB35001CA11	7429837	Front element for mushroom push-button	3SU10501BA100AA0	1355624	Collar required: 8742288
3SB35001CA21	7429767	Front element for mushroom push-button	3SU10501BA200AA0	8741917	Collar required: 8742288

3SB35001CA31	7430007	Front element for mushroom push-button	3SU10501BA300AA0		Collar required: 8742288
3SB35001CA41	7430001	Front element for mushroom push-button	3SU10511BA400AA0		Collar required: 8742288
3SB35001DA11	7430010	Front element for mushroom push-button	3SU10501AD100AA0		Collar required: 8742288
3SB35001DA21	7430013	Front element for mushroom push-button	3SU10501AD200AA0		Collar required: 8742288
3SB35001DA31	7430017	Front element for mushroom push-button	3SU10501AD300AA0		Collar required: 8742288
3SB35001DA41	7429846	Front element for mushroom push-button	3SU10501AD400AA0		Collar required: 8742288
3SB35001EA11	7430026	Front element for mushroom push-button	3SU10501AA100AA0		Collar required: 8742288
3SB35001EA21	7430029	Front element for mushroom push-button	3SU10501AA200AA0		Collar required: 8742288
3SB35001FA20	7429849	Emergency stop complete	3SU10501GB200AA0	8741914	Collar required: 8742288
3SB35001GA11	4533065	Front element for mushroom push-button	3SU10501BD100AA0	8741910	Collar required: 8742288
3SB35001GA21	4533071	Front element for mushroom push-button	3SU10501BD200AA0	1355625	Collar required: 8742288
3SB35001GA31	4533087	Front element for mushroom push-button	3SU10501BD300AA0		Collar required: 8742288
3SB35001GA41	4533093	Front element for mushroom push-button	3SU10501BD400AA0	1736728	Collar required: 8742288
3SB35001HA10	7430023	Emergency stop complete	3SU10501HB100AA0		Collar required: 8742288
3SB35001HA20	4533100	Emergency stop complete	3SU10501HB200AA0	8741926	Collar required: 8742288
3SB35001HA26	7430032	Emergency stop complete	-		No replacement planned from Siemens
3SB35001JA20	7430035	Emergency stop complete	3SU10501HG200AA0		Collar required: 8742288
3SB35001KA20	7429773	Emergency stop complete	3SU10501HR200AA0	1355588	Collar required: 8742288
3SB35001LA20	7430039	Emergency stop complete	3SU10501HK200AA0		Collar required: 8742288
3SB35001MA20	7430048	Emergency stop complete	3SU10501HQ200AA0		Collar required: 8742288
3SB35001QA11	7430041	Front element for mushroom push-button	3SU10501CD100AA0		Collar required: 8742288
3SB35001QA21	7430045	Front element for mushroom push-button	3SU10501CD200AA0		
3SB35001QA31	7430054	Front element for mushroom push-button	3SU10501CD300AA0		Collar required: 8742288
3SB35001QA41	7429843	Front element for mushroom push-button	3SU10501CD400AA0		Collar required: 8742288
3SB35001RA11	7430057	Front element for mushroom push-button	3SU10501CA100AA0		
3SB35001RA21	7430051	Front element for mushroom push-button	3SU10501CA200AA0		Collar required: 8742288
3SB35001TA20	4533116	Emergency stop complete	3SU10501HA200AA0	8741923	Collar required: 8742288
3SB35001UA20	7430060	Emergency stop complete	3SU10501HX200AA0		
3SB35001YA20	7430063	Emergency stop complete	3SU10501HH200AA0		
3SB35002DA11	4533122	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB35002DA110PA0	7430067	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB35002DA21	7430076	Front element for selector switch	3SU10522BL200AA0		Collar required: 8742288
3SB35002DA61	7430073	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB35002EA11	4533138	Front element for selector switch	3SU10522BM600AA0	8741945	Collar required: 8742288
3SB35002EA110PA0	7430082	Front element for selector switch	3SU10522BM600AA0	8741945	Collar required: 8742288
3SB35002EA21	7430085	Front element for selector switch	3SU10522BM200AA0		
3SB35002EA41	7430089	Front element for selector switch	3SU10522BM400AA0	1355644	
3SB35002EA61	7430098	Front element for selector switch	3SU10522BM600AA0	8741945	
3SB35002FA11	4533144	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35002FA21	7430091	Front element for selector switch	3SU10522BN200AA0		

3SB35002FA41	7430095	Front element for selector switch	3SU10522BN400AA0		Collar required: 8742288
3SB35002FA61	7430105	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35002GA11	4533150	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35002GA41	7430102	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35002HA11	7429852	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB35002HA21	7430114	Front element for selector switch	3SU10522BF200AA0	1355640	
3SB35002HA41	7430118	Front element for selector switch	3SU10522BF400AA0	1355642	Collar required: 8742288
3SB35002HA61	7430127	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB35002KA11	4533166	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB35002KA21	7430120	Front element for selector switch	3SU10522BF200AA0	1355640	
3SB35002KA41	7430124	Front element for selector switch	3SU10522BF400AA0	1355642	Collar required: 8742288
3SB35002KA61	7430133	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB35002LA11	4533172	Front element for selector switch	3SU10522BC600AA0	1355639	
3SB35002LA21	7430136	Front element for selector switch	3SU10522BC200AA0		
3SB35002LA41	7430130	Front element for selector switch	3SU10522BC400AA0	1355638	Collar required: 8742288
3SB35002LA61	7429855	Front element for selector switch	3SU10522BC600AA0	1355639	
3SB35002PA11	5186935	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB35002PA21	5186941	Front element for selector switch	3SU10522BF200AA0	1355640	
3SB35002PA41	7430149	Front element for selector switch	3SU10522BF400AA0	1355642	Collar required: 8742288
3SB35002PA61	7430142	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB35002QA11	5187045	Front element for selector switch	3SU10522BC600AA0	1355639	
3SB35002SA11	5186890	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB35002SA21	5186985	Front element for selector switch	3SU10522BL200AA0		Collar required: 8742288
3SB35002SA61	7430152	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB35002TA11	5186991	Front element for selector switch	3SU10522BM600AA0	8741945	
3SB35002TA21	5187001	Front element for selector switch	3SU10522BM200AA0		
3SB35002TA41	7430161	Front element for selector switch	3SU10522BM400AA0	1355644	
3SB35002TA61	7430164	Front element for selector switch	3SU10522BM600AA0	8741945	
3SB35002UA11	7429859	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35002VA11	7430174	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35003AG01	7430199	Front element for selector switch	3SU10504GF010AA0		Collar required: 8742288
3SB35003AG11	7430192	Front element for selector switch	3SU10504GF110AA0		Collar required: 8742288
3SB35003AG21	7429868	Front element for selector switch	3SU10504GF210AA0		Collar required: 8742288
3SB35003AH01	7430196	Front element for selector switch	3SU10504FF010AA0		Collar required: 8742288
3SB35003AH11	7430206	Front element for selector switch	3SU10504FF110AA0		Collar required: 8742288
3SB35003AH21	7430209	Front element for selector switch	3SU10504FF210AA0		Collar required: 8742288
3SB35003AJ01	7429789	Front element for selector switch	3SU10504HF010AA0		Collar required: 8742288
3SB35003AJ11	7430203	Front element for selector switch	3SU10504HF110AA0		Collar required: 8742288
3SB35003AJ21	7429861	Front element for selector switch	3SU10504HF210AA0		Collar required: 8742288
3SB35003AK01	7430212	Front element for selector switch	3SU10504JF010AA0		Collar required: 8742288

3SB35003AK11	7430215	Front element for selector switch	3SU10504JF110AA0		Collar required: 8742288
3SB35003AK21	7430219	Front element for selector switch	3SU10504JF210AA0		Collar required: 8742288
3SB35003BG01	7430228	Front element for selector switch	3SU10504GC010AA0		Collar required: 8742288
3SB35003BH01	7430221	Front element for selector switch	3SU10504FC010AA0		Collar required: 8742288
3SB35003BJ01	7430225	Front element for selector switch	3SU10504HC010AA0		Collar required: 8742288
3SB35003BK01	7430234	Front element for selector switch	3SU10504JC010AA0		Collar required: 8742288
3SB35003DG11	7430237	Front element for selector switch	3SU10504GL110AA0		Collar required: 8742288
3SB35003DH11	7430231	Front element for selector switch	3SU10504FL110AA0		Collar required: 8742288
3SB35003DJ01	7429782	Front element for selector switch	3SU10504HL010AA0		Collar required: 8742288
3SB35003DJ11	7430240	Front element for selector switch	3SU10504HL110AA0		Collar required: 8742288
3SB35003EJ01	7429865	Front element for selector switch	3SU10504HM010AA0		Collar required: 8742288
3SB35003GK61	7430247	Front element for selector switch	3SU10504JP310AA0		Collar required: 8742288
3SB35003PA11	7429874	Front element for selector switch	3SU10522CF600AA0		
3SB35003PA21	7430259	Front element for selector switch	3SU10522CF200AA0		
3SB35003QA11	7430265	Front element for selector switch	3SU10522CC600AA0		Collar required: 8742288
3SB35003QA21	7430269	Front element for selector switch	3SU10522CC600AA0		Collar required: 8742288
3SB35003QA61	7430271	Front element for selector switch	3SU10522CC600AA0		Collar required: 8742288
3SB35003SA11	7430275	Front element for selector switch	3SU10522CL600AA0		
3SB35003SA21	7430284	Front element for selector switch	3SU10522CL200AA0		Collar required: 8742288
3SB35003TA11	7429877	Front element for selector switch	3SU10522CM600AA0		
3SB35003TA21	7430290	Front element for selector switch	3SU10522CM200AA0		
3SB35003TA41	7430293	Front element for selector switch	3SU10522CM400AA0		
3SB35003TA61	7430297	Front element for selector switch	3SU10522CM600AA0		
3SB35003UA11	7430307	Front element for selector switch	3SU10522CN600AA0		Collar required: 8742288
3SB35003UA21	7430300	Front element for selector switch	3SU10522CN200AA0		
3SB35003UA41	7430304	Front element for selector switch	3SU10522CN600AA0		Collar required: 8742288
3SB35003VA11	7430316	Front element for selector switch	3SU10522CP600AA0		
3SB35003VA21	7430310	Front element for selector switch	3SU10522CP200AA0		
3SB35004AD01	4533188	Front element for selector switch	3SU10504BF010AA0	1355633	Collar required: 8742288
3SB35004AD11	7429871	Front element for selector switch	3SU10504BF110AA0	8741920	
3SB35004AD21	7430326	Front element for selector switch	3SU10504BF210AA0		Collar required: 8742288
3SB35004AL01	7430335	Front element for selector switch	3SU10504CF010AA0		Collar required: 8742288
3SB35004AL11	7430338	Front element for selector switch	3SU10504CF110AA0		Collar required: 8742288
3SB35004AL21	7430332	Front element for selector switch	3SU10504CF210AA0		Collar required: 8742288
3SB35004AM11	7430341	Front element for selector switch	3SU10504DF110AA0		Collar required: 8742288
3SB35004BD01	4533201	Front element for selector switch	3SU10504BC010AA0	1355631	Collar required: 8742288
3SB35004BL01	7430344	Front element for selector switch	3SU10504CC010AA0		Collar required: 8742288
3SB35004CD01	7430348	Front element for selector switch	3SU10504BC010AA0	1355631	Collar required: 8742288
3SB35004DD01	4533217	Front element for selector switch	3SU10504BL010AA0	1736730	Collar required: 8742288
3SB35004DD11	7429880	Front element for selector switch	3SU10504BL110AA0	8741939	Collar required: 8742288

3SB35004DD21	7430357	Front element for selector switch	3SU10504BL210AA0		Collar required: 8742288
3SB35004DD31	7430350	Front element for selector switch	3SU10504BL310AA0		Collar required: 8742288
3SB35004DD41	7430354	Front element for selector switch	3SU10504BL410AA0		Collar required: 8742288
3SB35004DD51	7430363	Front element for selector switch	3SU10504BL510AA0		Collar required: 8742288
3SB35004DL01	7430360	Front element for selector switch	3SU10504CL010AA0		Collar required: 8742288
3SB35004DL11	7430379	Front element for selector switch	3SU10504CL110AA0		Collar required: 8742288
3SB35004DM11	7430372	Front element for selector switch	3SU10504DL110AA0		Collar required: 8742288
3SB35004ED01	4533223	Front element for selector switch	3SU10504BM010AA0	1736731	Collar required: 8742288
3SB35004EL01	7429883	Front element for selector switch	3SU10504CM010AA0		Collar required: 8742288
3SB35004FD51	7429760	Front element for selector switch	3SU10504BN510AA0		Collar required: 8742288
3SB35004GD01	4533245	Front element for selector switch	3SU10504BP010AA0		Collar required: 8742288
3SB35004GD61	7429758	Front element for selector switch	3SU10504BP610AA0		Collar required: 8742288
3SB35004LD01	7429770	Front element for selector switch	3SU10505BF010AA0	8741942	
3SB35004LD11	7429764	Front element for selector switch	3SU10505BF110AA0	8741951	
3SB35004LD21	7430376	Front element for selector switch	3SU10505BF210AA0		Collar required: 8742288
3SB35004LF01	7430385	Front element for selector switch	3SU10505HF110AA0		Collar required: 8742288
3SB35004LF11	7430388	Front element for selector switch	3SU10505HF010AA0		Collar required: 8742288
3SB35004MD01	7429754	Front element for selector switch	3SU10505BC010AA0	1355634	Collar required: 8742288
3SB35004MF11	7429887	Front element for selector switch	3SU10505HC010AA0	1736733	Collar required: 8742288
3SB35004PD01	7430382	Front element for selector switch	3SU10505BL010AA0	1736732	Collar required: 8742288
3SB35004PD11	7429896	Front element for selector switch	3SU10505BL110AA0	8741954	Collar required: 8742288
3SB35004PD21	7430391	Front element for selector switch	3SU10505BL210AA0		Collar required: 8742288
3SB35004PD31	7430394	Front element for selector switch	3SU10505BL310AA0		Collar required: 8742288
3SB35004PD41	7430398	Front element for selector switch	3SU10505BL410AA0		Collar required: 8742288
3SB35004PD51	7430401	Front element for selector switch	3SU10505BL110AA0	8741954	Collar required: 8742288
3SB35004QD01	7430414	Front element for selector switch	3SU10505BM010AA0		Collar required: 8742288
3SB35004RD01	7430417	Front element for selector switch	3SU10505BN010AA0		Collar required: 8742288
3SB35004RD21	7430411	Front element for selector switch	3SU10505BN210AA0		Collar required: 8742288
3SB35004RD51	7430420	Front element for selector switch	3SU10505BN510AA0		Collar required: 8742288
3SB35004SD01	7430423	Front element for selector switch	3SU10505BP010AA0		Collar required: 8742288
3SB35004SD31	7430427	Front element for selector switch	3SU10505BP310AA0		Collar required: 8742288
3SB35004SD61	7430436	Front element for selector switch	3SU10505BP610AA0		Collar required: 8742288
3SB35005AD01	7430439	Front element for selector switch	3SU10505PF010AA0		Collar required: 8742288
3SB35005AD11	7430433	Front element for selector switch	3SU10505PF110AA0		Collar required: 8742288
3SB35005AE11	7429899	Front element for selector switch	3SU10505QF010AA0		Collar required: 8742288
3SB35005AE21	7430442	Front element for selector switch	3SU10505RF110AA0		Collar required: 8742288
3SB35005AE31	7430445	Front element for selector switch	3SU10505RF010AA0		
3SB35005AE41	7430449	Front element for selector switch	3SU10505SF110AA0		Collar required: 8742288
3SB35005AE51	7430458	Front element for selector switch	3SU10505SF010AA0		Collar required: 8742288
3SB35005AE71	7430451	Front element for selector switch	3SU10505TF010AA0		Collar required: 8742288

3SB35005BD01	7429893	Front element for selector switch	3SU10505PC010AA0		Collar required: 8742288
3SB35005DD01	7429751	Front element for selector switch	3SU10505PL010AA0		Collar required: 8742288
3SB35005DD41	7430464	Front element for selector switch	3SU10505PL410AA0		Collar required: 8742288
3SB35005ED01	7430467	Front element for selector switch	3SU10505PM010AA0		Collar required: 8742288
3SB35005FD01	7430461	Front element for selector switch	3SU10505PN010AA0		Collar required: 8742288
3SB35005FD51	7430473	Front element for selector switch	3SU10505PN510AA0		Collar required: 8742288
3SB35005GD01	7430477	Front element for selector switch	3SU10505PP010AA0		Collar required: 8742288
3SB35010AA01	7430483	Front element for push button	3SU10510AB000AA0		without collar
3SB35010AA21	4533267	Front element for push button	3SU10510AB200AA0	8741958	Collar required: 8742288
3SB35010AA210PA0	7430492	Front element for push button	3SU10510AB200AA0	8741958	Collar required: 8742288
3SB35010AA31	4533273	Front element for push button	3SU10510AB300AA0	8741967	Collar required: 8742288
3SB35010AA310PA0	7430495	Front element for push button	3SU10510AB300AA0	8741967	Collar required: 8742288
3SB35010AA41	4533289	Front element for push button	3SU10510AB400AA0	8741960	Collar required: 8742288
3SB35010AA410PA0	7430499	Front element for push button	3SU10510AB400AA0	8741960	
3SB35010AA51	4533295	Front element for push button	3SU10510AB500AA0	8741964	Collar required: 8742288
3SB35010AA510PA0	7430509	Front element for push button	3SU10510AB500AA0	8741964	Collar required: 8742288
3SB35010AA61	4533302	Front element for push button	3SU10510AB600AA0	8741973	Collar required: 8742288
3SB35010AA610PA0	7430502	Front element for push button	3SU10510AB600AA0	8741973	Collar required: 8742288
3SB35010AA71	4533324	Front element for push button	3SU10510AB700AA0	8741976	Collar required: 8742288
3SB35010AA710PA0	7430506	Front element for push button	3SU10510AB700AA0	8741976	Collar required: 8742288
3SB35010BA21	7430515	Front element for push button	3SU10510BB200AA0		without collar
3SB35010BA31	7430518	Front element for push button	3SU10510BB300AA0		without collar
3SB35010BA41	7430512	Front element for push button	3SU10510BB400AA0		without collar
3SB35010BA51	7430521	Front element for push button	3SU10510BB500AA0		without collar
3SB35010BA61	7429903	Front element for push button	3SU10510BB600AA0		Collar required: 8742288
3SB35010BA71	7429906	Front element for push button	3SU10510BB700AA0		without collar
3SB35010DA01	8470882	Front element for push button	3SU10510AA300AA0		
3SB35010DA21	7429900	Front element for push button	3SU10510AA200AA0	1355636	Collar required: 8742288
3SB35010DA31	7430524	Front element for push button	3SU10510AA300AA0		
3SB35010DA41	7430528	Front element for push button	3SU10510AA400AA0	1355637	Collar required: 8742288
3SB35010DA51	7430537	Front element for push button	3SU10510AA500AA0		
3SB35010DA61	7429776	Front element for push button	3SU10510AA600AA0		Collar required: 8742288
3SB35010DA71	7429919	Front element for push button	3SU10510AA700AA0		Collar required: 8742288
3SB35011CA21	7429786	Front element for mushroom push-button	3SU10511BA200AA0	1736734	Collar required: 8742288
3SB35011CA31	7429805	Front element for mushroom push-button	3SU10511BA300AA0		Collar required: 8742288
3SB35011CA51	7430534	Front element for mushroom push-button	3SU10511BA500AA0		Collar required: 8742288
3SB35011CA71	7430543	Front element for mushroom push-button	3SU10511BA700AA0		Collar required: 8742288
3SB35011DA31	7430546	Front element for mushroom push-button	3SU10511AD300AA0		Collar required: 8742288
3SB35011DA41	7429798	Front element for mushroom push-button	3SU10511AD400AA0		Collar required: 8742288
3SB35011DA61	7430540	Front element for mushroom push-button	3SU10511AD600AA0		Collar required: 8742288

3SB35011EA21	7429912	Front element for mushroom push-button	3SU10511AA200AA0		Collar required: 8742288
3SB35011EA31	7430559	Front element for mushroom push-button	3SU10511AA300AA0		Collar required: 8742288
3SB35011EA41	7430552	Front element for mushroom push-button	3SU10511AA400AA0		Collar required: 8742288
3SB35011EA51	7430556	Front element for mushroom push-button	3SU10511AA500AA0		Collar required: 8742288
3SB35011EA71	7430565	Front element for mushroom push-button	3SU10511AA700AA0		
3SB35011GA31	7430568	Front element for mushroom push-button	3SU10511BD300AA0		Collar required: 8742288
3SB35011GA41	7429916	Front element for mushroom push-button	3SU10511BD400AA0		Collar required: 8742288
3SB35011GA61	7429925	Front element for mushroom push-button	3SU10511BD600AA0		Collar required: 8742288
3SB35011GA71	7430562	Front element for mushroom push-button	3SU10511BD600AA0		Collar required: 8742288
3SB35011QA31	7430571	Front element for mushroom push-button	3SU10511CD300AA0		Collar required: 8742288
3SB35011QA41	7429928	Front element for mushroom push-button	3SU10511CD400AA0		Collar required: 8742288
3SB35011QA61	7430574	Front element for mushroom push-button	3SU10511CD600AA0		Collar required: 8742288
3SB35011RA21	7430578	Front element for mushroom push-button	3SU10511CA200AA0		Collar required: 8742288
3SB35011RA31	7430587	Front element for mushroom push-button	3SU10511CA300AA0		
3SB35011RA41	7430580	Front element for mushroom push-button	3SU10511CA400AA0		Collar required: 8742288
3SB35011RA51	7430584	Front element for mushroom push-button	3SU10511CA500AA0		Collar required: 8742288
3SB35011RA71	7430593	Front element for mushroom push-button	3SU10511CA700AA0		
3SB35012DA21	7430596	Front element for selector switch	3SU10522BL200AA0		Collar required: 8742288
3SB35012DA31	7430590	Front element for selector switch	3SU10522BL300AA0		
3SB35012DA41	7430600	Front element for selector switch	3SU10522BL400AA0	1355643	Collar required: 8742288
3SB35012DA51	7430603	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB35012DA71	7430607	Front element for selector switch	3SU10522BL600AA0	8742005	Collar required: 8742288
3SB35012EA21	7430616	Front element for selector switch	3SU10522BM200AA0		
3SB35012EA31	7430619	Front element for selector switch	3SU10522BM300AA0		
3SB35012EA41	7430613	Front element for selector switch	3SU10522BM400AA0	1355644	Collar required: 8742288
3SB35012EA51	7430622	Front element for selector switch	3SU10522BM500AA0		
3SB35012EA71	7430625	Front element for selector switch	3SU10522BM600AA0	8741945	Collar required: 8742288
3SB35012EA710PA0	7430629	Front element for selector switch	3SU10522BM600AA0	8741945	Collar required: 8742288
3SB35012FA21	7430638	Front element for selector switch	3SU10522BN200AA0		
3SB35012FA31	7430631	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35012FA41	7430635	Front element for selector switch	3SU10522BN400AA0		Collar required: 8742288
3SB35012FA71	7430647	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35012GA21	7430641	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012GA41	7430653	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012GA71	7430666	Front element for selector switch	3SU10522CP600AA0		
3SB35012GA710PA0	7430669	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012HA71	7430663	Front element for selector switch	3SU10522BF600AA0	8741992	Collar required: 8742288
3SB35012KA01	7430672	Front element for selector switch	3SU10522BF000AA0		Collar required: 8742288
3SB35012KA21	7430675	Front element for selector switch	3SU10522BF200AA0	1355640	
3SB35012KA31	7430679	Front element for selector switch	3SU10522BF300AA0		90 Grad, Collar required: 3SU15500AA100AA0

3SB35012KA41	7430688	Front element for selector switch	3SU10522BF400AA0	1355642	Collar required: 8742288
3SB35012KA51	7430681	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB35012KA71	7430685	Front element for selector switch	3SU10522BF600AA0	8741992	Collar required: 8742288
3SB35012LA21	7430694	Front element for selector switch	3SU10522BC200AA0		
3SB35012LA31	7430697	Front element for selector switch	3SU10522BC300AA0		
3SB35012LA41	7430691	Front element for selector switch	3SU10522BC400AA0	1355638	Collar required: 8742288
3SB35012LA51	7430701	Front element for selector switch	3SU10522BC500AA0		
3SB35012LA71	7430704	Front element for selector switch	3SU10522BC600AA0	1355639	white, collar 8742288 required
3SB35012PA21	7429922	Front element for selector switch	3SU10522BF200AA0	1355640	
3SB35012PA31	7430717	Front element for selector switch	3SU10522BF000AA0		Collar required: 8742288
3SB35012PA41	7430710	Front element for selector switch	3SU10522BF400AA0	1355642	Collar required: 8742288 , 90 °
3SB35012PA51	7430714	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB35012PA71	7429931	Front element for selector switch	3SU10522BF600AA0	8741992	white, 90°, collar 8742288 required
3SB35012QA21	7430723	Front element for selector switch	3SU10522BC200AA0		
3SB35012QA41	7430720	Front element for selector switch	3SU10522BC400AA0	1355638	Collar required: 8742288
3SB35012QA71	7430732	Front element for selector switch	3SU10522BC600AA0	1355639	
3SB35012SA01	7430736	Front element for selector switch	3SU10522BL300AA0		
3SB35012SA21	7430745	Front element for selector switch	3SU10522BL200AA0		Collar required: 8742288
3SB35012SA31	7430748	Front element for selector switch	3SU10522BL300AA0		
3SB35012SA41	7430742	Front element for selector switch	3SU10522BL400AA0	1355643	Collar required: 8742288
3SB35012SA51	7430751	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB35012SA71	7430754	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB35012TA01	7430758	Front element for selector switch	3SU10522BM000AA0		Collar required: 8742288
3SB35012TA21	7430767	Front element for selector switch	3SU10522BM200AA0		
3SB35012TA31	7430760	Front element for selector switch	3SU10522BM300AA0		
3SB35012TA41	7430764	Front element for selector switch	3SU10522BM400AA0	1355644	
3SB35012TA51	7430773	Front element for selector switch	3SU10522BM500AA0		
3SB35012TA71	7430776	Front element for selector switch	3SU10522BM600AA0	8741945	white, collar 8742288 required
3SB35012UA21	7430770	Front element for selector switch	3SU10522BN200AA0		
3SB35012UA41	7430782	Front element for selector switch	3SU10522BN400AA0		Collar required: 8742288
3SB35012UA71	7430795	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35012VA31	7430802	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012VA71	7430818	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35013PA21	7430811	Front element for selector switch	3SU10522CF200AA0		
3SB35013PA31	7430815	Front element for selector switch	3SU10522CF300AA0		
3SB35013PA41	7430824	Front element for selector switch	3SU10522CF400AA0		Collar required: 8742288
3SB35013PA51	7430827	Front element for selector switch	3SU10522CF500AA0		Collar required: 8742288
3SB35013PA71	7430821	Front element for selector switch	3SU10522CF600AA0		
3SB35013QA41	7430837	Front element for selector switch	3SU10522CC400AA0		
3SB35013QA51	7430846	Front element for selector switch	3SU10522CC500AA0		

3SB35013QA71	7430849	Front element for selector switch	3SU10522CC600AA0		Collar required: 8742288
3SB35013SA21	7430843	Front element for selector switch	3SU10522CL200AA0		Collar required: 8742288
3SB35013SA31	7430852	Front element for selector switch	3SU10522CL600AA0		
3SB35013SA41	7430855	Front element for selector switch	3SU10522CL400AA0		
3SB35013SA71	7430868	Front element for selector switch	3SU10522CL600AA0		
3SB35013TA21	7430861	Front element for selector switch	3SU10522CM200AA0		
3SB35013TA31	7430865	Front element for selector switch	3SU10522CM600AA0		
3SB35013TA41	7430874	Front element for selector switch	3SU10522CM400AA0		
3SB35013TA51	7430877	Front element for selector switch	3SU10522CM600AA0		
3SB35013TA71	7430871	Front element for selector switch	3SU10522CM600AA0		
3SB35016AA00	7430880	Front element for indicator light	3SU10516AA000AA0		
3SB35016AA20	7429809	Front element for indicator light	3SU10516AA200AA0	8741970	Collar required: 8742288
3SB35016AA30	7429934	Front element for indicator light	3SU10516AA300AA0	8741989	Collar required: 8742288
3SB35016AA40	7429802	Front element for indicator light	3SU10516AA400AA0	8741982	Collar required: 8742288
3SB35016AA50	7429938	Front element for indicator light	3SU10516AA500AA0	8741986	Collar required: 8742288
3SB35016AA60	7429792	Front element for indicator light	3SU10516AA600AA0	8741995	Collar required: 8742288
3SB35016AA70	7429947	Front element for indicator light	3SU10516AA700AA0	8741998	
3SB35016BA00	7430883	Front element for indicator light	3SU10516AA000AA0		
3SB35016BA20	4533330	Front element for indicator light	3SU10516AA200AA0	8741970	Collar required: 8742288
3SB35016BA30	4533346	Front element for indicator light	3SU10516AA300AA0	8741989	Collar required: 8742288
3SB35016BA40	4533352	Front element for indicator light	3SU10516AA400AA0	8741982	Collar required: 8742288
3SB35016BA50	4533368	Front element for indicator light	3SU10516AA500AA0	8741986	Collar required: 8742288
3SB35016BA60	4533374	Front element for indicator light	3SU10516AA600AA0	8741995	Collar required: 8742288
3SB35016BA70	4533380	Front element for indicator light	3SU10516AA700AA0	8741998	Collar required: 8742288
3SB36010AA11	7450336	Push button, complete	3SU11500AB101FA0		
3SB36010AA21	7450345	Push button, complete	3SU11500AB201FA0		
3SB36010AA51	7450348	Push button, complete	3SU11500AB501FA0		
3SB36011HA20	7450342	Push button, complete	3SU11501HB201FH0		
3SB36011HR20	7450351	Push button, complete	3SU11501HB201FG0		
3SB36011TR20	8470905	Push button, complete	3SU11501HA201FG0		
3SB36012PA11	8470909	Selector switch, complete	3SU11502BF601FA0		
3SB36014AD11	7450354	Selector switch, complete	3SU11504BF111FA0	1736799	
3SB36020AA11	7450358	Push button, complete	3SU11500AB101BA0	8742121	
3SB36020AA31	7450367	Push button, complete	3SU11500AB301BA0	1736795	
3SB36020AA41	7450360	Push button, complete	3SU11500AB401BA0	8742131	
3SB36020AA51	7450364	Push button, complete	3SU11500AB501BA0	1736796	
3SB36020AA61	7450373	Push button, complete	3SU11500AB601BA0	1736797	
3SB36022KA11	7450376	Selector switch, complete	3SU11502BF601BA0	8742140	
3SB36022PA11	8470918	Front element for selector switch	3SU10522BF600AA0	8741992	
3SB36030AA21	7450370	Push button, complete	3SU11500AB201CA0	8742125	

3SB36031HA20	7450389	Push button, complete	3SU11501HB201CH0	8741807	
3SB36031HR20	7450382	Push button, complete	3SU11501HB201CG0	1038533	
3SB36046BA20	7450386	Front element for indicator light	3SU11536AA201AA0		inkl. LED Modul
3SB36046BA40	7450395	Front element for indicator light	3SU10516AA400AA0	8741982	Collar 8742288 & module required
3SB36082DA11	7450398	Selector switch, complete	3SU11502BL601LA0		
3SB36082SA11	7450392	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB36082TA11	7450402	Front element for selector switch	3SU10522BM600AA0	8741945	
3SB36102DA11	7450405	Selector switch, complete	3SU11502BL601NA0	1355654	
3SB36102EA11	7450409	Selector switch, complete	3SU11502BM601NA0	1355655	
3SB36102SA11	8470911	Front element for selector switch	3SU10522BL600AA0	8742005	
3SB36102TA11	7450418	Front element for selector switch	3SU10522BM600AA0	8741945	
3SB36200AA41	7450411	Push button, complete	3SU11520AB401BA0	8742143	
3SB36200AA51	7450415	Push button, complete	3SU11520AB501BA0	1736804	
3SB36446BA20	8470915	Indicator light complete	3SU11526AA201AA0	8742156	
3SB36446BA30	7450424	Indicator light complete	3SU11526AA301AA0	1736806	
3SB36446BA40	7450427	Indicator light complete	3SU11526AA401AA0	8742159	
3SB36446BA50	7450421	Indicator light complete	3SU11526AA501AA0	1736807	
3SB36446BA60	7450430	Indicator light complete	3SU11526AA601AA0	8741885	
3SB36450AA31	7450433	Push button, complete	3SU11520AB301BA0	1736803	
3SB36450AA41	7450437	Push button, complete	3SU11520AB401BA0	8742143	
3SB36450AA61	7450446	Push button, complete	3SU11520AB601BA0	8742147	
3SB36460AA21	8470924	Push button, complete	3SU11520AB201CA0	1736802	
3SB36470AA21	8470927	Push button, complete	3SU11520AB201FA0		
3SB36470AA31	8470921	Push button, complete	3SU11520AB301FA0		
3SB36470AA41	8470930	Push button, complete	3SU11520AB401FA0		
3SB36470AA51	8470933	Push button, complete	3SU11520AB501FA0		
3SB36470AA61	8470937	Push button, complete	3SU11520AB601FA0		
3SB36470AA71	7450449	Push button, complete	3SU11520AB701FA0		
3SB36486BA30	8470946	Indicator light complete	3SU11536AA301AA0		
3SB36486BA40	8470949	Indicator light complete	3SU11536AA401AA0		
3SB36510AA61	8470952	Push button, complete	3SU11530AB601FA0		
3SB36526BA60	7450443	Indicator light complete	3SU11566AA601AA0	8742213	
3SB36530AA41	7450452	Push button, complete	3SU11560AB401BA0	1736811	
3SB38010AA3	6491351	Enclosure for control circuit devices	3SU18010AA000AB1	8742308	
3SB38010AB3	6387448	Enclosure for control circuit devices	3SU18010AA000AB2	8742226	
3SB38010AD3	7429316	Enclosure for control circuit devices	3SU18010AA000AC2	8742235	
3SB38010DA3	7429310	Control circuit devices combination in enclosure	3SU18010AB002AB1	1736844	
3SB38010DB3	7429329	Control circuit devices combination in enclosure	3SU18010AC002AB1	1736846	
3SB38010DD3	7429322	Control circuit devices combination in enclosure	3SU18010AD002AB1		
3SB38010DE3	7429326	Control circuit devices combination in enclosure	3SU18010AE002AB1		

3SB38010DF3	5473330	Control circuit devices combination in enclosure	3SU18010NA002AC2	8742305	
3SB38010DG3	6387454	Control circuit devices combination in enclosure	3SU18010NA002AA2	8742301	
3SB38010EF3	7429338	Control circuit devices combination in enclosure	3SU18010NB002AC2	8742314	
3SB38010EG3	7429281	Control circuit devices combination in enclosure	3SU18010NA002AA2	8742301	
3SB38010FF3	7429350	Control circuit devices combination in enclosure	3SU18010BD004AB1		
3SB38010FG3	7429354	Control circuit devices combination in enclosure	3SU18010BE004AB1		
3SB38012AA3	5067597	Enclosure for control circuit devices	3SU18510AA000AB1	8742134	
3SB38012AB3	7429300	Enclosure for control circuit devices	3SU18510AA000AB2		
3SB38012AD3	7429363	Enclosure for control circuit devices	3SU18510AA000AC2	8742137	
3SB38012AE3	7429366	Enclosure for control circuit devices	3SU18510AA000AC1		
3SB38012DA3	7429304	Control circuit devices combination in enclosure	3SU18510AB002AB1	1736853	
3SB38012DB3	7429360	Control circuit devices combination in enclosure	3SU18510AC002AB1	1736854	
3SB38012DD3	7429379	Control circuit devices combination in enclosure	3SU18510AD002AB1		
3SB38012DE3	7429372	Control circuit devices combination in enclosure	3SU18510AE002AB1		
3SB38012DF3	7429332	Control circuit devices combination in enclosure	3SU18510NA002AC2	8742336	
3SB38012DG3	7429271	Control circuit devices combination in enclosure	3SU18510NA002AA2	8742327	
3SB38012DJ3	7429376	Control circuit devices combination in enclosure	3SU18510NC002AC2		
3SB38012DU3	7429385	Control circuit devices combination in enclosure	3SU18510ND002AC2	1736856	
3SB38012EB300CC0	7429388	Enclosure for control circuit devices	?		
3SB38012EC3	7429382	Enclosure for control circuit devices	3SU18510AA000AC2	8742137	
3SB38012EF3	7429293	Control circuit devices combination in enclosure	3SU18510NB002AC2	8742339	
3SB38012EG100CC0	7429391	Control circuit devices combination in enclosure	3SU18510NZ00K0Y		CIN required
3SB38012EG3	7429341	Control circuit devices combination in enclosure	3SU18510NB002AA2	1736855	
3SB38020AA	4111974	Enclosure for control circuit devices	3SU18020AA000AB1	8742317	
3SB38020AA3	6491345	Enclosure for control circuit devices	3SU18020AA000AB1	8742317	
3SB38020DA3	7429344	Control circuit devices combination in enclosure	3SU18020AB002AB1	1736849	
3SB38020DB3	7429297	Control circuit devices combination in enclosure	3SU18020AC002AB1	1736850	
3SB38022AA3	5067581	Enclosure for control circuit devices	3SU18520AA000AB1	8741894	
3SB38022DA3	7429394	Control circuit devices combination in enclosure	3SU18520AB002AB1	1736859	
3SB38022DB3	7429398	Control circuit devices combination in enclosure	3SU18520AC002AB1		
3SB38030AA3	6491339	Enclosure for control circuit devices	3SU18030AA000AB1	8742311	
3SB38030DA3	7429408	Control circuit devices combination in enclosure	3SU18030AB002AB1	1736852	
3SB38030DB3	7429401	Control circuit devices combination in enclosure	3SU18030AD002AB1		
3SB38030DC3	7429405	Control circuit devices combination in enclosure	3SU18030AC002AB1		
3SB38032AA3	5067654	Enclosure for control circuit devices	3SU18530AA000AB1	8742333	
3SB38032DA3	7429414	Control circuit devices combination in enclosure	3SU18530AB002AB1		
3SB38032DB3	7429417	Control circuit devices combination in enclosure	3SU18530AD002AB1		
3SB38032DC3	7429411	Control circuit devices combination in enclosure	3SU18530AZ00K0Y		
3SB38040AA3	6007221	Enclosure for control circuit devices	3SU18040AA000AB1	8742320	
3SB38042AA3	7429275	Enclosure for control circuit devices	3SU18540AA000AB1	8742345	

3SB38060AA3	7429284	Enclosure for control circuit devices	3SU18060AA000AB1	8742323	
3SB38062AA3	7429307	Enclosure for control circuit devices	3SU18560AA000AB1	8742349	
3SB38634BA	7429420	Two-hand control device	3SU18533NB001AD1		
3SB38634BB	7429357	Two-hand control device	3SU18533NB001AA1	8742342	
3SB38634BC	7429423	Two-hand control device	3SU18533AA000AA1		
3SB39010AA	7541747	Accessories for control circuit devices	3SU19000KA100AA0		
3SB39010AB	4111996	n/a	-		discontinued without replacement
3SB39010AC	4533396	n/a	-		discontinued without replacement
3SB39010AG	7541517	n/a	3SU14002DA101AA0		
3SB39010AH	7541511	n/a	3SU14002DA501AA0		
3SB39010AJ	7541520	n/a	3SU14002DA431AA0		
3SB39010AQ3	7541523	Accessories for control circuit devices	3SU19500HN100AA0		
3SB39010AW	7541741	Accessories for control circuit devices	3SU19000KC100AA0	1038572	
3SB39010CB	7450455	Accessories for control circuit devices	-		discontinued without replacement
3SB39010CG	7541527	Accessories for control circuit devices	-		discontinued without replacement
3SB39010CK	4555380	Accessories for control circuit devices	3SU19000HG100AA0	1038571	
3SB39010CL	4555324	Accessories for control circuit devices	-		No replacement planned from Siemens
3SB39010CM	4555302	Accessories for control circuit devices	3SU19000HH100AA0		
3SB39010CN	4555964	Accessories for control circuit devices	-		No replacement planned from Siemens
3SB39010CP	7541539	Accessories for control circuit devices	3SU19500HJ100AA0		
3SB39010CQ	7541533	Accessories for control circuit devices	3SU19500HK100AA0		
3SB39010CS	7541542	Accessories for control circuit devices	3SU19000HJ100AA0		
3SB39010CT	7541545	Accessories for control circuit devices	3SU19000HK100AA0		
3SB39010CU	7541549	Accessories for control circuit devices	3SU19000HL100AA0		
3SB39011BA	4111817	Lamp holder block for control circuit devices	3SU14011BG301AA0		Screw terminal connection, for front plate mounting
3SB39011BC	7541558	Lamp holder block for control circuit devices	3SU14011BH301AA0	1355666	Screw terminal connection, for front plate mounting
3SB39011BD	7541551	Lamp holder block for control circuit devices	3SU14011BH301AA0	1355666	Screw terminal connection, for front plate mounting
3SB39011BF	7541555	Lamp holder block for control circuit devices	3SU14011BH301AA0	1355666	AC/DC 24240 V, screw terminal
3SB39011BG	7450459	Lamp holder block for control circuit devices	3SU14011BH301AA0	1355666	Screw terminal connection, for front plate mounting
3SB39011CA	4111823	Lamp holder block for control circuit devices	3SU14011BG201AA0		Screw terminal connection, for front plate mounting
3SB39011CC	7541564	Lamp holder block for control circuit devices	3SU14011BH201AA0	1355665	Screw terminal connection, for front plate mounting
3SB39011CD	7541567	Lamp holder block for control circuit devices	3SU14011BH201AA0	1355665	Screw terminal connection, for front plate mounting
3SB39011CF	7541561	Lamp holder block for control circuit devices	3SU14011BH201AA0	1355665	Screw terminal connection, for front plate mounting
3SB39011CG	7450468	Lamp holder block for control circuit devices	3SU14011BH201AA0	1355665	Screw terminal connection, for front plate mounting
3SB39011DA	4112135	Lamp holder block for control circuit devices	3SU14011BG401AA0		Screw terminal connection, for front plate mounting
3SB39011DC	7541570	Lamp holder block for control circuit devices	3SU14011BH401AA0	1355668	Screw terminal connection, for front plate mounting
3SB39011DD	7541573	Lamp holder block for control circuit devices	3SU14011BH401AA0	1355668	Screw terminal connection, for front plate mounting
3SB39011DF	7541577	Lamp holder block for control circuit devices	3SU14011BH401AA0	1355668	Screw terminal connection, for front plate mounting
3SB39011DG	7450461	Lamp holder block for control circuit devices	3SU14011BH401AA0	1355668	Screw terminal connection, for front plate mounting
3SB39011PA	4111895	Lamp holder block for control circuit devices	3SU14011BG501AA0		Screw terminal connection, for front plate mounting

3SB39011PD	7541586	Lamp holder block for control circuit devices	3SU14011BH501AA0	1355669	Screw terminal connection, for front plate mounting
3SB39011PF	7541589	Lamp holder block for control circuit devices	3SU14011BH501AA0	1355669	Screw terminal connection, for front plate mounting
3SB39011PG	7450465	Lamp holder block for control circuit devices	3SU14011BH501AA0	1355669	Screw terminal connection, for front plate mounting
3SB39011QA	4111924	Lamp holder block for control circuit devices	3SU14011BG601AA0	1736833	Screw terminal connection, for front plate mounting
3SB39011QC	7541583	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	AC/DC 24240 V, screw terminal
3SB39011QD	7541592	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	Screw terminal connection, for front plate mounting
3SB39011QF	7450474	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	Screw terminal connection, for front plate mounting
3SB39011QG	7450477	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	Screw terminal connection, for front plate mounting
3SB39011RB	7541595	Lamp holder block for control circuit devices	3SU14011BG301AA0		Screw terminal connection, for front plate mounting
3SB39011SB	7450471	Lamp holder block for control circuit devices	3SU14011BG201AA0		Screw terminal connection, for front plate mounting
3SB39011TB	7541599	Lamp holder block for control circuit devices	3SU14011BG401AA0		Screw terminal connection, for front plate mounting
3SB39011TE	7541609	Lamp holder block for control circuit devices	3SU14011BH401AA0	1355668	Screw terminal connection, for front plate mounting
3SB39011UB	7541602	Lamp holder block for control circuit devices	3SU14011BG601AA0	1736833	Screw terminal connection, for front plate mounting
3SB39011UE	7541606	Lamp holder block for control circuit devices	3SU14011BH601AA0	1355670	Screw terminal connection, for front plate mounting
3SB39021AA	4112040	Text plate for control circuit devices	3SU19000AC160AA0	8742358	
3SB39021AB	4111558	Text plate for control circuit devices	3SU19000AC160AB0		
3SB39021AC	4111564	Text plate for control circuit devices	3SU19000AC160AC0		
3SB39021AD	4111586	Text plate for control circuit devices	3SU19000AC160AD0		
3SB39021AE	4111592	Text plate for control circuit devices	3SU19000AC160AE0		
3SB39021AP	4111609	Text plate for control circuit devices	3SU19000AC160AP0		
3SB39021AQ	4111659	Text plate for control circuit devices	3SU19000AC160AQ0		
3SB39021EB	4533403	Text plate for control circuit devices	3SU19000AC160DJ0		
3SB39021EC	4533419	Text plate for control circuit devices	3SU19000AC160DK0		
3SB39021ED	4533425	Text plate for control circuit devices	3SU19000AC160DL0		
3SB39021EE	4533431	Text plate for control circuit devices	3SU19000AC160DM0		
3SB39021EF	4533447	Text plate for control circuit devices	3SU19000AC160DN0		
3SB39021EG	4533453	Text plate for control circuit devices	3SU19000AC160DP0		
3SB39021EH	4533469	Text plate for control circuit devices	3SU19000AC160DQ0		
3SB39021EJ	4533481	Text plate for control circuit devices	3SU19000AC160DR0		
3SB39021EK	4533497	Text plate for control circuit devices	3SU19000AC160DS0		
3SB39021EL	4533504	Text plate for control circuit devices	3SU19000AC160DT0		
3SB39021EN	4533510	Text plate for control circuit devices	3SU19000AC160DV0		
3SB39021EP	4533526	Text plate for control circuit devices	3SU19000AC160DW0		
3SB39021EW	4533576	Text plate for control circuit devices	3SU19000AC160EC0		
3SB39021MB	4533582	Text plate for control circuit devices	3SU19000AC160QA0		
3SB39021MC	4533598	Text plate for control circuit devices	3SU19000AC160QB0		
3SB39021MF	4111441	Text plate for control circuit devices	3SU19000AC160QG0		
3SB39021ML	4533605	Text plate for control circuit devices	3SU19000AC160QJ0		
3SB39021NA	4533611	Text plate for control circuit devices	3SU19000AC160AZ0Q3Y		
3SB39021NJ	4533627	Text plate for control circuit devices	3SU19000AC160QS0		

3SB39031AA	7352771	Text plate for control circuit devices	3SU19000AE160AA0	8742370	
3SB39031EC	7450480	Text plate for control circuit devices	3SU19000AE160DK0		
3SB39031EL	7450487	Text plate for control circuit devices	3SU19000AE160DT0		
3SB39051AA	7541753	Text plate for control circuit devices	3SU19000AD160AA0	8742355	
3SB39061AA	7541757	Text plate for control circuit devices	3SU19000AF160AA0	8742377	
3SB39061AB	7541618	Text plate for control circuit devices	3SU19000AF160AB0		
3SB39061AC	7541612	Text plate for control circuit devices	3SU19000AF160AC0		
3SB39061AD	7541621	Text plate for control circuit devices	3SU19000AF160AD0		
3SB39061AE	7541624	Text plate for control circuit devices	3SU19000AF160AE0		
3SB39061AL	7541628	Text plate for control circuit devices	3SU19000AF160AL0		
3SB39061AS	7541637	Text plate for control circuit devices	3SU19000AF160AS0		Marking: NOTAUS
3SB39061EK	7541630	Text plate for control circuit devices	3SU19000AF160DS0		
3SB39061EL	7450496	Text plate for control circuit devices	3SU19000AF160DT0		
3SB39061EM	7450499	Text plate for control circuit devices	3SU19000AF160DU0		
3SB39061EY	7541634	Text plate for control circuit devices	3SU19000AF160DA0		
3SB39061MC	7541643	Text plate for control circuit devices	3SU19000AF160QB0		
3SB39061NA	7541646	Text plate for control circuit devices	3SU19000AF160QR0		
3SB39104A	7541640	Accessories for control circuit devices	3SU19500FB800AA0	1038579	
3SB39210AA	4555419	Accessories for control circuit devices	3SU19000FA100AA0	8742415	Collar required: 8742272
3SB39210AB	4112955	Text plate for control circuit devices	3SU19000BC310AA0	8742361	
3SB39210AC	4112882	Text plate for control circuit devices	3SU19000BC310AT0	8742395	
3SB39210AD	4533633	Text plate for control circuit devices	3SU19000BC310DA0	1038560	
3SB39210AE	7450493	Accessories for control circuit devices	3SU19600KB100AA0	1736870	Adapter, matt finish
3SB39210AG	7541659	Text plate for control circuit devices	3SU19000BC310GQ0		
3SB39210AH	7450503	Accessories for control circuit devices	3SU19000DB700AA0	8742402	
3SB39210AJ	7450506	Accessories for control circuit devices	3SU19000ED700AA0		
3SB39210AK	4533649	Accessories for control circuit devices	3SU19000DY300AA0	8742406	
3SB39210AM	7541652	Accessories for control circuit devices	3SU19000EE700AA0		silicone free
3SB39210AN	7541656	Text plate for control circuit devices	3SU19000BC310JA0		
3SB39210AQ	7541665	Accessories for control circuit devices	3SU19000DG700AA0	1038565	
3SB39210AU	7541668	Text plate for control circuit devices	3SU19000AX100AA0		
3SB39210AX	7450500	Accessories for control circuit devices	3SU19000DY300AA0	8742406	
3SB39210BA	7450519	Accessories for control circuit devices	3SU19000DD700AA0		
3SB39210BC	4533655	n/a	-		discontinued without replacement
3SB39210BT	7541662	Accessories for control circuit devices	3SU19000EB100AA0		
3SB39210BW	7541671	Text plate for control circuit devices	3SU19000BC310NB0	8742399	
3SB39210CG	7541674	Accessories for control circuit devices	3SU19500DX300AA0	1736861	
3SB39210CK	7541678	Text plate for control circuit devices	3SU19000BC310AS0		
3SB39210DY	7541687	Text plate for control circuit devices	3SU19000BB310AA0	1038559	
3SB39220AS	7541680	Text plate for control circuit devices	3SU19000AN100AA0		

3SB39220AV	4112343	Text plate for control circuit devices	3SU19000AG100AA0	8742389	
3SB39220AW	7541684	Text plate for control circuit devices	3SU19000AN100AA0		
3SB39220AY	7541766	Text plate for control circuit devices	3SU19000AK100AA0		
3SB39230AS	7541693	Text plate for control circuit devices	3SU19000AQ100AA0		
3SB39230AV	7450512	Text plate for control circuit devices	3SU19000AT100AA0	8742367	snapon type
3SB39230AX	7352780	Text plate for control circuit devices	3SU19000AQ100AA0		
3SB39250AT	7541769	Text plate for control circuit devices	3SU19000AH100AA0		
3SB39250AV	7541763	Text plate for control circuit devices	3SU19000AS100AA0	8742364	
3SB39300CA2	7541772	Accessories for control circuit devices	3SU19010FT200AA0		
3SB39300CA3	7541775	Accessories for control circuit devices	3SU19010FT300AA0		
3SB39300CA4	7541779	Accessories for control circuit devices	3SU19010FT400AA0		
3SB39300CA5	7541788	Accessories for control circuit devices	3SU19010FT500AA0		
3SB39300CA6	7541781	Accessories for control circuit devices	3SU19010FT600AA0	1038576	
3SB39300CA7	7541785	Accessories for control circuit devices	3SU19010FT700AA0	1038577	
3SB39300EA6	7541794	Accessories for control circuit devices	3SU19000FT600AA0		
3SB39300GA0	7450516	Accessories for control circuit devices	3SU19010FT000AA0		
3SB39300GA3	7541797	Accessories for control circuit devices	3SU19010FT300AA0		round
3SB39300GA4	7541791	Accessories for control circuit devices	3SU19010FT400AA0		
3SB39300GA5	7450525	Accessories for control circuit devices	3SU19010FT500AA0		
3SB39300GA6	7541801	Accessories for control circuit devices	3SU19010FT600AA0	1038576	round
3SB39300GA7	7541804	Accessories for control circuit devices	3SU19010FT700AA0	1038577	
3SB39300HA7	7541690	Accessories for control circuit devices	3SU19010FS700AA0		
3SB39306BA2	7541700	n/a	-		discontinued without replacement no longer needed
3SB39306BA3	7541703	n/a	-		discontinued without replacement no longer needed
3SB39306BA4	7541707	n/a	-		discontinued without replacement no longer needed
3SB39306BA5	7541716	n/a	-		discontinued without replacement no longer needed
3SB39306BA6	7541719	n/a	-		discontinued without replacement no longer needed
3SB39306CA2	7450528	n/a	-		discontinued without replacement no longer needed
3SB39306CA3	7541713	n/a	-		discontinued without replacement no longer needed
3SB39306CA4	7450522	n/a	-		discontinued without replacement no longer needed
3SB39306CA6	7541722	n/a	-		discontinued without replacement no longer needed
3SB39306CA7	7450531	n/a	-		discontinued without replacement no longer needed
3SB39310AA	7450534	n/a	8742272	8742272	
3SB39310AC	7541729	Auxiliary contact block	3SU15500AA100AA0	8742288	
3SB39410AA	7541738	Accessories for control circuit devices	3SU19000FA100AA0	8742415	Collar required: 8742272
3SB39410AB	7541731	Text plate for control circuit devices	3SU19000BC310AA0	8742361	Inside diameter 23 mm
3SB39410AD	7541735	n/a	3SU19000BC310DA0		Inside diameter 23 mm
3SB39410AF	7541744	n/a	-		No replacement planned from Siemens
3SB39420AX	7541808	Text plate for control circuit devices	3SU19000AG100AA0	8742389	round
3SB39500CA7	7541810	Accessories for control circuit devices	3SU19010FT700AA0	1038577	round

3SB35004FD01	4533239	Front element for selector switch	3SU10504BN010AA0		Collar required: 8742288
3SB35002QA21	5186957	Front element for selector switch	3SU10522BC200AA0		Collar required: 8742288
3SB35003GK31	7430243	Front element for selector switch	3SU10504JP310AA0		Collar required: 8742288
3SB35012QA31	7430726	Front element for selector switch	3SU10522BC300AA0		Collar required: 8742288
3SB35003SA41	7430287	Front element for selector switch	3SU10522CL400AA0		Collar required: 8742288
3SB32046BA700CC0	7449225	Front element for indicator light	3SU10016AA700AA0	8741771	Collar required: 8742272
3SB35004DD61	7430366	Front element for selector switch	3SU10504BL110AA0	8741939	Collar required: 8742288
3SB34030HA	7429631	Auxiliary contact block	3SU14001AA103RA0		
3SB34231QD	7429714	Lamp holder block for control circuit devices	3SU14012BC503AA0		
3SB35002QA41	7430146	Front element for selector switch	3SU10522BC400AA0	1355638	Collar required: 8742288
3SB35003PA61	7430262	Front element for selector switch	3SU10522CF600AA0		Collar required: 8742288
3SB35004PD61	7430405	Front element for selector switch	3SU10505BL110AA0	8741954	Collar required: 8742288
3SB35004PD410VLO	7430408	Front element for selector switch	3SU10505BL410AA0		Collar required: 8742288
3SB35002UA61	7430170	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35005DD31	7430455	Front element for selector switch	3SU10505PL110AA0		Collar required: 8742288
3SB35012QA51	7430739	Front element for selector switch	3SU10522BC500AA0		Collar required: 8742288
3SB35012PA01	7430708	Front element for selector switch	3SU10522BF000AA0		Collar required: 8742288
3SB35012UA51	7430786	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35012FA51	7430644	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35012UA31	7430789	Front element for selector switch	3SU10522BN600AA0		Collar required: 8742288
3SB35013QA31	7430833	Front element for selector switch	3SU10522CC300AA0		Collar required: 8742288
3SB35003PA41	7430253	Front element for selector switch	3SU10522CF400AA0		Collar required: 8742288
3SB35003SA61	7430281	Front element for selector switch	3SU10522CL600AA0		Collar required: 8742288
3SB35013SA51	7430859	Front element for selector switch	3SU10522CL600AA0		Collar required: 8742288
3SB32570AA51	7448777	Push button, complete	3SU11030AB501BA0		
3SB32130AA71	7449308	Push button, complete	3SU11060AB701BA0		
3SB35003HJ11	7430256	Front element for selector switch	3SU10504HF110AA0		Collar required: 8742288
3SB35005FD21	7430470	Front element for selector switch	3SU10505PN210AA0		Collar required: 8742288
3SB35005GD31	7430486	Front element for selector switch	3SU10505PP010AA0		Collar required: 8742288
3SB35005GD61	7430489	Front element for selector switch	3SU10505PP010AA0		Collar required: 8742288
3SB35011CA41	7430530	Front element for mushroom push-button	3SU10511BA400AA0		Collar required: 8742288
3SB35002QA61	7430155	Front element for selector switch	3SU10522BC600AA0	1355639	Collar required: 8742288
3SB35002UA21	7430168	Front element for selector switch	3SU10522BN200AA0		Collar required: 8742288
3SB35013QA21	7430830	Front element for selector switch	3SU10522CC600AA0		Collar required: 8742288
3SB35000AA72	7429966	Front element for push button	3SU10500CB600AA0		Collar required: 8742288
3SB35000DB51	7429994	Front element for push button	3SU10500AA100AA0	1355615	Collar required: 8742288
3SB35002GA21	7430108	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35002GA61	7430111	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012VA41	7430805	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB34201QD	7429688	Lamp holder block for control circuit devices	3SU14012BC501AA0		

3SB35012VA51	7430809	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012GA51	7430657	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012VA01	7430798	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012VA21	7430792	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB34231QA	7429708	Lamp holder block for control circuit devices	3SU14012BC303AA0		
3SB38010AB	4121757	Enclosure for control circuit devices	3SU18010AA000AB2	8742226	
3SB35002DA41	7430079	Front element for selector switch	3SU10522BL400AA0	1355643	Collar required: 8742288
3SB38030AA	4111968	Enclosure for control circuit devices	3SU18030AA000AB1	8742311	
3SB35002VA21	7430183	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35002VA41	7430186	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35002VA61	7430180	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35012GA31	7430650	Front element for selector switch	3SU10522BP600AA0		Collar required: 8742288
3SB35003QA41	7430278	Front element for selector switch	3SU10522CC400AA0		Collar required: 8742288
3SB35002SA41	7430158	Front element for selector switch	3SU10522BL400AA0	1355643	Collar required: 8742288
3SB35002UA41	7430177	Front element for selector switch	3SU10522BN400AA0		Collar required: 8742288
3SB35003UA61	7430313	Front element for selector switch	3SU10522CN600AA0		Collar required: 8742288
3SB35003VA41	7430329	Front element for selector switch	3SU10522CP600AA0		Collar required: 8742288
3SB35003VA61	7430322	Front element for selector switch	3SU10522CP600AA0		Collar required: 8742288
3SB32570AA31	7449566	Push button, complete	3SU11030AB301BA0		
3SB39021EV	4533560	Text plate for control circuit devices	3SU19000AC160EB0		
3SB39031EF	7450483	Text plate for control circuit devices	3SU19000AE160DN0		
3SB39021EU	4533554	Text plate for control circuit devices	3SU19000AC160EA0		
3SB32510AA31	7449461	Push button, complete	3SU11030AB301FA0		
3SB32510AA51	7449474	Push button, complete	3SU11030AB501FA0		
3SB32510AA71	7449471	Push button, complete	3SU11030AB701FA0		
3SB32486AA50	7449430	Indicator light complete	3SU11036AA501AA0		
3SB32486BA50	7449443	Indicator light complete	3SU11036AA501AA0		
3SB36486BA50	8470943	Indicator light complete	3SU11536AA501AA0		
3SB38010AD	4121741	Enclosure for control circuit devices	3SU18010AA000AC2	8742235	
3SB38010AA	4111980	Enclosure for control circuit devices	3SU18010AA000AB1	8742308	
3SB38010DF	4555352	Control circuit devices combination in enclosure	3SU18010NA002AC2	8742305	
3SB38010DG	4555368	Control circuit devices combination in enclosure	3SU18010NA002AA2	8742301	
3SB38040AA	4555374	Enclosure for control circuit devices	3SU18040AA000AB1	8742320	
3SB39021EQ	4533548	Text plate for control circuit devices	3SU19000AC160DX0		