




WE MAKE THE WORLD MOVE

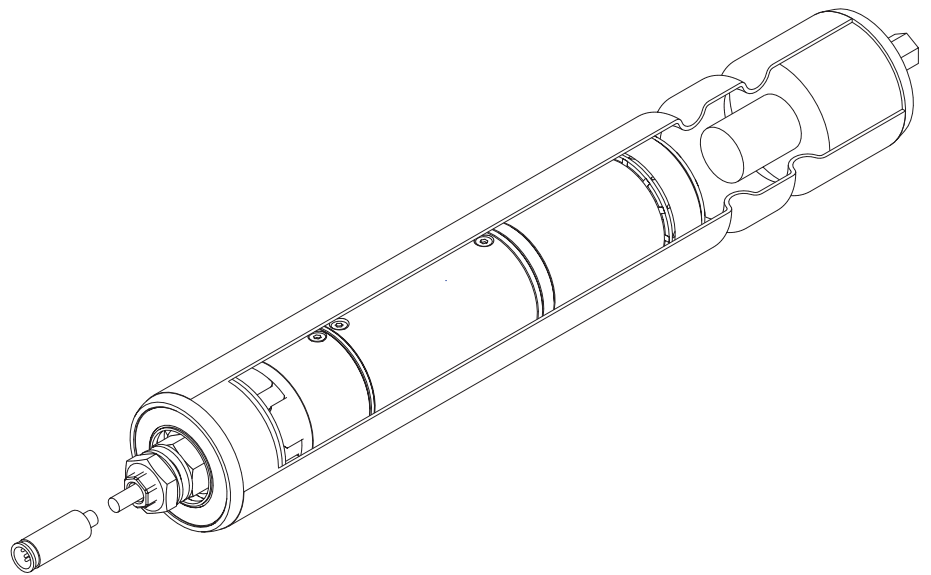

User Manual
Interroll RollerDrive
EC200

Manufacturer

Interroll Corporation
3000 Corporate Drive
USA-Wilmington, NC 28405
Tel. +1 910 799 11 00
Fax. +1 910 392 38 22
www.interroll.com

Copyright

The copyright of this manual remains with Interroll Corporation. This manual includes regulations and technical drawings which may not be copied or duplicated either whole or in part. Unauthorized use, publication or application of this document is prohibited.

Table of contents

Introduction	
Handling of the user manual	2
Warning notices in this manual	2
Further symbols	3
Safety	
General safety instructions	4
Intended use	4
Unintended use.	4
Qualified persons	4
Risks.	5
Interfaces	5
Product information	
Components	6
Product description	6
RollerDrive label	7
Product identification	8
Technical data	8
Performance data	9
Performance charts.	9
DriveControls for the RollerDrive EC200	10
Motor plug	11
Speed settings	12
RL definition	13
Dimensions of the motor shaft	13
Dimensions of idler cartridges.	14
Groove locations.	15
Conical RollerDrives	16
Transport and storage	
Transport	17
Storage.	17
Assembly	
Warning notices concerning assembly	18
Warning notices concerning the electrical installation.	19
Setting up a roller conveyor	19
Inserting the RollerDrive EC200 in the conveyor frame	20
Mounting tool	22
Electrical installation.	23
Initial startup and operation	
Initial startup	24
Operation	24
Procedure in case of accident or malfunction.	24
Maintenance and cleaning	
Warning notices concerning maintenance and cleaning	25
Maintenance	25
Cleaning	25
Troubleshooting	
Error search	26
Abandonment and disposal	
Abandonment	27
Disposal	27
Appendix	
Accessories	28
Manufacturer's declaration	29

Introduction

Handling of the user manual

Content of the manual

This manual contains important advice, notes and information about the RollerDrive EC200 in all phases of its lifecycle:

- Transport, assembly and commissioning
- Safe operation, maintenance and troubleshooting, disposal
- Accessories

Validity of the manual

The manual describes the RollerDrive EC200 as it is delivered by Interroll.

Special application designs require validation from Interroll and additional technical instructions.

The manual is part of the product

- For trouble-free, safe operation and warranty claims, read the manual and follow the instructions before handling the RollerDrive EC200.
- Keep the manual near to the RollerDrive EC200.
- Pass the manual on to any subsequent operator or occupant of the RollerDrive EC200.
- Interroll does not accept any liability for malfunctions or defects due to non-observance of this manual.
- If you have any questions after reading the user manual, feel free to contact our customer service. See the last page for contact information.

Warning notices in this manual



The warning notices in this document refer to risks which may arise during usage of the RollerDrive EC200. For relevant warning notices, see "*Safety*", page 4 and the warning notices at the beginning of each chapter.

There are three categories of danger. The following signal words are used in the document as required:

- Danger
- Warning
- Caution

Signal word	Meaning
Danger	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
Warning	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
Caution	Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.

Structure of warning notices

	 DANGER
<p>Nature and source of the hazard Possible consequence of non-observance</p> <p>➤ Information about how to avoid the hazard.</p>	

Introduction

Further symbols

NOTICE

This symbol identifies possible material damage.

➤ Information about how to avoid the damage.



This symbol displays safety instructions.



This symbol marks useful and important information.

➤ This symbol marks the steps that have to be carried out.

Safety

General safety instructions

The RollerDrive EC200 is designed according to the technical state of the art and is reliable in operation, once distributed. However, risks may still arise.

- Risks of physical injury to the user or bystanders.
- Adverse effects of the RollerDrive and other material.



Disregarding the warning notices in this manual may lead to serious injury.

- Always read the entire operating and safety instructions before starting to work with the RollerDrive and follow the information contained therein in full.
- Only instructed and qualified persons may work with the RollerDrive.
- Always keep the user manual at hand when working at the RollerDrive so you can consult it quickly if required.
- Always comply with relevant national safety regulations.
- If you have any questions after reading the operation manual, feel free to contact our customer service. See the last page for contact information.

Intended use

The RollerDrive EC200 may only be used for industrial applications and in an industrial environment to convey goods such as parts, cartons, totes or boxes. It must be integrated in a conveyor module or a conveying system. Any other use is considered inappropriate.

Use of the RollerDrive EC200 is only allowed in the areas described under product information.

Any changes that affect the safety of the product are not allowed.

The RollerDrive EC200 may only be used within the given operation limits.

Unintended use

The RollerDrive EC200 may not be used to transport persons, bulk cargo or small parts.

The RollerDrive is not intended for use under impact or shock loads.

Applications not according to the intended use of the RollerDrive EC200 require approval from Interroll.

Qualified persons

Qualified persons are persons who read and understand the manual and, taking national regulations into account, can competently execute incidental work.

Only instructed and qualified persons may work with the RollerDrive, taking the following into account:

- the relevant manuals and diagrams,
- the warning and safety instructions in this manual,
- the system specific regulations and requirements,
- national or local regulations and requirements for safety and accident prevention.

Safety

Risks



The following list informs you about the various types of danger or damage that may occur while working with the RollerDrive EC200.

Persons

- Maintenance or repair work must only be executed by authorized and qualified persons in accordance with the applicable regulations.
- Before turning on the RollerDrive, ensure that no unauthorized persons are near the conveyor.

Electricity

- Only perform installation and maintenance work after you have switched off the power. Ensure that the RollerDrive cannot be turned on accidentally.

Rotating parts

- Keep fingers and hair away from the torque transmission between rollers.
- Tie up long hair.
- Do not wear loose clothing.
- Remove jewellery such as bracelets or wristbands.

Working environment

- Do not use the RollerDrive in explosive atmospheres.
- Remove equipment or material which is not required from the workspace.
- Always wear safety shoes.
- Clearly specify and monitor the way goods are placed on the conveyor.

Avoiding malfunctions in operation

- Regularly check the RollerDrive for visible damage.
- In case of fumes, unusual noise or blocked or damaged goods, stop the RollerDrive at once and ensure that the RollerDrive cannot be started accidentally.
- Contact qualified personnel immediately to find the source the malfunction.
- Do not step on the RollerDrive during operation.

Maintenance

- As the product is maintenance free, you only need to check regularly for visible damages, unusual noise and that the screws and nuts are still tightened.
- Do not open the RollerDrive.

Accidental motor starts

- Use caution while installing or maintaining the RollerDrive, or while it is under error conditions, since it may start accidentally.


Interfaces

By assembling the RollerDrive in a conveyor module, potential hazards may occur. These are not part of this manual and have to be analyzed during the design, installation and startup of the conveyor module.

- After assembling the RollerDrive in a conveyor module, check the whole system for a new potential dangerous spot before turning on the conveyor.

Product information

Components

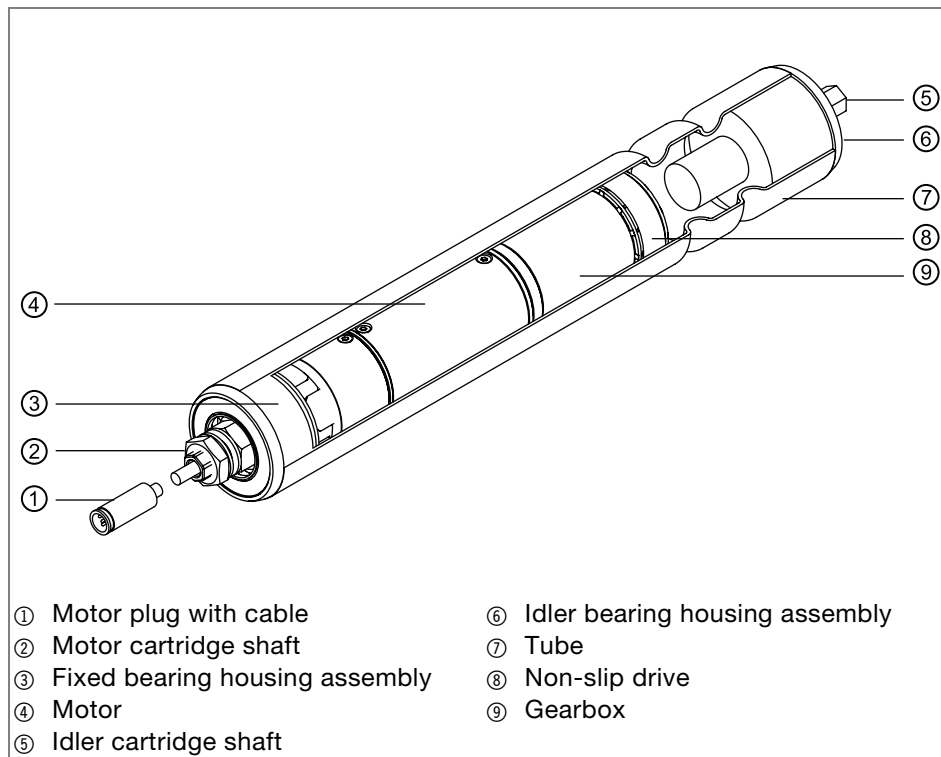

Product description

The RollerDrive EC200, a completely self-contained electronically powered roller, replaces external components such as motors and gearboxes that require frequent maintenance.

The RollerDrive EC200 can be used in dusty and/or moist environments due to its protection class IP54 or IP66.

The RollerDrive EC200 is powered by a brushless electronically commutated 24 VDC motor with an integrated 4 quadrant motor control. This control system guarantees a constant speed over the whole load range and a constant torque over all selectable speed settings.

Product information

Overload protection devices


There are several overload protection devices installed:

- **Stall timing device:** If the RollerDrive EC200 is stalled while there is a run command, the motor tries to restart ten times each three seconds for one second. If stall continues after these ten attempts, a failure signal is set and the RollerDrive tries to restart with a 60:1 cycle (restart for one second every 60 seconds) until the stall is removed. The RollerDrive will not be damaged by operating in a stall time device mode for long periods of time. If the RollerDrive is running at chosen speed again, or the run command is withdrawn, the failure signal will be cancelled.
- **Slow run:** If there is a speed deviation of +/- 20% from the chosen value for more than 10 seconds, the motor will be switched off and the failure signal will be set. The RollerDrive EC200 will try to start again after 60 seconds. If the RollerDrive is running at chosen speed again or the run command is withdrawn, the failure signal will be cancelled.
- **Temperature monitor:** The motor and electronic assemblies are temperature controlled. If the temperature is too high, the incline of the accelerating ramps will be reduced and the motor will go back to nominal current. This reduces the heat in the motor.

If suitably applied, the roller can be installed in the conveyor with the required controls and then left alone for the life of the product.

RollerDrive label

The specifications on the RollerDrive label are used to identify the RollerDrive. This is required to use the RollerDrive EC200 as intended.

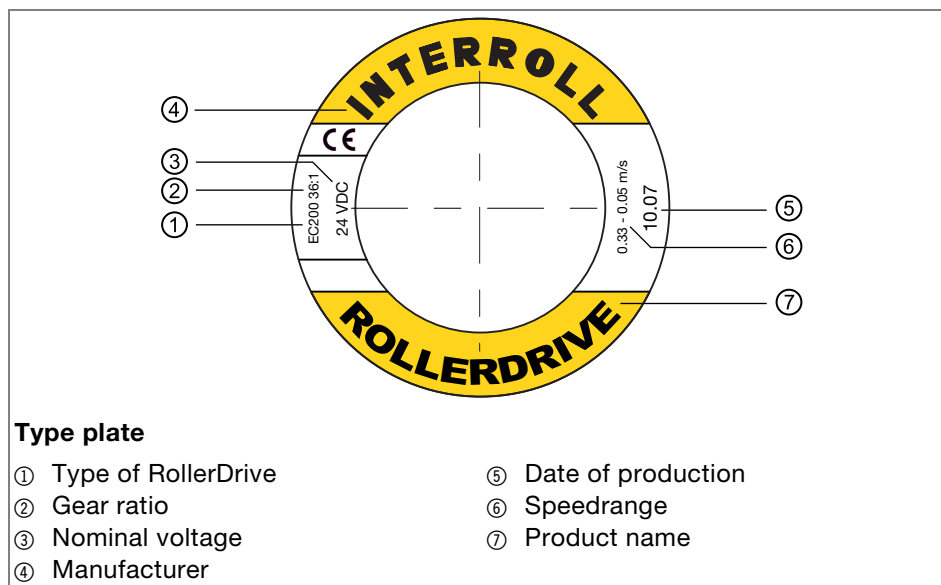

Product information

Product identification

To identify a RollerDrive, the following information is required. You may enter the values of your RollerDrive in the last column.

Information	Possible value	Own value
RollerDrive label	Motor type Gear ratio	RollerDrive EC200
Tube diameter	50 mm or 1.9 in	
Tube material	Zinc-plated, galvanized, aluminum or stainless steel (with or without sleeves)	
Roller length	RL _{US} or RL _{EU} (see " <i>RL definition</i> ", page 13)	
Roller transmission	see " <i>Groove locations</i> ", page 15	
Idler shaft	Spring-loaded or floating (see " <i>Dimensions of idler cartridges</i> ", page 14)	

Technical data

Nominal voltage	24 VDC
Voltage range	18 to 28 VDC
No load current	0.4 A
Maximum continuous current	2.1 A
Maximum peak current	5.5 A
Mechanical performance	25 W
System efficiency (drive)	49 %
Maximum ripple from power supply	3 %
Noise emission (mounted)	55 dB(A)
Lifetime under nominal conditions	15000 h
Maximum start/stop per minute	30
Protection classification	IP54 (IP66)
Ambient temperature for operation	0 °C to 40 °C (32 °F to 104 °F)
Ambient temperature for transport and storage	-20 °C to 75 °C (-4 °F to 167 °F)
Ambient temperature changes	max. 1 °K/min; 3 h; two cycles according to IEC 68-2-14
Ambient humidity	max. 90% not condensing
Installation altitude above sea level	max. 1000 m (max. 3300 ft)



- UL approval is not required for RollerDrive products as they operate under a recommended maximum voltage of 30 VDC. The RollerDrive EC200 is recognized as an UL Class II product.
- Mechanical performance, performance data and performance charts are on basis of 20 °C (68 °F).


Product information

Performance data


Gear ratio	12:1	16:1	36:1	48:1	64:1
Nominal torque	0.7 Nm (6.2 in-lbf)	0.9 Nm (8.0 in-lbf)	1.7 Nm (15.0 in-lbf)	2.3 Nm (20.4 in-lbf)	3.6 Nm (31.9 in-lbf)
Peak torque	1.2 Nm (10.6 in-lbf)	1.8 Nm (15.9 in-lbf)	3.6 Nm (31.9 in-lbf)	5.4 Nm (47.8 in-lbf)	8.0 Nm (70.8 in-lbf)
Speed range	0.98 to 0.14 m/s (192.7 to 28.1 fpm)	0.74 to 0.11 m/s (144.5 to 21.1 fpm)	0.33 to 0.05 m/s (64.2 to 9.4 fpm)	0.25 to 0.04 m/s (48.2 to 7.0 fpm)	0.18 to 0.03 m/s (36.1 to 5.3 fpm)
Nominal load ¹⁾	25 kg (55 lb)	45 kg (99 lb)	100 kg (220 lb)	140 kg (309 lb)	220 kg (485 lb)

¹⁾ Maximum static load per Roller not more than 40 kg (88 lb). Data refer to continuous operation under maximum load (S1-operation).

Performance charts

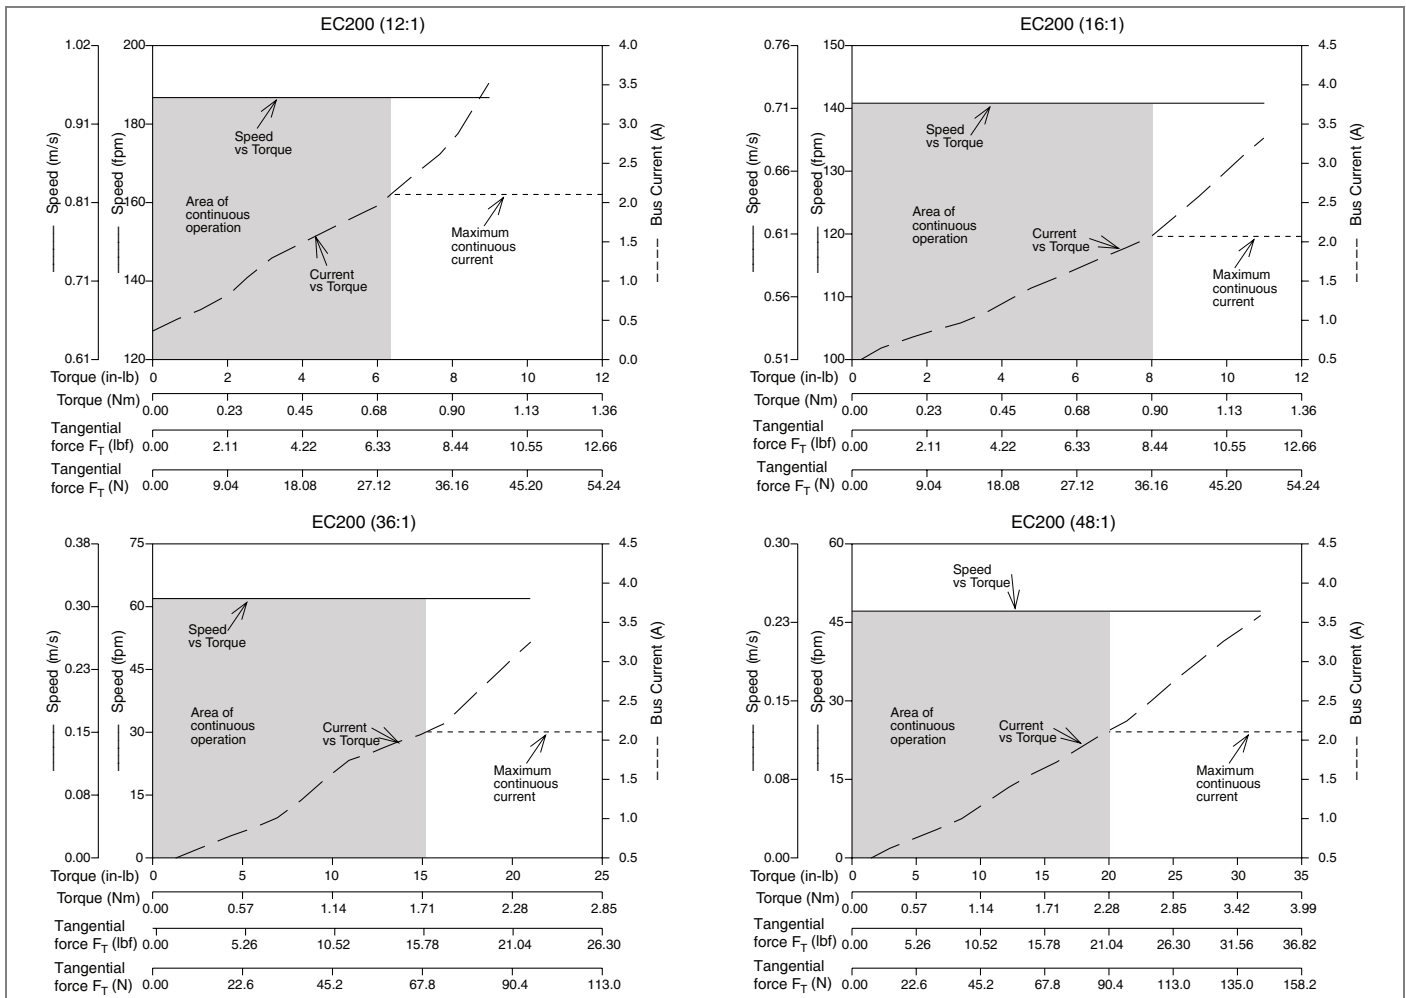

Product information

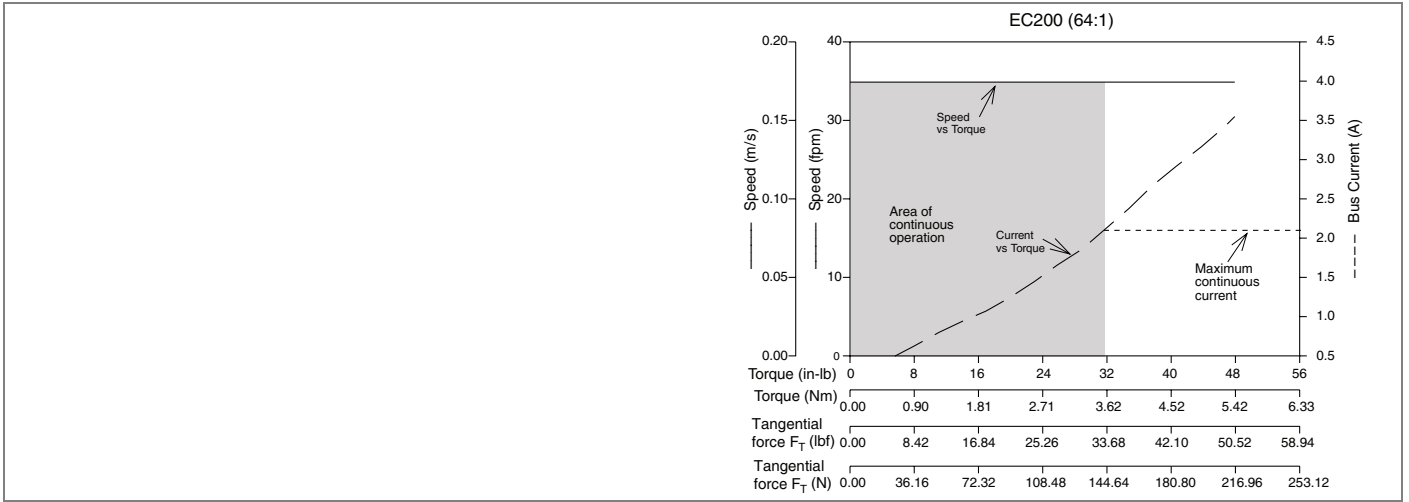

DriveControls for the RollerDrive EC200


Interroll recommends using the RollerDrive EC200 in combination with the Interroll DriveControls DC-EC200/EC300 (13:1) or Z-Card EC.



For DriveControl details, see the corresponding operation manual, catalogs or publications on www.interroll.com.

Product information

Motor plug

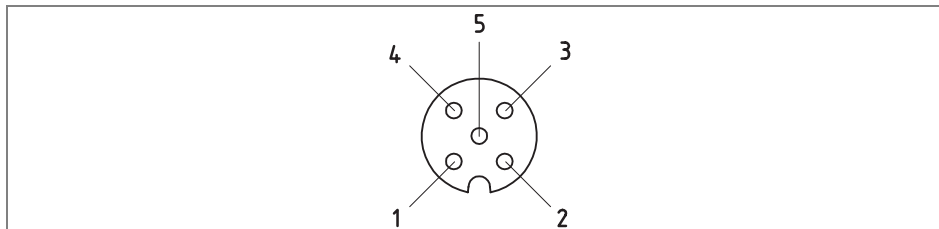

Pin	Color	Function	Value
1	brown	Power input from power supply (+)	Nominal: 24 VDC Range: 18 to 28 VDC
2	white	Rotation direction, seen from cable end of the RollerDrive	Low U < 0.8 V = ccw High U > 2.4 V = cw
3	blue	Ground for power and signal (-)	Ground
4	black	Failure output	Low = no failure High = failure
5	gray	Speed/start signal analog	Range: 0 to 24 VDC Stop (brake): 0 to 2 VDC Speed: 2.4 VDC to 5 VDC (Incline ratio: 1 V ~ 114.6 revs/min / gear ratio) Max. speed: 5 VDC to 24 VDC (also see "Speed settings", page 12)



In case the RollerDrive is not directly connected to the referring DriveControl or the Interroll extension cable, connect the motor plug by use of a Lumberg Fixcon Coupling 5-FKT.

NOTICE

Pins 1 and 3 are not protected against incorrect polarity connection.

Damage to the motor.

- Ensure the correct polarity.

Product information


Speed settings

If you do not use the recommended DriveControl (see "DriveControls for the RollerDrive EC200", page 10), you may change the speed of the RollerDrive EC200 by altering the voltage on pin 5 of the motor plug.

NOTICE

Input voltage of Pin 5 at motor plug is not polarity-proof
Damage to the RollerDrive

➤ Ensure the correct polarity.

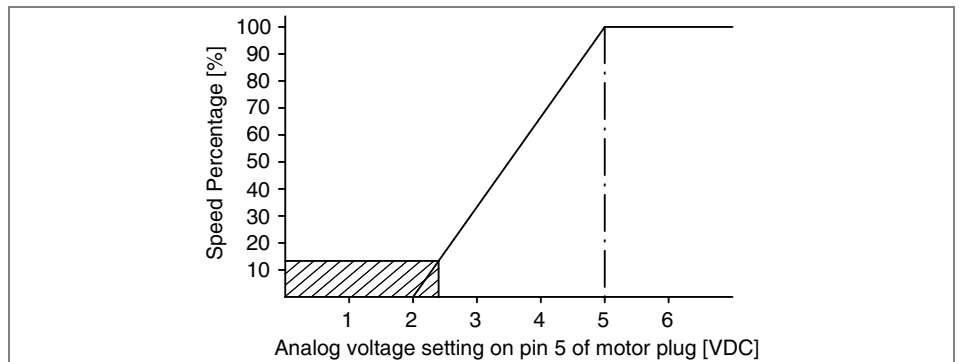

In the hatched area the RollerDrive does not run within the specified tolerance of $\pm 5\%$.

Rotary switch speed setting at DriveControl	Voltage setting on pin 5 [VDC]	Speed of transport [m/s (ft/min)] $\pm 5\%$				
		Gear ratio 12:1	Gear ratio 16:1	Gear ratio 36:1	Gear ratio 48:1	Gear ratio 64:1
0/8	5 to 24	0.98 (192.7)	0.74 (145.6)	0.33 (64.2)	0.25 (49.2)	0.18 (36.1)
1/9		0.98 (192.7)	0.74 (145.6)	0.33 (64.2)	0.25 (49.2)	0.18 (36.1)
2/A	4	0.75 (147.2)	0.56 (110.4)	0.25 (49.1)	0.19 (36.8)	0.14 (27.6)
3/B	3.75	0.56 (110.4)	0.42 (82.8)	0.19 (36.8)	0.14 (27.6)	0.11 (20.7)
4/C	3.30	0.41 (80.1)	0.31 (60.1)	0.14 (26.7)	0.10 (20.0)	0.08 (15.0)
5/D	2.93	0.30 (58.5)	0.22 (43.8)	0.10 (19.5)	0.07 (14.6)	0.06 (11.0)
6/E	2.68	0.21 (41.1)	0.16 (30.9)	0.07 (13.7)	0.05 (10.3)	0.04 (7.7)
7/F	2.44	0.14 (28.1)	0.11 (21.1)	0.05 (9.4)	0.04 (7.0)	0.03 (5.3)


Product information

RL definition


There are two definitions of the roller length RL:

- RL_{EU} is mainly used in Europe and Asia
- RL_{US} is mainly used in North and South America

Spring loaded 11 mm
(0.44 in) hex

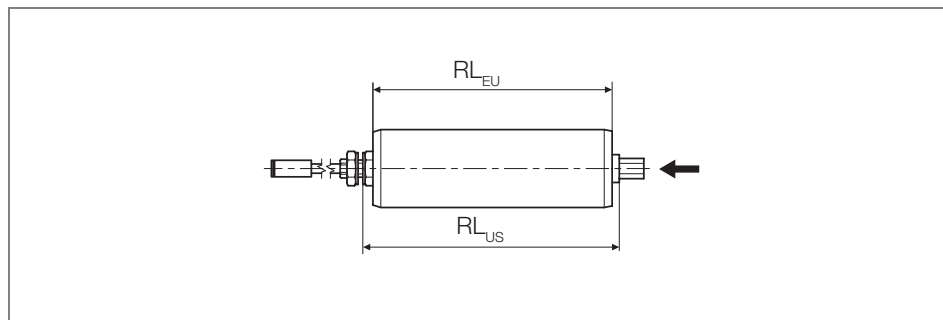


Female threaded M8 (FTM8),
floating

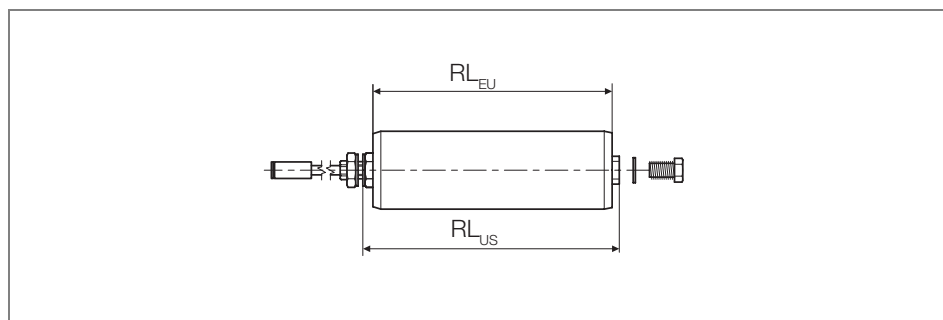


Dimensions of the motor shaft

Standard configuration

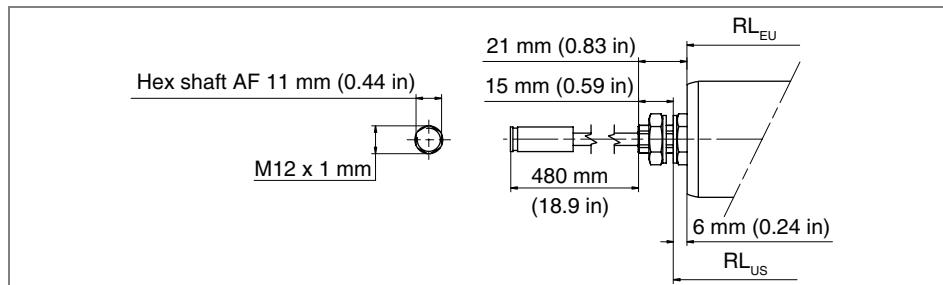

IP66 configuration

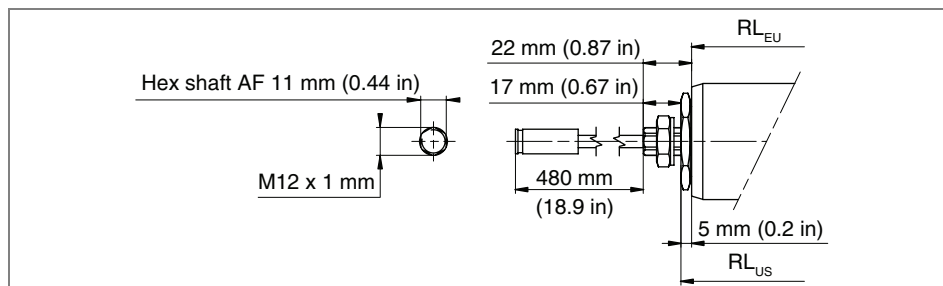


Product information

Dimensions of idler cartridges

	11 mm (0.44 in) hex, spring-loaded	Female threaded M8 (FTM8), floating
Straight		
O-ring hub		
Multi-rib hub		
Timing belt hub		<p>Poly-Chain GT; 8 mm pitch; 18 teeth</p>


Product information

	11 mm (0.44 in) hex, spring-loaded	Female threaded M8 (FTM8), floating
Roller chain hub		11 mm (0.44 in) hex shaft; 3/8 in pitch; 20 teeth

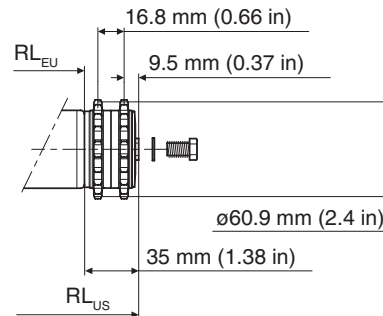


Groove locations

**FTM8, floating,
single bearing**

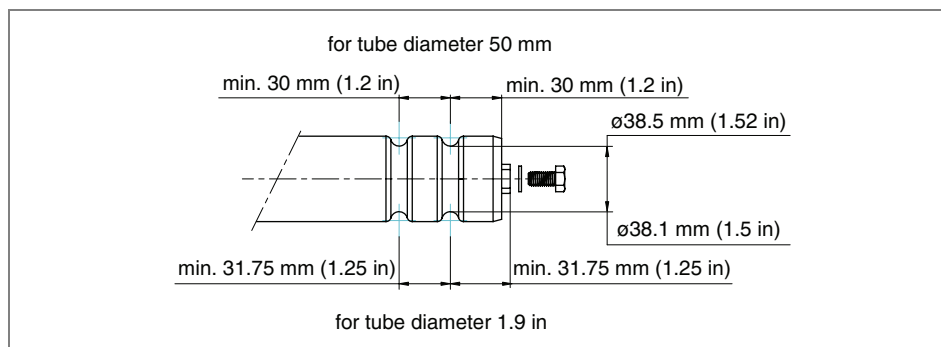

**Spring-loaded hex,
double bearing**

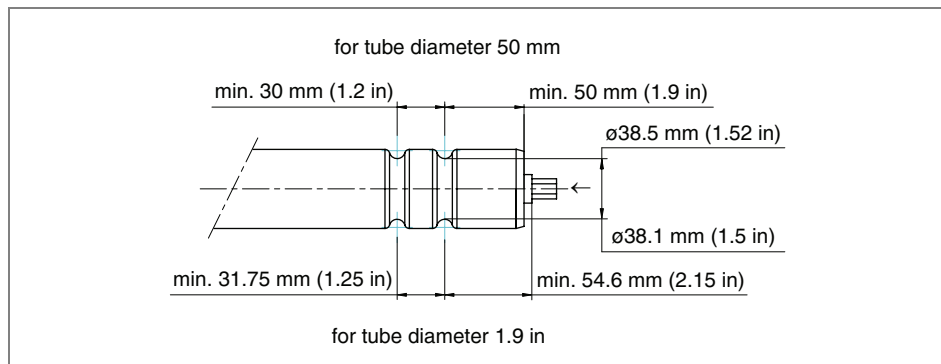

Other tube groove locations possible.

Product information

Conical RollerDrives

Conical RollerDrives are only available in three versions:

- Without roll-to-roll transmission (no grooves)
- With grooved tubes [$RL_{EU} = B/F - 11 \text{ mm (0.44 in)}$ / $RL_{US} = B/F - 3 \text{ mm (0.12 in)}$]
- With O-ring hub [$RL_{EU} = B/F - 37 \text{ mm (1.46 in)}$ / $RL_{US} = B/F - 3 \text{ mm (0.12 in)}$]

B/F: Width between the conveyor frames

Due to the conical sleeves they are only available in certain standard lengths.

For conical RollerDrives there must be a 1.8° angle compensation on the motor end to avoid bending forces on the RollerDrive.



For details contact Interroll, see the catalogs or refer to publications at www.interroll.com.

Transport and storage

Transport

- Each RollerDrive is covered at its ends with end-protectors.



CAUTION

Risk of injury due to improper transport

- Transport may only be carried out by qualified and authorized persons.
 - Observe the following notices.
-
- Do not stack pallets.
 - Check the fixation of the RollerDrives before transport.
 - Avoid hard shocks during transport.
 - Check each RollerDrive visually for damage after transport.
 - In case of damage, take photos of the damaged parts.
 - To maintain the warranty, report any damage caused by transport instantly to the transport company and Interroll.
 - Do not transfer the RollerDrives between warm and cold environments. This may cause condensing water.

Storage



CAUTION

Risk of injury due to improper storage

- Do not stack pallets.
- Do not stack more than four carton boxes.



With IP66 RollerDrives, due to the sealing, condensing water inside the RollerDrive may cause corrosion.

- Check each RollerDrive for damage after storage.

Assembly

Warning notices concerning assembly



CAUTION

Rotating parts and accidental motor starts

Risk of pinched fingers

- Do not insert fingers between the RollerDrive and the O-ring belt, multi-rib belt or roller chain.
- Install a protection device (such as a guard plate) to prevent fingers from getting trapped in the O-ring belt, multi-rib belt or roller chain.
- Install an appropriate warning on the conveyor.

NOTICE

Risk of damage leading to failure or shortened life expectancy of the RollerDrive

- Observe the following notices.

- Do not drop or mishandle the RollerDrive to avoid internal damage.
- Check each RollerDrive visually for damage before assembly.
- Do not hold, carry, or support the RollerDrive by the wires extending out of the mounting shaft to avoid damage to the internal solder joints.
- Do not force the RollerDrive when inserting it into the conveyor frame. It should fit easily into the holes in the frame.
- Ensure that the proper torque (see assembly instructions) is applied to the RollerDrive hex nut to prevent the shaft spinning in the frame and the wires twisting.
- Do not twist the motor cable.

Assembly

Warning notices concerning the electrical installation

NOTICE

Risk of damage to the motor and/or the wires of the RollerDrive

➤ Observe the following notices.

- The electrical installation may only be executed by qualified and authorized persons.
- Disconnect the power before installing, removing or rewiring the RollerDrive.
- Do not apply AC current to the RollerDrive or DriveControl device at any time as this will cause irreparable damage.
- Do not apply too much stress to the connector pins. Bending the wires at the connector and forcing the star washer over them can cause damage to the insulation of the wires, which could result in failure of the RollerDrive.
- Ensure that the RollerDrive, the DriveControl and the 24 VDC power source are properly earthed through the frame or supporting structure in which the RollerDrive and the DriveControl are installed. Failure to do so could cause the buildup of static electricity or ground loops and can cause the motor or DriveControl to malfunction or fail prematurely.
- Do not bend the motor cable at the motor shaft. Leave a minimum of 12 mm (0.5 in) of excess cable for stress relief. (Minimum motor cable bend radius 5x cable diameter.)
- Do not spin the RollerDrive manually, as this generates an induction voltage which could damage the DriveControl.

Setting up a roller conveyor

A roller conveyor usually consists of conveyor zones. Each zone is composed of one RollerDrive and several idler rollers which are driven by the RollerDrive. The idler rollers can be linked using either flat belts, timing belts, O-ring belts, multi-rib belts or roller chains. The number of idler rollers in each zone depends on the application.

- Before installing the RollerDrive, define the position of the conveyor zone within the conveyor and the position of the RollerDrive within the conveyor zone.



Locate the RollerDrive near the center of the zone or the center of gravity of the object being conveyed to improve the transmission of the force between RollerDrive and goods.

Assembly

Inserting the RollerDrive EC200 in the conveyor frame


Inserting the motor shaft



- Remove the shipping tube from the RollerDrive/harness assembly.

Use caution when cutting the tie-wrap from the harness. Do not cut any of the sleeving or wires on the assembly.

- Place a first star washer on the motor shaft.

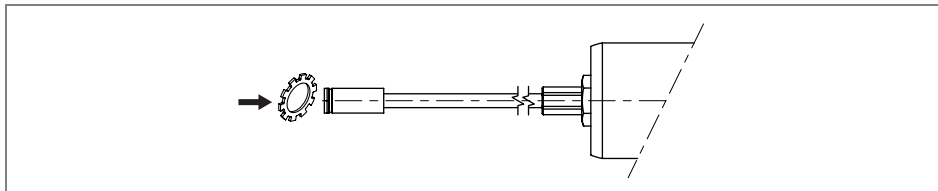


- Pass the motor cable through the 11 mm (0.44 in) hex hole in the conveyor frame and insert the motor shaft into the hex hole.


NOTICE

Internal damage of the RollerDrive due to improper handling

- Do not install the securing hardware at this time.
- Do not bend the motor cable at the motor shaft. Leave a minimum of 12 mm (0.5 in) of excess cable for stress relief.

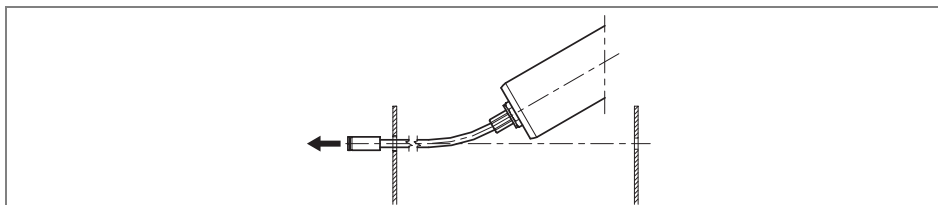

- Place one or two standard 4 mm, max. 5 mm (3/16 in) O-rings or RollerDrive belts (if used) on the idler end of the RollerDrive.

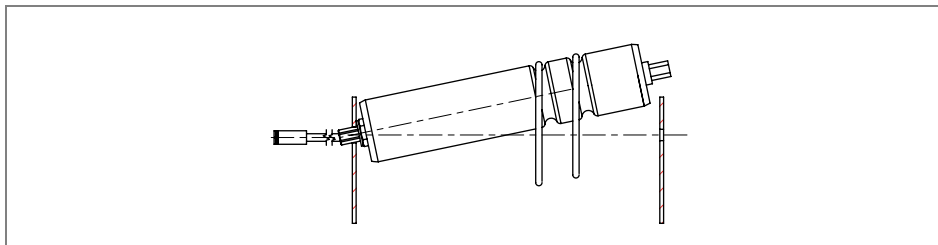


Assembly

Inserting the idler shaft


How the idler shaft is inserted in the conveyor frame depends on the idler shaft option. The easiest installation option is the spring-loaded shaft option.

Inserting the spring-loaded idler shaft

- Push the spring-loaded idler shaft inwards and align the shaft with the hole in the frame.

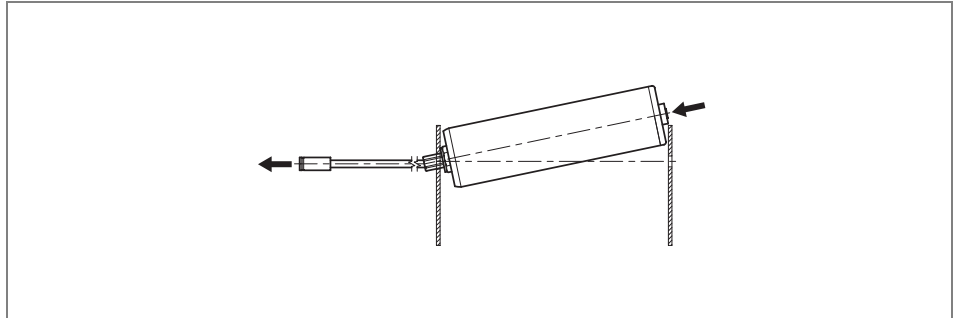


- Release the idler shaft and allow it to pop into the hole in the frame.

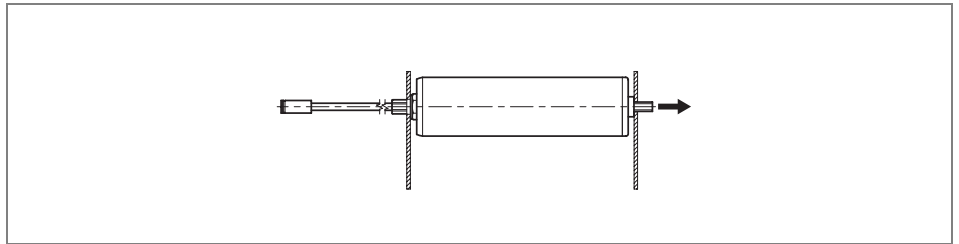

Inserting the FTM8 idler shaft

- Place a split lock washer onto a M8x20 bolt.
- Align the RollerDrive with the hole in the frame and thread the M8 bolt and split lock washer into the shaft. Use a wrench to prevent the idler shaft from turning (width across flats AF 13 mm or AF 19 mm, depending on the idler type, see "Groove locations", page 15).

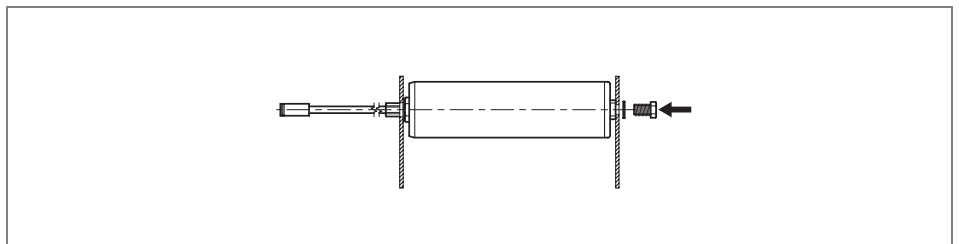

- Use a torque wrench to tighten the bolt with 20 Nm (177 in-lbf) until the split washer is completely compressed.



For information about assembling the idler rollers, see the corresponding manuals or information at www.interroll.com.

Assembly


Securing the RollerDrive in the conveyor frame

There is a nut and a washer on the shaft next to the tube. This inner nut has been preassembled and secured in the correct position.



Do not adjust the inner nut and washer.

- Prevent the inner nut from rotating with a flattened wrench AF 19 mm. For IP66 configuration use a flattened wrench AF 36 mm.
- Slip a second star washer and a hex nut over the motor cable and screw it onto the threaded motor shaft. Ensure that star washers are mounted on both sides of the profile.

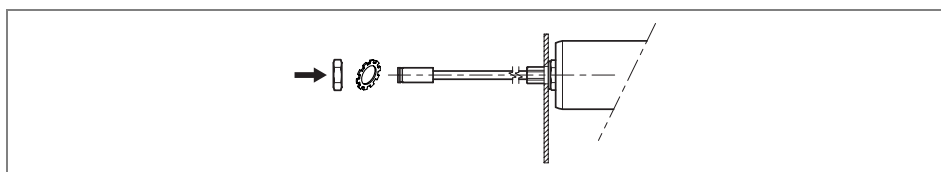


- Use a torque wrench to tighten this outer nut with 35 Nm (308 in-lbf) while ensuring that the inner nut is not rotating.




To prevent bending forces on conical RollerDrives, an angular compensation on the motor end is needed.

Mounting tool

For mounting the multi-rib belt, you may want to build a mounting tool as shown in the figure below.

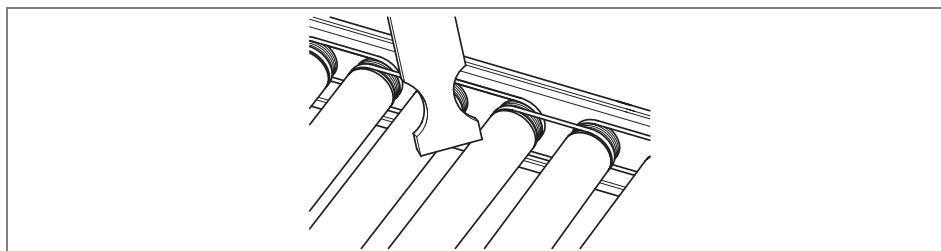

- Place the mounting tool between two rollers to reduce the gap between the adjacent rollers.

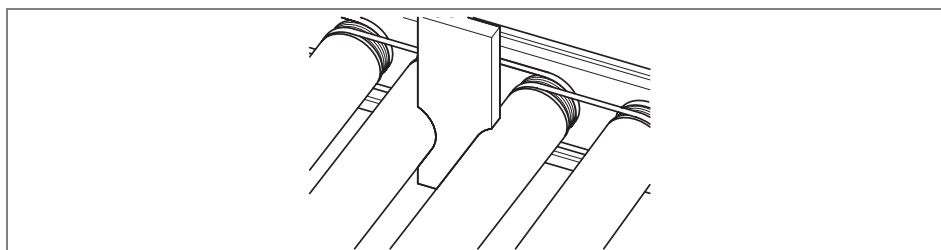

The dimensions of the mounting tool depend on the roller pitch and the roller tube diameter.

Assembly

Electrical installation

- If you use the recommended DriveControl (see "*DriveControls for the RollerDrive EC200*", page 10), connect the motor plug to the DriveControl.
- If you do not use the DriveControl, connect your control to the pins of the motor plug (for the pin definition see "*Motor plug*", page 11)

Initial startup and operation

Initial startup

Inspections before initial startup

- Ensure that no objects are in contact with rotating or moving parts.
- Ensure that all bolts are tightened according to the specifications.
- Ensure that no additional dangerous areas arise due to interfaces to other components.
- Ensure that the wiring is in accordance with the specification and legal directives.
- Check all protection devices.
- Ensure that no bystanders are in dangerous areas around the conveyor.



For information about startup, see the manual for the DriveControl or your control.

Operation



CAUTION

Rotating parts and accidental starts

Risk of pinched fingers

- Do not insert fingers between the RollerDrive and the O-ring belt, multi-rib belt or roller chain.
- Do not remove the protection device.
- Keep fingers, hair and loose clothing away from the RollerDrive.

NOTICE

Damage to the motor or the control due to induction

- Do not push items along the roller conveyor by hand.
- Do not spin the RollerDrive manually.

Inspections before every startup

- Check the RollerDrive for visible damage.
- Check all protection devices.
- Ensure that no bystanders are in dangerous areas around the conveyor.
- Clearly specify and monitor the way goods are placed on the conveyor.
- Ensure that the RollerDrive is not blocked.



Ambient operating conditions see "*Technical data*", page 8

Procedure in case of accident or malfunction

- Stop the conveyor at once and ensure that it cannot be started accidentally.
- In case of an accident: Provide first aid and make an emergency call.
- Inform the responsible person.
- Have the malfunction repaired by qualified persons.
- Start the conveyor only after this has been approved by qualified persons.

Maintenance and cleaning

Warning notices concerning maintenance and cleaning



CAUTION

Risk of injury due to improper handling or accidental motor starts

- Maintenance work and cleaning may only be executed by qualified and authorized persons.
- Only perform maintenance work after switching off the power. Ensure that the RollerDrive cannot be turned on accidentally.
- Set up signs indicating maintenance work.

Maintenance

Checking the RollerDrive

If the RollerDrive is not secured as specified in the installation instructions (see "Assembly", page 18), it may rotate in the hole in the conveyor frame. This will result in the roller leads becoming twisted and eventually severed.

- Monthly check the RollerDrive for visible damage.
- Annually ensure that the roller shaft is secured properly in the conveyor frame.

Replacing a RollerDrive

If a RollerDrive is damaged or broken down, it has to be replaced.

- Install a new RollerDrive (see "Abandonment", page 27 and see "Inserting the RollerDrive EC200 in the conveyor frame", page 20).

Cleaning

Increased surface friction reduces the roller speed since more power is used to overcome the resistance. Therefore, in a dirty environment, periodic cleaning will ensure good contact with the goods and reduce friction.

- Remove foreign material from the roller with standard cleaners.
- Do not use sharp-edged tools to clean the roller.

Troubleshooting

Error search



CAUTION

Risk of injury due to accidental motor starts

- Error search may only be executed by qualified and authorized persons.
- Only perform error search after switching off the power. Ensure that the RollerDrive cannot be turned on accidentally.
- Use caution while searching the error.

Symptom	Possible cause	Help
RollerDrive is not operating.	No power supply	Check 24 VDC power supply.
	Plugs not connected properly	Check cable connection.
RollerDrive is rotating in the wrong direction or at the wrong speed.	Wrong DriveControl setting at speed and direction rotary switch	Change setting on DriveControl.
	Wrong voltage at speed setting pin (if the RollerDrive is not operated with the recommended Interroll DriveControl)	Check the voltage of the speed setting pins at the motor plug.
Abnormal noise coming out of the RollerDrive.	Motor or gearbox is damaged.	Replace RollerDrive.
Interrupted RollerDrive operation	Damaged motor cable	Check motor cable for damages. If motor cables are damaged, replace RollerDrive.
	RollerDrive overload	see "Overload protection devices", page 7

Abandonment and disposal

Abandonment



CAUTION

Risk of injury due to improper handling

- Abandonment may only be executed by qualified and authorized persons.
- Only abandon the RollerDrive after switching off the power. Ensure that the RollerDrive cannot be turned on accidentally.

- Disconnect the motor cable from the control.
- Unscrew the outer nut at the threaded motor shaft.
- If the RollerDrive has a spring-loaded idler shaft, push the idler shaft inwards.
- If the RollerDrive has a FTM8 idler shaft, unscrew the bolt at the idler shaft.
- Extract the RollerDrive from the conveyor frame.

Disposal

The operator is responsible for the proper disposal of the RollerDrive. In doing so, industry-specific and local provisions must be observed for the disposal of the RollerDrive and its packaging.

Appendix

Accessories

Belts

Part	Characteristics
Toothed belt	<ul style="list-style-type: none"> Gates Poly-Chain GT or similar: pitch 8 mm (0.31 in) Toothed belt width: 11.2 mm (0.44 in) Hub with 18 teeth
Round belt	<ul style="list-style-type: none"> Belts of 4 mm (0.16 in) and max. 5 mm (0.20 in) diameter
Multi-rib belt	<ul style="list-style-type: none"> Drive head with 9 grooves for flexible V-ribbed belts PJ form, ISO 9981, DIN 7867 Pitch 2.34 mm (0.09 in) Belts with a max. of 4 ribs

DriveControls

Part	Part #
DC-EC200/EC300 (13:1)	89QU
Z-Card EC Easy	89Z2
Z-Card EC Full	89Z3

Wiring accessories

Part	Characteristics	Part #
Power supply	230 V / 150 W / 24 VDC	89NT
Extension cable RollerDrive - DriveControl	Length 1600 mm	89VK
Extension cable RollerDrive - Z-Card EC	Length 1000 mm	89VE
	Length 2000 mm	89VF

Appendix

Manufacturer's declaration

in terms of the EC-Machine Directive 98/37/EC and its amendment 98/79/EC, Annex II B

The manufacturer:

Interroll Corporation
3000 Corporate Drive
Wilmington, NC 28405

hereby declares with sole responsibility that the product range

- RollerDrive Type EC200

is not a ready-to-use assembly in terms of the EC-Machine Directive and therefore does not fully comply with the requirements of this directive. It must not be put into service until the machinery into which it is to be incorporated has been declared to conform with the provisions of the Machine Directive.

Applied EC Directives:

Machine Directive 98/37/EC and its amendment 98/79/EC
Low Voltage Directive 2006/95/EC
EMC Directive 2004/108/EC
RoHS Directive 2002/95/EC

Applied harmonized norms:

EN ISO 12100 Part1 and Part2

Wilmington, November 7th 2007

Richard Keely
(VP of Manufacturing)

(This declaration can be obtained at www.interroll.com, if needed.)



DRIVES & ROLLERS

Europe/Nordic

Denmark

Interroll Nordic A/S
Hammerholmen 2-6
DK-2650 Hvidovre/Denmark
Tel. +45 36 88 33 33
Fax +45 36 88 33 72
dk-sales@interroll.com

Interroll Service
Islandsvej 5
DK-7900 Nykøbing M.
Tel. +45 97 71 15 55
Fax +45 97 71 16 55
dk-sales@interroll.com

Iceland

IBH ehf
Dugguvogur 10
104 Reykjavik
Iceland
Tel. +354 562 6858
Fax +354 562 6862
ingi@ibh.ehf.is

Finland

Tel. +358 9 54 94 94 00
Fax +358 9 54 94 94 16

Norway

Tel. +47 32 88 26 00
Fax +47 32 88 26 10

Sweden

Tel. +46 35 227077
Fax +46 35 227078

Western/Southern Europe

France

Interroll S.A.S.
ZI de Kerannou
B.P. 34
F-29250 Saint Pol de Léon
Tel. +33 298 24 41 00
Fax +33 298 24 41 02
f-sales@interroll.com

Italy

Rulli Rulmeca S.p.A.
Via A. Toscanini, 1
I-24011 Almè (Bg)
Tel. +39 035 4300111
Fax +39 035 545523
i-sales@interroll.com

Portugal

Rulmeca Interroll de Portugal Lda
Apartado 69, Centro Civico
P-6201-909 Covilhã
Tel. +351 275 330 780
Fax +351 275 330 789
p-sales@interroll.com

Spain

Interroll España S.A.
C.I. Santiga
C/Puig dels Tudons, 5
E-08210 Barberà del Vallès
Tel. +34 93 729 96 50
Fax +34 93 718 96 50
e-sales@interroll.com

United Kingdom

Interroll Ltd.
Brunel Road
Earlstrees Industrial Estate
GB-Corby, Northants NN17 4UX
Tel. +44 1536 200 322
Fax +44 1536 748 505
gb-sales@interroll.com

Central Europe

Germany

Interroll Fördertechnik GmbH
Höferhof 16
D-42929 Wermelskirchen
Tel. +49 2193 23 0
Fax +49 2193 20 22
d-sales@interroll.com

Austria

Tel. +49 2193 23 187
Fax +49 2193 23 164

Belgium

Tel. +49 2193 23 131
Fax +49 2193 23 164

Luxembourg

Tel. +49 2193 23 190
Fax +49 2193 23 164

Netherlands

Tel. +49 2193 23 151
Fax +49 2193 23 164

Switzerland

Tel. +49 2193 23 190
Fax +49 2193 23 164

Benelux

Interroll Trommelmotoren b.v.
Veldweg 38
NL-6075 Herkenbosch
Tel. +31 4755 33701
Fax +31 4755 32597
nl-drummotors@interroll.com

Eastern Europe

Czech Republic

Interroll CZ, s.r.o.
G. Šimka 3147
CZ-69003 Břeclav
Tel. +420 519 330 210
Fax +420 519 330 211
cz-sales@interroll.com

Hungary

Tel. +36 23 337 891
Fax +36 23 337 892

Poland

Interroll Polska Sp. z o.o.
ul. Jagiellońska 78
lok. 3.31
PL-03-301 Warszawa
Tel. +48 22 334 63 43
Fax +48 22 675 72 92
pl-sales@interroll.com

Slovakia

Tel. +421 2 4363 8102
Fax +421 2 4342 7294

Slovenia

Tel. +386 1 56 56 370
Fax +386 1 56 56 372

Turkey

Roller Makina San. Ve. Tic. Ltd. Sti.
Zihni Sakaryali Ali Sok.
Ufuk Apt. No. 1 D. 11
Ersoy Sahil Sitesi
81070 Suadiye
Istanbul
Tel. +90 216 386 37 75
Fax +90 216 386 38 22
tr-sales@interroll.com

Near East

Israel

ComTrans-Tech Ltd.
P.O.B. 17433
Tel-Aviv 61174
Israel
Tel. +972 54 4 27 27 47
Fax +972 3 7 44 08 64
il-sales@interroll.com

Africa

South Africa

Interroll SA Pty. Ltd.
P.O. Box 327
Isando 1600
ZA-Gauteng
Tel. +27 11 974 1901
Fax +27 11 974 1896
za-sales@interroll.com

North & South America

USA

Interroll Corporation
3000 Corporate Drive
USA-Wilmington, NC 28405
Tel. +1 910 799 11 00
Fax +1 910 392 38 22
usa-sales@interroll.com

Canada

Interroll Canada Ltd.
1201 Gorham Street
CDN-Newmarket
Ontario L3Y 8Y2, Canada
Tel. +1 905 727 3399
Fax +1 905 727 3299
cdn-sales@interroll.com

Argentina

Interroll South America
Calle 117, No. 3591
B1650NRR San Martin
Provincia de Buenos Aires
Tel. +54 11 4753 8005
Fax +54 11 4754 1332
ar-sales@interroll.com

Brasil

Interroll Brasil
Av. Portugal 918
CEP 06651-970
Itapevi - SP
Tel. +55 11 41 43 43 43
Fax +55 11 41 43 77 19
br-sales@interroll.com

Asia

China

Interroll (Suzhou) Co. Ltd.
Unit 10B, Modern Industrial Square
No. 333 Xing Pu Road
Suzhou, Jiangsu Province
People's Republic of China
Postal Code: 215126
Tel. +86 512 6256 0383
Fax +86 512 6256 0385
cn-sales@interroll.com

Japan

Interroll Japan Co. Ltd.
302-1 Shimokuzawa
Sagamihara-shi
JPN - Kanagawa 229-1134
Tel. +81 42 764 2677
Fax +81 42 764 2678
jpn-sales@interroll.com

Korea

Interroll Korea Corporation
Room 301, Dongsan Bldg, 333-60
Shindang-Dong, Choong-ku
Seoul
Tel. +822 2 231 1900
Fax +822 2 254 36 83
kr-sales@interroll.com

Singapore

Interroll (Asia) Pte. Ltd.
386 Jalan Ahmad Ibrahim
629156 Singapore
Republic of Singapore
Tel. +65 6266 6322
Fax +65 6266 6849
sgp-sales@interroll.com

Thailand

Interroll (Thailand) Co. Ltd.
41/6 Moo 6, Bangchalong,
Bangplee
Samutprakarn 10540
Tel. +66 2 337 0188 91
Fax +66 2 337 01 92
th-sales@interroll.com

Australia & New Zealand

Australia

Conveyor Solutions Australia Pty. Ltd.
70 Keon Parade
Thomastown 3074
Melbourne
Tel. +61 3 9460 2155
Fax +61 3 9460 2029
aus-sales@interroll.com

New Zealand

Anthony Group (NZ) Ltd.
42 Parkway Drive
Mairangi Bay
NZ-Auckland 10
Tel. +64 9 478 6150
Fax +64 9 479 6394
nz-sales@interroll.com

For other countries please
see contacts at
www.interroll.com