


Accessories

for A/AE/AL/AF contactors

Coils & coil voltage codes

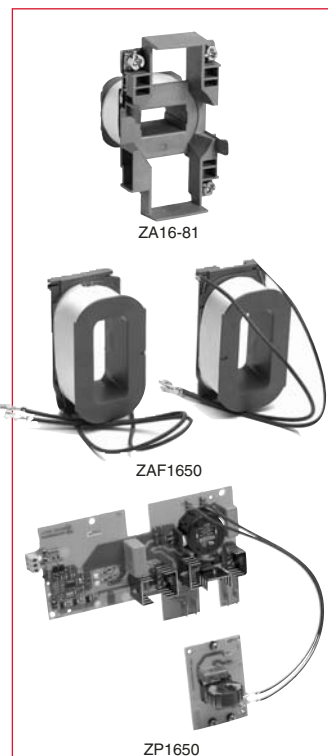

Coils — AC operated

For contactors	Catalog number
A9 – A16	ZA16-★
A26 – A40	ZA40-★
A45 – A75	ZA75-★
A95 – A110	ZA110-★
A145 – A185	ZA185-★
A210 – A300	ZA300-★

Coils — DC operated

AE9 – AE16	ZAE16-★
AE26 – AE40	ZAE40-★
AE45 – AE75	ZAE75-★
AE95 – AE110	ZAE110-★
Auxiliary including an insertion contact and a varistor for DC operated contactors	CCL18-01

Coils — AC/DC operated

AF45 – AF75	ZAF75-★
AF95, AF110	ZAF110-★
AF145 – AF185	ZAF185-★
AF210 – AF300	ZAF300-★
AF400, AF460	ZAF460-★
AF580, AF750	ZAF750-★
AF1350, AF1650 (Set of 2)	ZAF1650-★

Printed circuit board — AC/DC operated

AF1350 – AF1650	ZP1650
-----------------	--------

★ – Coil voltage suffix. Refer to Coil Voltage Selection charts below and substitute the desired coil voltage code for the ★.

Coil voltage selection — AC operated for A9 – A300; UA26 – UA110

VAC (50Hz)	VAC (60Hz)	Voltage Code
24	24	81
26	28	16
28	32	17
42	42	82
48	48	83
60	60	73
100	100 – 110	74 2
110	110 – 120	84
110 – 115	115 – 127	89 3
120	140	29
125 – 127	150	30
175	208	34
190	220	36
200	200 – 220	75 2
220 – 230	230 – 240	80
230 – 240	240 – 260	88
230 – 240	277	42
230/400	—	62 1
—	230/400	63 1
380 – 400	400 – 415	85
400 – 415	415 – 440	86
—	480	51
440	500	53
500	600	55
550	—	56
660 – 690	—	58

Coil voltage selection — DC operated for AE contactors

VDC	Voltage code AE contactors
12	80
24	81
42	82
48	83
50	21
60	84
75	85
110	86
125	87
220	88
240	89
250	38

Coil voltage selection — AC/DC operated for AF50 – AF750

VAC & VDC 40-60 Hz	Suffix Code
24 – 60 VDC	68 4
20 – 60 VDC	72 5
48 – 130 VAC/VDC	69
100 – 250 VAC/VDC	70

1 Only for A9 – A16.
 2 Not for A145 – A300
 3 A145 – A300 at 60 Hz, 115V only.
 4 AF400 – AF750, DC only.
 5 AF145 – AF300.