

RELEASED FOR PUBLICATION

ALL RIGHTS RESERVED.

1470-19 (3/11)

THIS DRAWING IS UNPUBLISHED.

RELEASED FOR PUBLICATION

- . - .

©

COPYRIGHT - By -

ALL RIGHTS RESERVED.

LOC

DIST

REVISIONS

P

LTR

DESCRIPTION

DATE

DWN

APVD

-

-

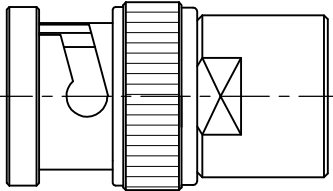




SEE SHEET 1

-

-

-


## COMPONENTS

| MAIN BODY                                                                         | CENTER CONTACT                                                                    | DIELECTRIC                                                                         | SLEEVE                                                                              | GASKET                                                                              | WASHER                                                                              | CLAMP NUT                                                                           |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |  |  |  |  |

## ASSEMBLY INSTRUCTIONS


## STEP 1: PREPARATION OF CABLE

1. TRIM CABLE TO DIMENSIONS SHOWN. BE CAREFUL TO AVOID NICKING THE BRAID.
2. REMOVE ANY RESIDUAL PLASTIC FROM CENTER CONDUCTOR.
3. CUT A RIP ON THE CABLE JACKET AS SHOWN.




## STEP 2: ASSEMBLE CLAMP NUT, WASHER, GASKET, WASHES, SLEEVE, DIELECTRIC AND CENTER CONTACT

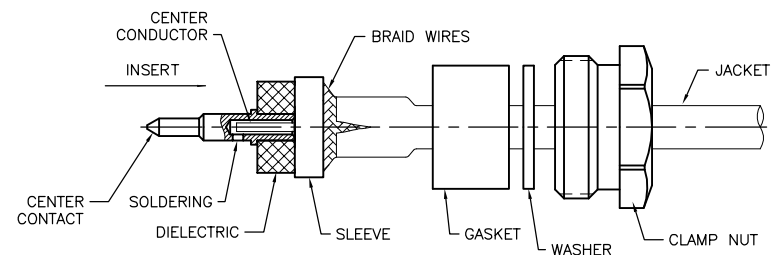1. SLIDE CLAMP NUT, WASHER, AND GASKET ONTO THE CABLE IN TURN.
2. SLIDE SLEEVE ONTO THE INSULATOR OF CABLE.
3. SLIDE DIELECTRIC AND CENTER CONTACT ONTO THE CENTER CONDUCTOR OF CABLE.
4. SOLDERING CENTER CONTACT WITH CABLE.




## STEP 3: SCREW NUT TO CONNECTOR

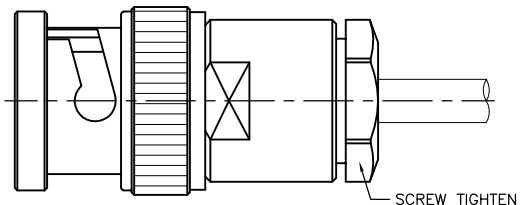1. INSERT STEP 2 CABLE ASSEMBLY INTO CONNECTOR BODY AND SCREW TIGHT THE CLAMP NUT.



THIS DRAWING IS A CONTROLLED DOCUMENT.

DIMENSIONS:  
mm

MATERIAL

TOLERANCES UNLESS  
OTHERWISE SPECIFIED:

|        |     |
|--------|-----|
| 0 PLC  | ± . |
| 1 PLC  | ± . |
| 2 PLC  | ± . |
| 3 PLC  | ± . |
| 4 PLC  | ± . |
| ANGLES | ± . |

FINISH

DWN

07SEP2012

RITA ZUO

CHK

07SEP2012

GARY GAO

APVD

07SEP2012

MARTIN YE

PRODUCT SPEC

APPLICATION SPEC

WEIGHT

-

CUSTOMER DRAWING



TE Connectivity

NAME  
BNC STRAIGHT PLUG SOLDER (PS) 75 Ohm  
URM202

SIZE

A300779

CAGE CODE

C-1478405

DRAWING NO

-

RESTRICTED TO

-

SCALE

NTS

SHEET

2 OF 2

REV

D