




## Wooden Toilet Seat Hinges – Fitting Instructions

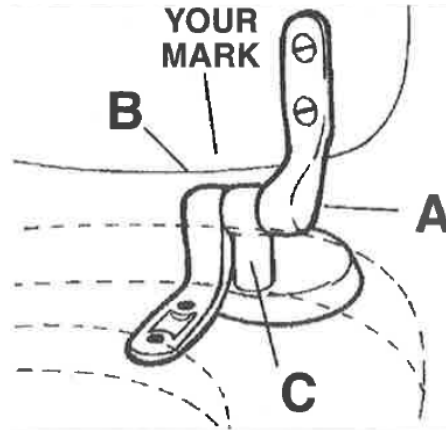

1) Note: - There are right and left hand fittings. The illustration shows the right hand fitting.

2) Offer up seat and lid centrally to holes in toilet. Mark edges of seat and lid to show the centres of both holes.

3) Fit the lid first. Line the right hand fitting centre upright **C** with the right hand mark you have made on the lid. Place the right hand arm **A** as illustrated against the lid.

4) Ensuring the marks are lined up as (3), fit screws provided through the two holes of each fitting into the lid as illustrated. Ensure screws do not penetrate through the wood.

5) The left hand fitting is a mirror image design to the right hand fitting so the arm **A** will now be on the left. Repeat (3) and (4).

6) Position seat centrally under lid and ensure marks line up with the centre upright **C** of each fitting, and offer the seat so that it butts up to the back of arm **B** of both left and right hand fittings. Fit screws provided as in (4) (screws not shown).

7) Screw the straight threaded bolts into one of the holes in the underside of the fitting (whichever is more suitable). Take care not to damage the thread.

8) Slide the washers onto the threaded bolt and offer the complete unit to the holes in the toilet so that the bolts protrude below the holes.

9) Screw the nylon nuts to the protruding bolts and **finger tighten only**.