



# Quick fit shelf assembly instructions

## Step 1.

Clip the QR Bracket to the side of the 19" panel mount. Locate the top edge below the thin web of the piercing.

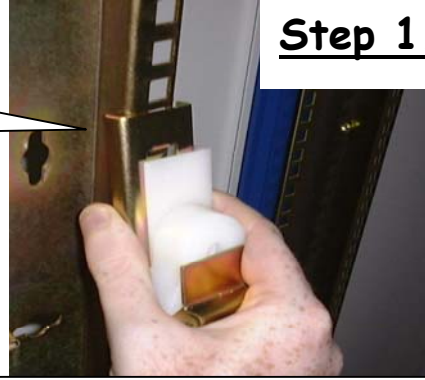


Push in and down to locate into position. Make sure the mouldings are pulled away from the bracket and rotated to the open position.

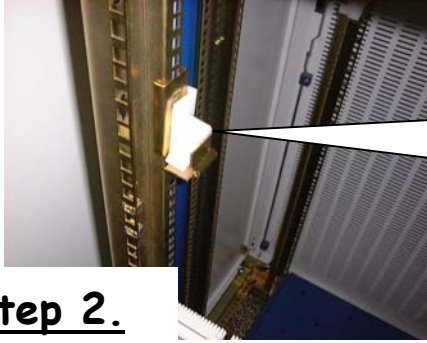

## Step 2.

Push the moulding into bracket. Locating the moulding protrusion into the panel mount hole.

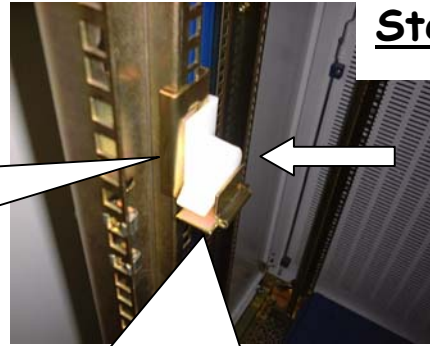

## Step 3.


Rest the shelf on the front edge of the front brackets.

Repeat for each panel mount. The bracket assemblies are handed. These pictures show the front left hand position.




## Step 4.

Slide the shelf to the rear of the rack and repeat with the rear brackets

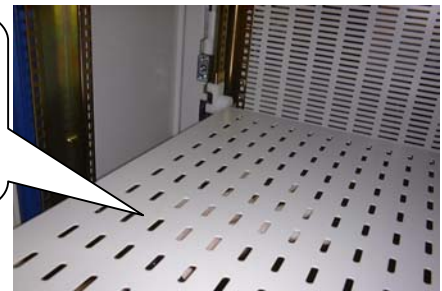

## Step 5.

Rotate the QR mouldings to clamp the shelf:-  
LH back - RH Forward

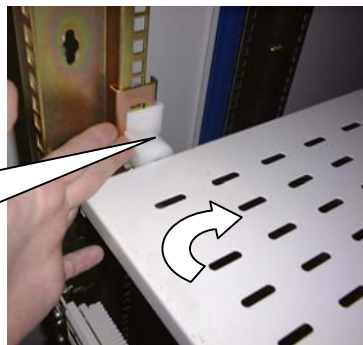

## Step 6.