


## INSTALLATION

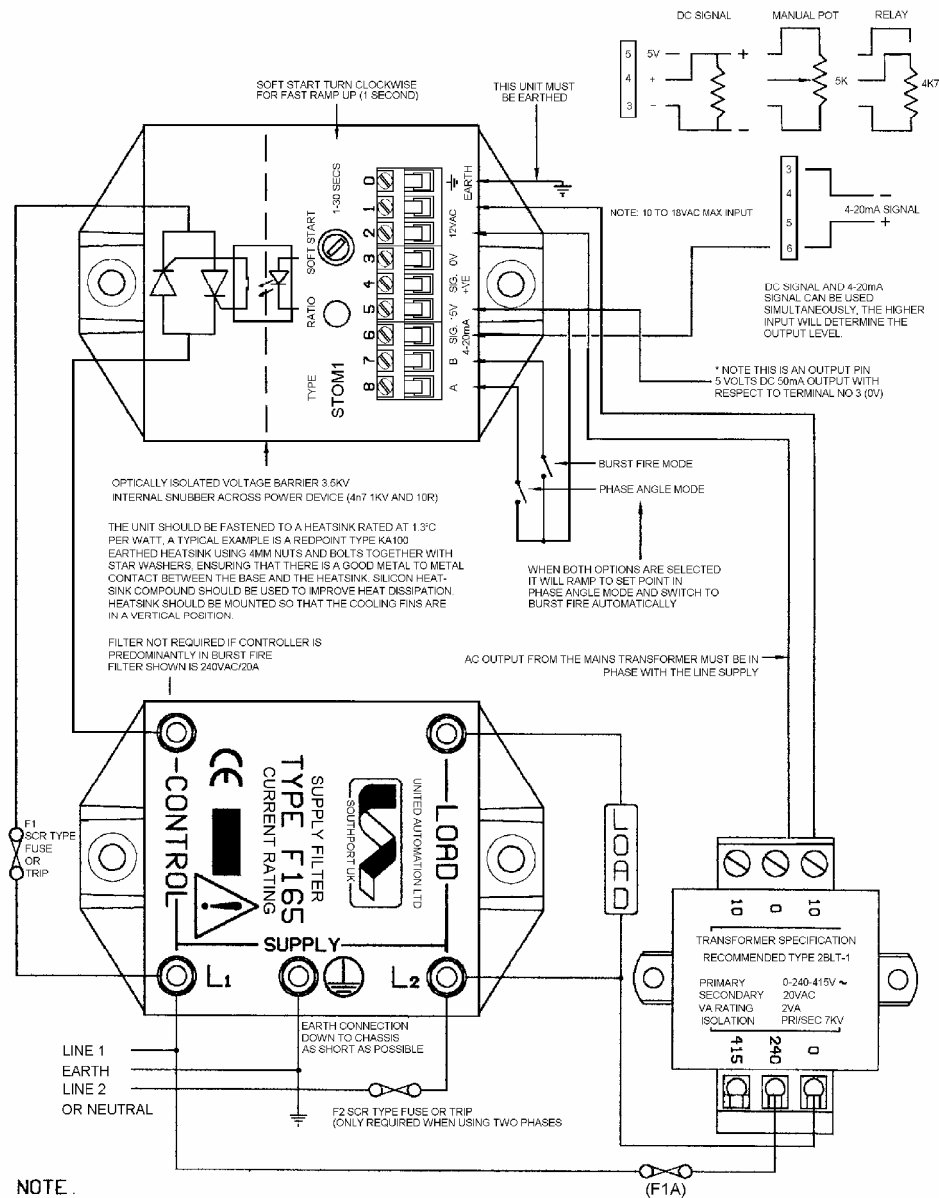

NOTE.

MATCH MAINS SUPPLY FILTER TO THE SUPPLY VOLTAGE AND MAX. LOAD CURRENT WHEN USED IN PHASE ANGLE MODE

## INSTALLATION

### STOM1 COOLING REQUIREMENTS HEATSINK CALCULATIONS


THIS APPLICATION NOTE PROVIDES ADDITIONAL INFORMATION AND SIMPLE CALCULATIONS TO ALLOW YOU TO DETERMINE A MAXIMUM PERMISSIBLE HEATSINK THERMAL RESISTANCE FOR A GIVEN SET OF OPERATING CONDITIONS WHEN THE CONTROLLER IS ON THE TEMPERATURE, ( $T_j$  MAX), AT THE SEMICONDUCTOR JUNCTION WILL OBVIOUSLY BE HOTTER THAN THE ATTACHED HEATSINK. THIS IS DUE TO RESISTANCE TO HEAT TRANSFER WHICH IS CALLED THERMAL RESISTANCE, AND IT IS MEASURED IN DEGREES CELCIUS PER WATT

#### PARAMETERS -

230V AC SUPPLY AT 25A AND A MAXIMUM AMBIENT AIR TEMPERATURE OF 50°C

- 1 FROM THE GRAPH BELOW FIND THE MAXIMUM POWER DISSIPATION FOR 25A  
 $25A = 31 \text{ WATTS}$
- 2 CALCULATE THE TEMPERATURE DIFFERENCE BETWEEN  $T_j$  AND THE HEATSINK  
 $31 \text{ WATTS} \times 1.1^\circ\text{C/W} = 34.1^\circ\text{C}$
- 3  $T_j$  MUST NOT RISE ABOVE 125°C  
 $125 - 34.1 = 90.9^\circ\text{C}$
- 4 THE MAXIMUM AMBIENT TEMPERATURE IS 50°C  
 $90.9 - 50 = 40.9^\circ\text{C}$
- 5 DIVIDING THIS TEMPERATURE BY THE WATTAGE (1) GIVES  
 $40.9 \div 31 = 1.32^\circ\text{C/W}$

THEREFORE ANY HEATSINK OF 1.32°C/W OR LESS WILL BE SATISFACTORY.

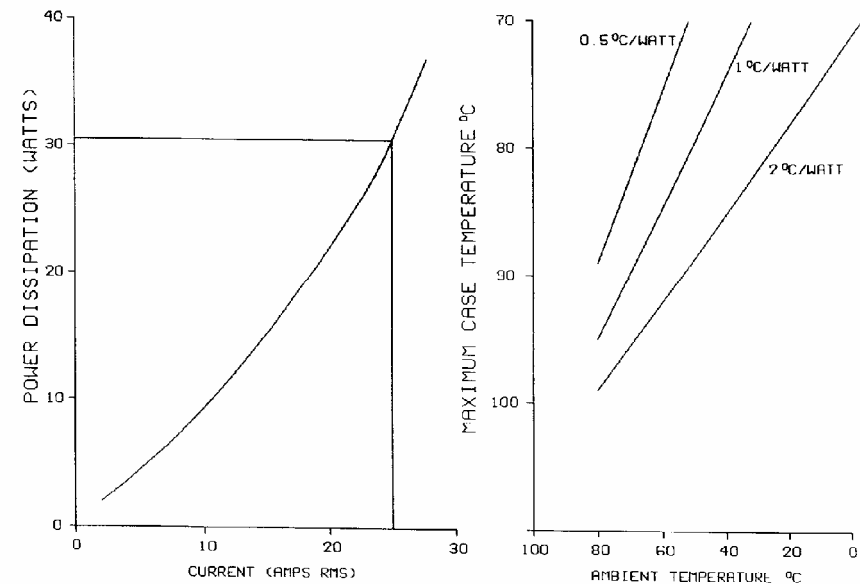

## SPECIFICATIONS

I <sup>2</sup> t for fusing 10ms	250 A <sup>2</sup> s	Min line voltage	5V ac
Max, transient over volts	1200V ac	Max line voltage	440V ac
Max electrical isolation	3500V	Control signals	0-5V dc & 4-20mA
Power consumption	1.2 watts	Operating frequency	50 to 60 Hz +/- 5%
Max load current @ 65°C	25A	Supply voltage	10-18V ac
Min load current @ 65°C	0.05A	Peak one cycle surge	250A
Man. control potentiometer	5K	Max operating temp	0°C to 65°C
Power Terminals	M4 X 10mm	Max operating temp	-20°C to +85°C

## FUSING

It is recommended to use semiconductor fast acting type fuses or circuit breakers (Semiconductor-MCB) for unit/device protection. On initial 'switch on' some loads may need an increased Factor of Safety (F of S) for unit and/or device protection. (See the SRA Datasheet for further information).

## CE MARKING

This product family carries a "CE marking". These phase angle controllers need a suitable remote filter. For information see recommendation section and contact our sales desk. (See the Declaration of Conformity).

## RECOMMENDATION

Other documents available on request, which may be appropriate for your applications.

CODE	IDENTITY	DESCRIPTION
X10229	RFI	Filtering recommendation - addressing EMC directive.
X10213	ITA	Interaction, uses for phase angle and for burst fire control.
X10255	SRA	Safety requirements - addressing the Low Voltage Directive (LVD) including :-Thermal data/cooling ; "Live" parts warning & Earth requirements; Fusing recommendations.

AP02/4 COS UAL Conditions of sale

**NOTE** It is recommended that installation and maintenance of this equipment should be done with reference to the current edition of the I.E.E. Wiring Regulations (BS7671) by suitably qualified/trained personnel. The regulations contain important requirements regarding safety of electrical equipment. (For International Standards refer to I.E.C. Directive I.E.C. 950).

## ORDER CODE:

State part number: Stom1.

Optional extras include: Potentiometer, Supply Transformer, Heatsink compound, Filter.



## UNITED AUTOMATION LIMITED

1 Southport Business Park  
Kew  
Southport, PR8 4HQ  
ENGLAND

Tel: 0044 (0) 1704 - 516500 Main  
Tel: 0044 (0) 1704 - 516516 Sales  
Fax: 0044 (0) 1704 - 516501  
Enquiry@united-automation.com  
www.united-automation.com  
Date 26/06/01

Page No. 2 of 2 Issue 3



## MICROPROCESSOR BASED 25A AC POWER CONTROLLER

## STOM1

X10223

## DESCRIPTION

The STOM1 is a microprocessor based power controller, with a built in power device that is capable of controlling up to 25A at voltages up to 440V ac. The STOM1 has two types of power control, Phase Angle and Burst Firing, either can be selected separately. The module can also be used for soft starting in Phase Angle mode and it will automatically switch to Burst Fire mode when the control signal has reached a preset level. The control will remain in the Burst Fire State even if the input signal drops below the preset level. The STOM1 also has a ramp up from cold, which can be set from 0 to 30 seconds. The controller will operate from a 0 to 5V dc or 4 to 20mA signal, these signal inputs are fully isolated and can be controlled from a Temperature Controller or PC etc. The STOM1 provides the equipment designer with flexibility in a wide range of applications.

## APPLICATIONS

Suitable for most resistive loads including ovens, moulders, and dryers with current ratings up to 25A when fitted onto a suitable heatsink (1.3°C/W). Ideal for unusual heating loads which have very low resistance when cold.

## FEATURES

Energy saving  
Simple wiring  
Isolated inputs

Soft start facility  
Standard 80mm fixing  
Rugged and compact

Phase angle or Burst firing  
Solid state reliability  
Integrated Power Device


## INSTALLATION

### NOTE

THE STOM1 AC POWER CONTROLLER SHOULD BE MOUNTED ON A CLEAN OR UNPAINTED METAL THERMALLY CONDUCTIVE SURFACE. USING HEAT SINK COMPOUND THINLY APPLIED BETWEEN THE CONTROLLER AND THE MOUNTING PLATE.

IN ORDER TO COMPLY WITH THE CURRENT EMC DIRECTIVE WHEN USING IN PHASE ANGLE MODE A LINE FILTER MUST BE USED.


### DIMENSIONS

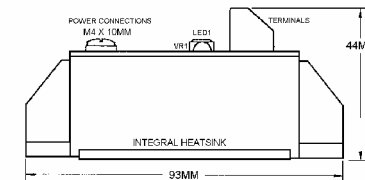

### CONTROL OPTIONS

- DC INPUT  
VOLTAGE CONTROL  
TERMINALS 3,4 AND 5
- 3 = 0V
  - 4 = 0 TO 5V
  - 5 = 5V OUTPUT
- 5K INPUT  
CURRENT CONTROL  
TERMINALS 3 AND 5
- 3 = 0V
  - 5 = 4-20mA
- 240R INPUT  
MODE A PHASE ANGLE  
TERMINAL A AND 5
- A = 5V
  - 5 = 5V
- MODE B BURST FIRE  
TERMINALS B AND 5
- B = 5V
  - 5 = 5V
- MODE A AND B START IN  
PHASE ANGLE SWITCHING  
TO BURST FIRE  
TERMINAL A,B AND 5
- A = 5V
  - B = 5V
  - 5 = 5V
- PHASE REFERENCE AND  
SUPPLY TERMINALS 1 AND 2
- 10V TO 18V AC AT 75 mA

### WIRING AND CONNECTIONS

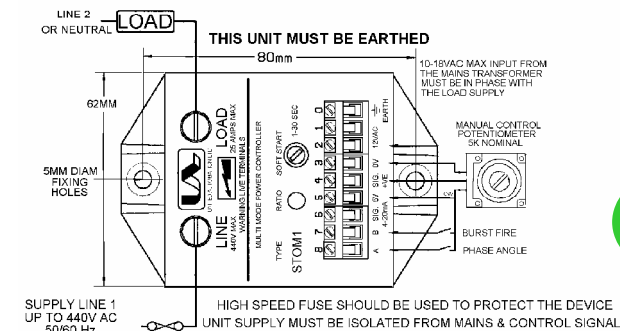

SUPPLY LINE 1 UP TO 440V AC 50/60 Hz

HIGH SPEED FUSE SHOULD BE USED TO PROTECT THE DEVICE  
UNIT SUPPLY MUST BE ISOLATED FROM MAINS & CONTROL SIGNAL

### WARNING

SWITCH OFF SUPPLY BEFORE COMMENCING ANY SERVICING WORK

RoHS Compliant  
Directive  
2002/95/EC

This document was created with Win2PDF available at <http://www.daneprairie.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.