

INSTRUCTIONS FOR USE


COMPLEX DESIGN

PROFOOD™ re-usable Nitrile Glove 37-350 & 37-355

A. Use

These gloves are designed for contact with food and to protect the hands against short contacts from certain chemicals.

They are in conformity and are marked as per requirements of the European Directive 89/686/EEC and its Amendments and they are in compliance with the European Standards EN 420, EN 388 and EN 374.

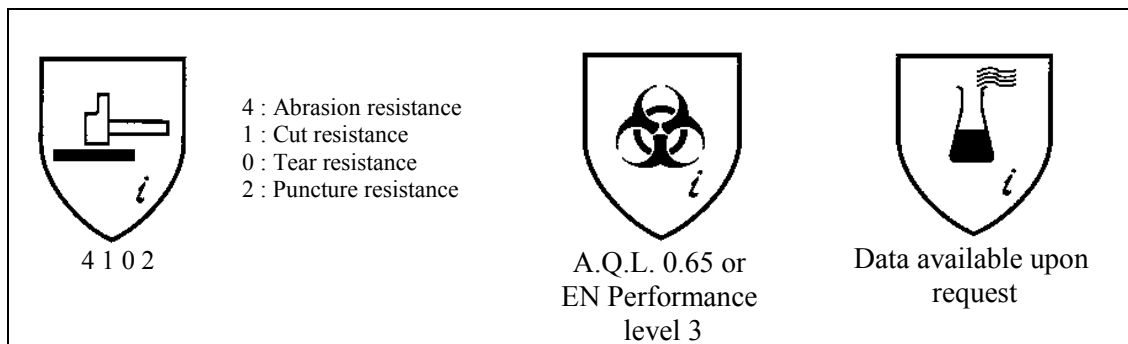

EC-Type examination certificate received from ITF Lyon (I.D. 0072) and EC-Quality Control monitoring for the final product by BSI (I.D. 0086).

B. Precautions for use

1. Before usage, inspect the gloves for any defects or imperfections. If the gloves are ripped or punctured during use, dispose them immediately. If in doubt, do not use the gloves, get a new pair.

2. It is essential to keep all chemicals from the skin, even if they are thought to be harmless. Therefore, use which are rated with a protection index of 6 or with an excellent degradation rating . In all other cases, the gloves should be used for splash protection or short contact only. For more details regarding chemical suitability, please contact the Ansell technical department.

3. Avoid wearing gloves which are dirty on the inside - they will irritate the skin causing dermatitis or worse.

4. Contaminated gloves should be cleaned or washed before removal.

5. Ensure the chemicals cannot enter via the cuff.

6. Do not use against flames or temperatures above 90°C.

C. Ingredients / Hazardous ingredients

Some gloves might contain ingredients which are known to be a possible cause of allergies to sensitised people, hence may develop irritant and/or allergic contact reactions. If allergic reactions would occur, obtain medical advice immediately.

For more information, please contact Ansell's Customer service department.

D. Care instructions

Storage : Keep out from direct sunlight; store in a cool and dry place.
Keep out from sources of ozone or ignition.

Cleaning : The gloves can be laundered at max. 60°C.

E. Disposal

Used gloves may be contaminated with infectious or other hazardous materials.
Dispose of according to Local Authority Regulations. Landfill or incinerate under controlled conditions.

Ansell Ltd.
Internationale Laan 55
1070 Brussels
Belgium

Type	Finish	Colour	Reference	Sizes	Length
Flocked	Reversed Lozenge	Green	37-350	7, 8, 9, 10, 11	330 mm
	Honey Comb	Blue	37-355		