


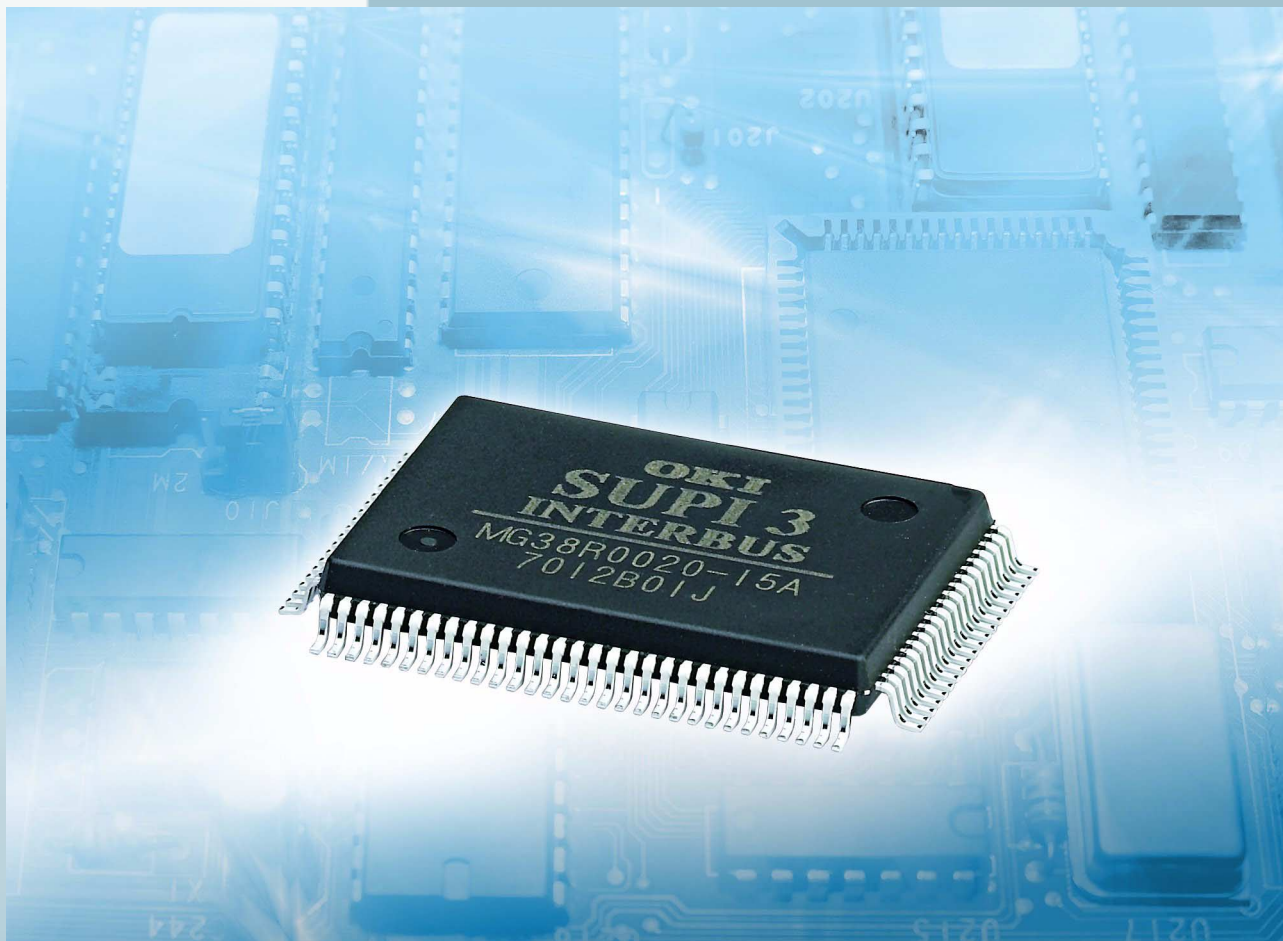

User manual

## **IBS SUPI 3 UM E**

**Order No.: —**

INTERBUS protocol chip IBS SUPI 3



# AUTOMATION

## User manual

### INTERBUS protocol chip IBS SUPI 3

2010-12-09

---

Designation: IBS SUPI 3 UM E

Revision: 03

Order No.: —

This user manual is valid for:

Designation  
IBS SUPI 3 QFP  
IBS CHIP-Muster/...

Order No.  
2746087  
2746951

## Please observe the following notes

In order to ensure the safe use of the product described, you have to read and understand this manual. The following notes provide information on how to use this manual.

### User group of this manual

The use of products described in this manual is oriented exclusively to qualified electricians or persons instructed by them, who are familiar with applicable standards and other regulations regarding electrical engineering and, in particular, the relevant safety concepts.

Phoenix Contact accepts no liability for erroneous handling or damage to products from Phoenix Contact or third-party products resulting from disregard of information contained in this manual.

### Explanation of symbols used and signal words



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



#### **DANGER**

This indicates a hazardous situation which, if not avoided, will result in death or serious injury.



#### **WARNING**

This indicates a hazardous situation which, if not avoided, could result in death or serious injury.



#### **CAUTION**

This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

The following types of messages provide information about possible property damage and general information concerning proper operation and ease-of-use.



#### **NOTE**

This symbol and the accompanying text alerts the reader to a situation which may cause damage or malfunction to the device, either hardware or software, or surrounding property.



This symbol and the accompanying text provides additional information to the reader. It is also used as a reference to other sources of information (manuals, data sheets, literature) on the subject matter, product, etc.

**General terms and conditions of use for technical documentation**

Phoenix Contact reserves the right to alter, correct, and/or improve the technical documentation and the products described in the technical documentation at its own discretion and without giving prior notice, insofar as this is reasonable for the user. The same applies to any technical changes that serve the purpose of technical progress.

The receipt of technical documentation (in particular data sheets, installation instructions, manuals, etc.) does not constitute any further duty on the part of Phoenix Contact to furnish information on alterations to products and/or technical documentation. Any other agreement shall only apply if expressly confirmed in writing by Phoenix Contact. Please note that the supplied documentation is product-specific documentation only and that you are responsible for checking the suitability and intended use of the products in your specific application, in particular with regard to observing the applicable standards and regulations. Although Phoenix Contact makes every effort to ensure that the information content is accurate, up-to-date, and state-of-the-art, technical inaccuracies and/or printing errors in the information cannot be ruled out. Phoenix Contact does not offer any guarantees as to the reliability, accuracy or completeness of the information. All information made available in the technical data is supplied without any accompanying guarantee, whether expressly mentioned, implied or tacitly assumed. This information does not include any guarantees regarding quality, does not describe any fair marketable quality, and does not make any claims as to quality guarantees or guarantees regarding the suitability for a special purpose.

Phoenix Contact accepts no liability or responsibility for errors or omissions in the content of the technical documentation (in particular data sheets, installation instructions, manuals, etc.).

The aforementioned limitations of liability and exemptions from liability do not apply, in so far as liability must be assumed, e.g., according to product liability law, in cases of premeditation, gross negligence, on account of loss of life, physical injury or damage to health or on account of the violation of important contractual obligations. Claims for damages for the violation of important contractual obligations are, however, limited to contract-typical, predictable damages, provided there is no premeditation or gross negligence, or that liability is assumed on account of loss of life, physical injury or damage to health. This ruling does not imply a change in the burden of proof to the detriment of the user.

### Statement of legal authority

This manual, including all illustrations contained herein, is copyright protected. Use of this manual by any third party is forbidden. Reproduction, translation, and public disclosure, as well as electronic and photographic archiving or alteration requires the express written consent of Phoenix Contact. Violators are liable for damages.

Phoenix Contact reserves all rights in the case of patent award or listing of a registered design. Third-party products are always named without reference to patent rights. The existence of such rights shall not be excluded.

### How to contact us

#### Internet

Up-to-date information on Phoenix Contact products and our Terms and Conditions can be found on the Internet at:

[www.phoenixcontact.com](http://www.phoenixcontact.com).

Make sure you always use the latest documentation.

It can be downloaded at:

[www.phoenixcontact.net/catalog](http://www.phoenixcontact.net/catalog).

#### Subsidiaries

If there are any problems that cannot be solved using the documentation, please contact your Phoenix Contact subsidiary.

Subsidiary contact information is available at [www.phoenixcontact.com](http://www.phoenixcontact.com).

#### Published by

PHOENIX CONTACT GmbH & Co. KG  
Flachsmarktstraße 8  
32825 Blomberg  
Germany  
Phone +49 - (0) 52 35 - 3-00  
Fax +49 - (0) 52 35 - 3-4 12 00

PHOENIX CONTACT  
P.O. Box 4100  
Harrisburg, PA 17111-0100  
USA  
Phone +1-717-944-1300

Should you have any suggestions or recommendations for improvement of the contents and layout of our manuals, please send your comments to

[tecdoc@phoenixcontact.com](mailto:tecdoc@phoenixcontact.com).

# Table of contents

|       |                                                               |      |
|-------|---------------------------------------------------------------|------|
| 1     | Structure and basic wiring .....                              | 1-1  |
| 1.1   | Introduction.....                                             | 1-2  |
| 1.2   | Basic structure.....                                          | 1-3  |
| 1.2.1 | New features of the IBS SUPI 3 chip .....                     | 1-5  |
| 1.2.2 | Field of application .....                                    | 1-8  |
| 1.3   | Housing type .....                                            | 1-8  |
| 1.3.1 | QFP 100 pin table .....                                       | 1-9  |
| 1.3.2 | QFP 100 (Quad Flat Pack) .....                                | 1-11 |
| 1.3.3 | Signal description .....                                      | 1-13 |
| 1.4   | Basic wiring .....                                            | 1-16 |
| 1.4.1 | Clock, initialization .....                                   | 1-16 |
| 1.4.2 | Configuration options .....                                   | 1-18 |
| 2     | INTERBUS interfaces .....                                     | 2-1  |
| 2.1   | Overview .....                                                | 2-1  |
| 2.2   | Local bus interface 8-wire protocol .....                     | 2-1  |
| 2.3   | Remote bus connection.....                                    | 2-3  |
| 3     | Application interface .....                                   | 3-1  |
| 3.1   | Overview .....                                                | 3-1  |
| 3.2   | Bus terminal module mode .....                                | 3-1  |
| 3.3   | Input/output mode .....                                       | 3-4  |
| 3.4   | µP (microprocessor) access mode .....                         | 3-7  |
| 3.4.1 | Synchronization options .....                                 | 3-15 |
| 3.4.2 | SET-I register .....                                          | 3-16 |
| 3.4.3 | SET-II register .....                                         | 3-19 |
| 3.4.4 | ID code register .....                                        | 3-20 |
| 3.4.5 | IB state register .....                                       | 3-23 |
| 3.4.6 | Cycle read and cycle write registers .....                    | 3-24 |
| 3.4.7 | Processor alarm register and processor command register ..... | 3-24 |
| 3.5   | Register expansion.....                                       | 3-25 |
| 3.5.1 | Examples .....                                                | 3-25 |
| 3.5.2 | Register expansion interface timing .....                     | 3-30 |
| 3.6   | Diagnostic inputs and outputs .....                           | 3-32 |
| A     | Technical data .....                                          | A-1  |
| A 1   | General notes about processing.....                           | A-3  |
| A 1.1 | Storage .....                                                 | A-3  |
| A 1.2 | Processing time .....                                         | A-3  |
| A 1.3 | Soldering .....                                               | A-3  |
| A 2   | ID code specification (extract) .....                         | A-4  |
| A 3   | Length code specification.....                                | A-7  |

B    Wiring examples ..... B-1

C    Appendix ..... C-1

        C 1    List of figures ..... C-1

        C 2    List of tables ..... C-3

        C 3    Index..... C-5


# 1 Structure and basic wiring

The IBS SUPI 3 (**S**erial **U**niversal **P**rotocol **I**nterface) chip represents a new generation of INTERBUS slave protocol chips and an easy interface to INTERBUS. The integrated diagnostic and error management is a novelty in the chip; it allows an exact determination of error location and cause in a system and also reduces external circuitry.

On the basis of this description you may implement your own INTERBUS devices within a very short time. With the end user in mind, subject the devices to the INTERBUS conformance test.

In addition to this document you will find the INTERBUS Club guideline "Conformity Test and Certification" as a reference work on the Internet at [www.interbusclub.com](http://www.interbusclub.com).

Current hardware and software information for the device manufacturer as well as further product documents from Phoenix Contact can be found on the Internet at [www.phoenixcontact.net/catalog](http://www.phoenixcontact.net/catalog).

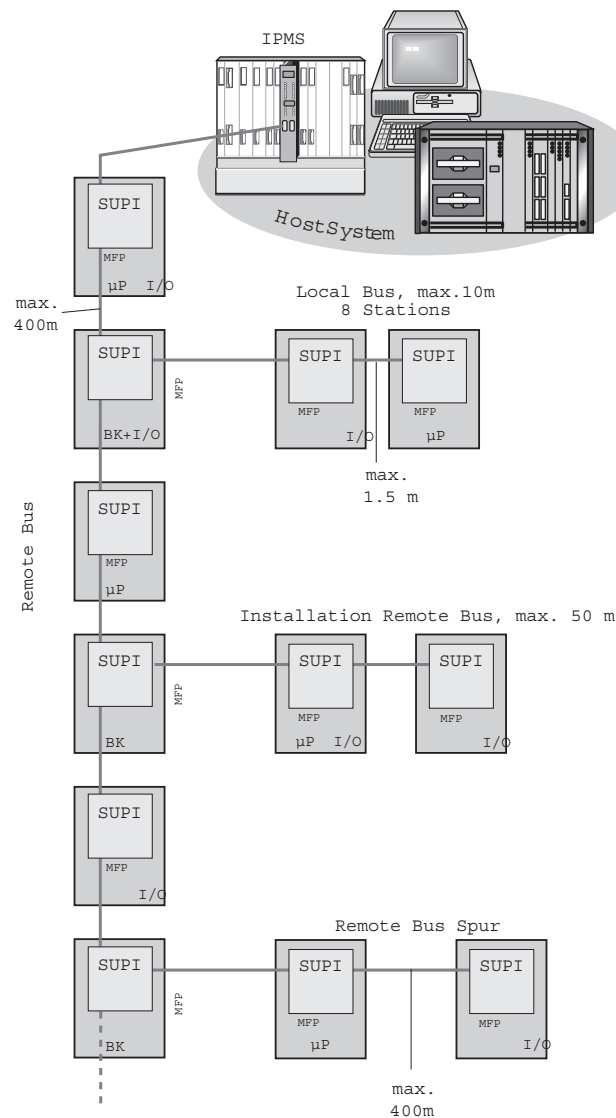

**Application areas of the INTERBUS slave protocol chip**

5043B102

Figure 1-1 Fields of application of the INTERBUS SUPI 3 slave protocol chip

## 1.1 Introduction

The IBS SUPI 3 chip is an ASIC in 0.5  $\mu\text{m}$  CMOS technology. It represents the third generation of INTERBUS slave protocol chips and is pin- and function-compatible to the previous SUPI 2 chip. Every INTERBUS master operates together with the SUPI 3 chip. The IBS PC AT-T PC interface board supports the SUPI 3 chip by driver version 3.1 or later.



The protocol stack in the middle comprises layer 1 and layer 2 of the ISO/OSI reference model. Data is provided to the MDS (Medium Dependent Sublayer) from an external MAU (Medium Attachment Unit) e.g., RS-485 or fiber-optic access. In this layer, scanning, line decoding and encoding are carried out and time conditions are defined. The SUPI 3 chip has three channels in the MDS for one incoming and two outgoing interfaces.

The MIS (Medium Independent Sublayer) forms the upper edge of layer 1, i.e., the physical layer. It is intended for routing the three MDS channels and for connecting layer 2.

Its lower edge represents the medium access control (MAC). This layer performs the ring access as well as the data security. The MAC sublayer serves the 8-byte transmit and receive buffers for INTERBUS data as well as the 16-byte transmit and receive buffers for the identification transmission cycle. The application and higher protocol layers have access to these buffers via the 16-bit **Multi-Functions Pin** interface (MFP interface). The MFP interface can be set according to the interface implementation requirements via four configuration pins as an I/O port or as a microprocessor interface of a CPU environment. The MFP interface contains an interrupt controller with the necessary write and read registers as well as parameterization and state registers for CPU applications. These registers allow to configure the chip and to visualize certain protocol events.

Data of the transmit and receive buffers is taken from the MAC sublayer, encoded correspondingly and sent to the suitable MDS channel via the MDS sublayer. After the line encoding, data is sent to the medium via the external MAU.

Compared to previous chips, the central diagnostics and report manager as well as the error detectors which are able to read certain error patterns at all MDS channels and the MAC sublayer, are important new features of the SUPI 3 chip. This block distinguishes between events with high or low priority. Events of low priority, also called report events are, for example, the MAU warnings in the block diagram. These warnings are provided by the MAU and indicate an impairment of the transmission quality. This means that not only faults, but also creeping impairment in quality is detected and signaled at a very early stage.

Diagnostic events with high priority are error sources which cause interference in the transmission cycle. The diagnostics and report manager ensures both generation and non-time-critical transmission of error patterns. The error patterns are stored in the ID send buffer and transmitted from the MAC sublayer to the bus master.

If an error exceeds the permissible data update time of the bus system but is too short for a central check of all devices by the master, the on-chip diagnostics shows its performance. The diagnostics manager stores all detected errors on the transmission medium as well as breakdowns of the voltage supply as error patterns in the chip until it has been read and acknowledged by the bus master. This procedure allows a unique assignment of sporadic errors, which in general are difficult to identify, to the error location.

### 1.2.1 New features of the IBS SUPI 3 chip

Although the diagnostics described above is an important feature, it is less important to developers of INTERBUS devices when designing the circuit. The efforts are reduced because functions are implemented in the SUPI 2 chip by additional hardware.

For example, the voltage monitoring of all electrically isolated areas is no longer necessary because the MDS sublayers offer a better evaluation. This reduces hardware expense considerably. The power-up reset circuitry of the SUPI 3 chip has also been optimized.

For a better detection of errors caused by the transmission medium (e.g. loose contacts or failure of a differential signal line of the RS-485 interface), this state must be mapped to a high level at the data input. This means for the RS-485 interface to force a logic "1" on the receive data line in the event of an error. The line decoders in the MDS sublayer interpret this as an idle message. Since idle messages defined in the protocol have a logic "0" encoding, a distinction is possible using MAU fail timers. If the MAU fail timer recognizes this "1" state for a set time, this is indicated as a MAU error to the diagnostics manager. The "MAU warning" function can detect, for example, the impairment of optical components caused by aging or an increasing pollution of lenses in the data light barriers before it comes to a complete failure. For this, the output of a trigger must be led to the new "MAU warning" inputs of the SUPI 3 chip.

For a better support of software flexibility on the slaves, the module identification code (ID code) can now be loaded to the SUPI 3 chip. Like the length code in the SET-I register, this code is protected from accidental writing by an automatic latching mechanism.

This mechanism and applying the "μP\_not\_Ready" ID code to the physical pins of the SUPI 3 allows reconfiguration of the protocol chip by intelligent modules even after the bus master has initialized the INTERBUS system. This means when the INTERBUS master has detected a device with the "μP\_not\_Ready" ID code in the INTERBUS system, it waits for the final configuration. Therefore, the same hardware can be used for very different applications.

Two message registers which realize a management channel to the INTERBUS master, are another new feature. The user has no direct access to the channel. It is an option for future applications. A new function has been implemented in the SET-II register. By setting bit 5, a μP watchdog input is activated. Register 14, which was previously not available is used to enable additional interrupts. In this way an interrupt can be generated when the master writes a processor alarm register or when the layer 2 watchdog has elapsed. The new register 15 stores test functions for an engineering test during the development of the chip. These functions are not important for the user.

#### Summary of the new IBS SUPI 3 chip features:

- With its diagnostic features, the diagnostic and report manager is the heart of the SUPI extensions. It stores error localization information for the bus master.
- The new SUPI 3 functions are supported by controller boards as of Generation 4 only (firmware 4.0 or later).
- The SUPI 3 is manufactured in a 0.5 μm technology. This requires a more careful design and offers the use of additional quartz types for the oscillator with new external circuitry.
- The pad dimensions of the QFP 100 housing were modified so that chip requires less space.

**Improvements compared to SUPI 2**

- Filtering of the quasi-static inputs:
 

|            |                                            |
|------------|--------------------------------------------|
| RBST, LBST | : 270 ms                                   |
| CONF       | : 35 ms                                    |
| /StatErr   | : 270 ms (standard) / 2.5 µs (µP watchdog) |
| /ResIN     | : 520 µs                                   |

These signals also had Schmitt trigger input circuits.

- Increase of driver capability of the outputs /ResReg, ClkExR, BA, RD, LD/TR, Error from 2 mA to 12 mA.
- Watchdog for "bus active" is now reset for every valid ID or data cycle.
- Start bit recognition: A spike (pulse <100 ns) in the critical range is recognized as a start bit error.

**Additional functions**

- Manufacturer/mask identification. Hardware version can be detected by the master. Information is mapped to the INFO register of the ID send buffer.
- Layer 2 timeout monitoring: If LaOuD is not sent within a preset time, process OUT data is reset and /ResReg activated, provided that the master has enabled the function.
- µP, ID code register: Now, the entire ID code (ID0-ID12) can be set by a microprocessor.
- "µP\_not\_Ready" ID code: If ID0 to ID7 = 38<sub>hex</sub> (remote bus device) or ID0 to ID7 = 78<sub>hex</sub> (local bus device) is set, new functions are active internally.
- /StatErr can additionally be used to indicate activation of an external processor watchdog.
- Processor command and alarm registers on address 9 form a management channel to the master (currently still reserved).
- On-chip diagnostics: The master activates on-chip diagnostics on the devices during the bus system detection. All devices capable of diagnostics exchange their operation ID registers and diagnostic ID registers. The master thus recognizes all devices able for diagnostics. If errors should occur, they are stored in the diagnostic register. The following diagnostic elements are implemented in the line decoder (forward, return, branch):
  - Power-up reset detection
  - MAU fail (wire interrupt, wire short-circuit).
  - CRC (Cyclic Redundancy Check)
  - Stop bit error detection
  - Validity check of the check sequence
  - RBST, LBST change detection
  - MAU warnings (impairment of the transmission quality).
  - Eight alternative ID registers are addressed by a control word of the controller board and transmitted in the next ID cycle.

- The following registers can be selected:

- 0 Standard register
- 1 First diagnostic bit register
- 2 Second diagnostic Register
- 3 Alarm bit register
- 4 Processor alarm register
- 5 Reserved
- 6 Reserved
- 7 Manufacturer/mask identification

The standard ID register is the default setting.

### 1.2.2 Field of application

The SUPI 3 has been designed for industrial applications.

Table 1-2 General data

| Value          | Quantity |      |      |      |
|----------------|----------|------|------|------|
|                | Min.     | Type | Max. | Unit |
| Supply voltage | 4.5      | 5.0  | 5.5  | V    |
| Temperature    | -40      | +25  | +85  | °C   |

### 1.3 Housing type


The following list explains general symbols and text that will be used in the drawing of the housing.



Position



Maximum material condition MMC



Feature control frame



Basic or exact dimension

BSC

Basic - untoleranced dimension locating true position

REF

A dimension which is obtained from other dimensions and their tolerances

5191B029

### 1.3.1 QFP 100 pin table

Table 1-3 QFP 100 pin table

| Pin No. | Pin Name        | Pin No. | Pin Name        | Pin No. | Pin Name        |
|---------|-----------------|---------|-----------------|---------|-----------------|
| 1       | RBST            | 36      | MFP10           | 70      | ID0             |
| 2       | KM0             | 37      | MFP9            | 71      | SLI1            |
| 3       | n.c.            | 38      | MFP8            | 72      | RGNDA           |
| 4       | KM1             | 39      | n.c.            | 73      | /StatErr        |
| 5       | n.c.            | 40      | V <sub>DD</sub> | 74      | n.c.            |
| 6       | CKO2            | 41      | V <sub>SS</sub> | 75      | CRI1            |
| 7       | n.c.            | 42      | MFP7            | 76      | n.c.            |
| 8       | FromExR         | 43      | V <sub>SS</sub> | 77      | CONF            |
| 9       | DO2             | 44      | MFP6            | 78      | n.c.            |
| 10      | LBST            | 45      | MFP5            | 79      | BA              |
| 11      | C0              | 46      | MFP4            | 80      | LBDA/TR         |
| 12      | C1              | 47      | MFP3            | 81      | Error           |
| 13      | C2              | 48      | MFP2            | 82      | DI1             |
| 14      | CKO1            | 49      | MFP1            | 83      | C3              |
| 15      | DO1             | 50      | n.c.            | 84      | /LBRes          |
| 16      | CRO1 / MAUWR    | 51      | MFP0            | 85      | /ModAck         |
| 17      | SLO1 / MAUWH    | 52      | /ResIn / MAUWS  | 86      | RBDA            |
| 18      | V <sub>SS</sub> | 53      | ID12            | 87      | V <sub>SS</sub> |
| 19      | V <sub>DD</sub> | 54      | n.c.            | 88      | CKI1            |
| 20      | OSC1            | 55      | ID11            | 89      | V <sub>DD</sub> |
| 21      | OSC2            | 56      | n.c.            | 90      | n.c.            |
| 22      | /ResU           | 57      | ID10            | 91      | V <sub>SS</sub> |
| 23      | DI2             | 58      | ID9             | 92      | SLO2            |
| 24      | n.c.            | 59      | ID8             | 93      | LaOuC           |
| 25      | CRI2            | 60      | ID7             | 94      | /LaInD          |
| 26      | n.c.            | 61      | n.c.            | 95      | LaOuD           |
| 27      | SLI2            | 62      | ID6             | 96      | /ClkExR         |
| 28      | CKI2            | 63      | ID5             | 97      | CRO2            |
| 29      | MFP15           | 64      | V <sub>DD</sub> | 98      | /ResReg         |
| 30      | n.c.            | 65      | ID4             | 99      | ToExR2          |

Table 1-3 QFP 100 pin table (continued)

| Pin No. | Pin Name | Pin No. | Pin Name        | Pin No. | Pin Name |
|---------|----------|---------|-----------------|---------|----------|
| 31      | MFP14    | 66      | V <sub>SS</sub> | 100     | ToExR1   |
| 32      | MFP13    | 67      | ID3             |         |          |
| 33      | n.c.     | 68      | ID2             |         |          |
| 34      | MFP12    | 69      | ID1             |         |          |
| 35      | MFP11    |         |                 |         |          |

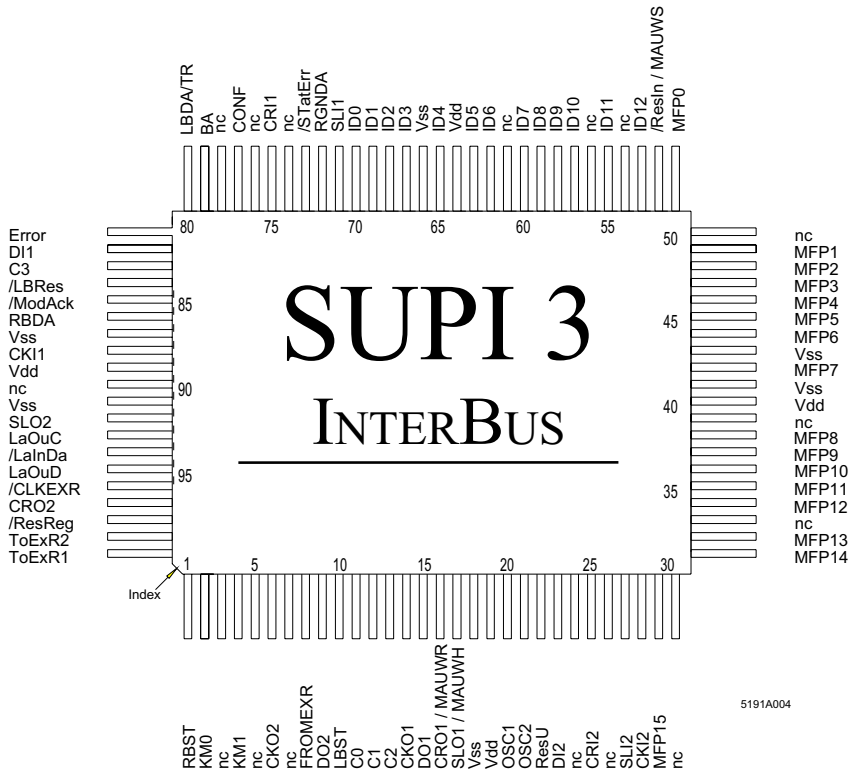


Figure 1-3 Pin layout of the QFP 100 housing

### 1.3.2 QFP 100 (Quad Flat Pack)

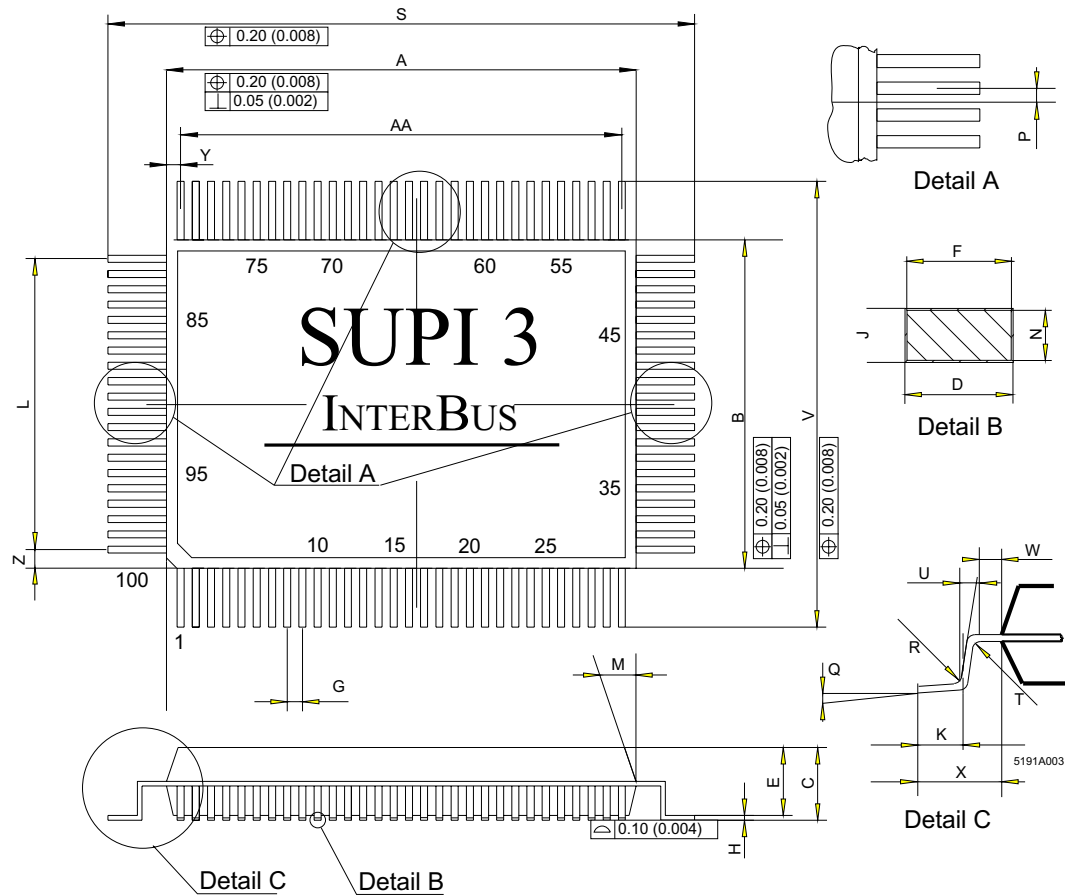


Figure 1-4 Mechanical dimensions of the QFP 100 housing  
(original dimension: millimeters)

Table 1-4 Mechanical dimensions of the QFP 100 housing

| DIM | Millimeters |       | Inches    |       | DIM | Millimeters |       | Inches    |       |
|-----|-------------|-------|-----------|-------|-----|-------------|-------|-----------|-------|
|     | Min.        | Max.  | Min.      | Max.  |     | Min.        | Max.  | Min.      | Max.  |
| A   | 19.90       | 20.10 | 0.783     | 0.791 | P   | 0.325 BSC   |       | 0.013 BSC |       |
| B   | 13.90       | 14.10 | 0.547     | 0.555 | Q   | 0°          | 7°    | 0°        | 7°    |
| C   | 2.80        | 3.40  | 0.110     | 0.134 | R   | 0.25        | 0.35  | 0.010     | 0.014 |
| D   | 0.22        | 0.38  | 0.009     | 0.015 | S   | 22.95       | 23.45 | 0.904     | 0.923 |
| E   | 2.55        | 3.05  | 0.100     | 0.120 | T   | 0.13        | –     | 0.005     | –     |
| F   | 0.22        | 0.33  | 0.009     | 0.013 | U   | 0°          | –     | 0°        | –     |
| G   | 0.65 BSC    |       | 0.026 BSC |       | V   | 16.95       | 17.45 | 0.667     | 0.687 |
| H   | 0.25        | –     | 0.010     | –     | W   | 0.40        | –     | 0.016     | –     |
| J   | 0,11        | 0,23  | 0.004     | 0.009 | X   | 1.60 REF    |       | 0.063 REF |       |
| K   | 0.73        | 1.03  | 0.028     | 0.040 | Y   | 0.58 REF    |       | 0.023 REF |       |
| L   | 12.35 REF   |       | 0.486 REF |       | Z   | 0.83 REF    |       | 0.033 REF |       |
| M   | 5°          | 16°   | 5°        | 16°   | AA  | 18.85 REF   |       | 0.742 REF |       |
| N   | 0.11        | 0.17  | 0.004     | 0.007 |     |             |       |           |       |

### 1.3.3 Signal description

Table 1-5 Signal description

| Designation                        | Meaning                                                                                                                                               | Type                   |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| OSC1<br>OSC2                       | Oscillator input<br>Oscillator output                                                                                                                 | OSC<br>OSC             |
| C3<br>C2<br>C1<br>C0               | Configuration inputs<br>for the MFP interface**                                                                                                       | Clp<br>Cl<br>Cl<br>Cl  |
| KM1<br>KM0<br>RGNDA                | Configuration inputs<br>for the INTERBUS interface**                                                                                                  | Cl                     |
| ID12-ID0                           | Identification code setting data length entry**                                                                                                       | Cl                     |
| MFP15-MFP0                         | Multi-function pins                                                                                                                                   | BDp                    |
| <b>SLxx</b>                        | <b>Control line ID/data cycle</b>                                                                                                                     |                        |
| SLO1/MAUWH<br>SLO2<br>SLI1<br>SLI2 | Select line IN forward path/MAU warning forward path*<br>Select line OUT forward path<br>Select line OUT return path<br>Select line IN return path    | ST<br>B12<br>B12<br>ST |
| <b>Dxx</b>                         | <b>Data line of the INTERBUS ring</b>                                                                                                                 |                        |
| DO1<br>DO2<br>DI1<br>DI2           | Data line IN forward path<br>Data line OUT forward path<br>Data line OUT return path<br>Data line IN return path                                      | ST<br>B12<br>B12<br>ST |
| <b>CKxx</b>                        | <b>Clock line for the INTERBUS devices</b>                                                                                                            |                        |
| CKO1<br>CKO2<br>CKI1<br>CKI2       | Clock line IN forward path<br>Clock line OUT forward path<br>Clock line OUT return path<br>Clock line IN return path                                  | ST<br>B12<br>B12<br>ST |
| <b>CRxx</b>                        | <b>Control line check sequence</b>                                                                                                                    |                        |
| CRO1/MAUWR<br>CRO2<br>CRI1<br>CRI2 | Control line IN forward path/MAU warning return path*<br>Control line OUT forward path<br>Control line OUT return path<br>Control line IN return path | ST<br>B12<br>B12<br>ST |
| /ResIn/MAUWS                       | INTERBUS reset input/MAU warning branch*. Input filtered with $t_{f2} = 520 \mu s^{***}$ , directly passed on to pin /LBRes.                          | STp                    |
| /LBRes                             | INTERBUS reset output                                                                                                                                 | B2                     |
| RBST                               | Alarm input whether outgoing INTERBUS interface is used. Input filtered with $t_{f1} = 270 ms^{***}$                                                  | ST                     |

Table 1-5 Signal description (continued)

| Designation | Meaning                                                                                                                                                                                                                                                  | Type |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| LBST        | Alarm input whether local bus interface is used in BK module applications. In all other modes of operation this pin is to be connected to $V_{SS}$ . Input filtered with $t_{f1} = 270 \text{ ms}^{***}$                                                 | ST   |
|             | <b>Diagnostic signals</b>                                                                                                                                                                                                                                |      |
| /StatErr    | "Module error" alarm input or $\mu P$ watchdog, input filtered with $t_{f1} = 270 \text{ ms}^{***}$ . When using the pin as a $\mu P$ watchdog pin the scan time is set to $t_{f3} = 2.5 \mu s^{***}$ . See also Section "SET-II register" on page 3-19. | STp  |
| /ModAck     | Acknowledge output for a recognized module error. This output is not used in standard applications.                                                                                                                                                      | B2   |
| CONF        | "Reconfiguration request" alarm input. The input is filtered with $t_{f4} = 35 \text{ ms}^{***}$ . This input is connected to GND in standard applications.                                                                                              | STp  |
| RBDA        | "Outgoing interface is disabled" alarm output                                                                                                                                                                                                            | B12  |
| LBDA/TR     | "Local bus disabled" alarm output for BK "PCP active" with $\mu P$ with PCP protocol software                                                                                                                                                            | B12  |
| BA          | "INTERBUS active" alarm output                                                                                                                                                                                                                           | B12  |
| Error       | "Error in the connected local bus" alarm output for BK modules                                                                                                                                                                                           | B12  |
|             | <b>Signals for external register expansion</b>                                                                                                                                                                                                           |      |
| ClkExR      | Clock for external shift registers                                                                                                                                                                                                                       | B12  |
| ToExR1      | Data output for external shift registers without using the SUPI 3 internal registers                                                                                                                                                                     | B2   |
| ToExR2      | Data output for external shift registers after use of the SUPI 3 internal registers                                                                                                                                                                      | B2   |
| FromExR     | Data input for external shift registers                                                                                                                                                                                                                  | ST   |
| LaOuD       | Latch signal of output data shift registers -> latch registers                                                                                                                                                                                           | B2   |
| LaOuC       | Latch signal of control data shift registers -> latch registers                                                                                                                                                                                          | B2   |
| /LaInD      | Latch signal of input data peripherals -> shift registers                                                                                                                                                                                                | B2   |
| /ResReg     | Reset signal for external latch registers. Can also be used as the "INTERBUS reset inactive" alarm output                                                                                                                                                | B12  |
| /ResU       | Initialization reset                                                                                                                                                                                                                                     | ST   |
| $V_{DD}$    | +5 V supply voltage                                                                                                                                                                                                                                      |      |
| $V_{SS}$    | Ground                                                                                                                                                                                                                                                   |      |

- \* The MAU warning bits (**M**edium **A**ttachment **U**nit) indicate a critical, but still functioning transmission path. MAU warnings can only be used in dedicated 2-wire operation (as MAU warning input filtered with  $t_{r3}=520\ \mu\text{s}$ ). See also "Diagnostic inputs and outputs" on page 3-32
- \*\* These inputs require a hardware connection and the levels applied must not be modified during bus operation. (See Section "Overview" on page 2-1 and Section "Overview" on page 3-1)
- \*\*\* The filtering causes the signals to have the same state for at least  $t_{fi}$  before a modified signal state becomes effective internally.

#### Explanation of cell types

|     |                                                                                                                           |
|-----|---------------------------------------------------------------------------------------------------------------------------|
| BDp | Bidirectional, with Schmitt trigger inputs with internal pull-up resistor (50 k $\Omega$ typical) and 4 mA driver outputs |
| CI  | CMOS input                                                                                                                |
| Clp | CMOS input with internal pull-up resistor (50 k $\Omega$ typical)                                                         |
| ST  | Schmitt trigger input                                                                                                     |
| STp | Schmitt trigger input with internal pull-up resistor (50 k $\Omega$ typical)                                              |
| B2  | 2 mA output                                                                                                               |
| B12 | 12 mA driver output                                                                                                       |
| OSC | Oscillator cell                                                                                                           |

## 1.4 Basic wiring

### 1.4.1 Clock, initialization

#### Clock supply

The SUPI 3 has an on-chip oscillator. Therefore, for applications in which the 15 MHz clock required by the SUPI 3 is of no further use, it is sufficient to use a 16 MHz quartz. The quartz is connected to the OSC1 and OSC2 pins. With the two capacitors that are connected from OSC1 and OSC2 to ground, the quartz forms a three-point oscillator. To set the working point of the on-chip oscillator, a 1 MΩ resistor is inserted, from OSC1 to OSC2, in parallel to the quartz. The capacitor values given in Figure "Clock lines of the SUPI 3" on page 1-16 are only a typical case. Please observe that due to the board layout the interfering capacitances have a considerable effect on the response time of the quartz oscillating circuit. Therefore, it is required to check, as for any other design, the correct behavior in the specified range and to modify the proposed values, if necessary. Tests of typical layouts with the quartz elements recommended in the component reference list of the INTERBUS Club have shown a safe response with the circuit and case capacitances of 22 pF each described in the SUPI 2 manual. The circuit of Figure 1-5 should be used for new designs or redesigns.

With this clock no other components must be operated additionally when a quartz crystal is used. The oscillator can also be operated by an external 16 MHz clock with a CMOS level. In this case, the oscillator operates as a buffer. The external clock signal is to be connected to the OSC1 oscillator input.

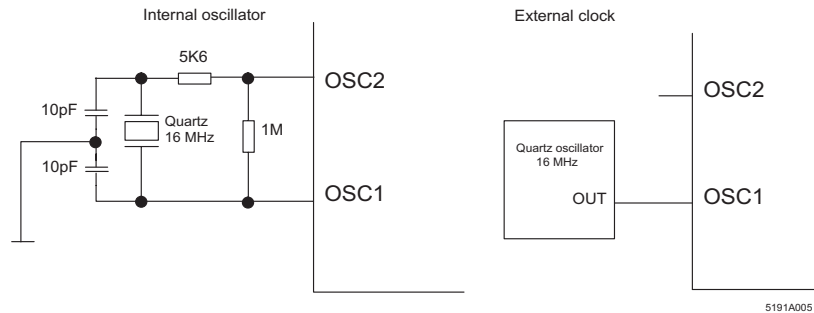


Figure 1-5 Clock lines of the SUPI 3

For the clock applies:

$$f = 16 \text{ MHz} \pm 100 \text{ ppm}$$

Clock ratio: 50%  $\pm$  10% duty cycle

The permissible deviation applies to both short-time as well as long-time stability.

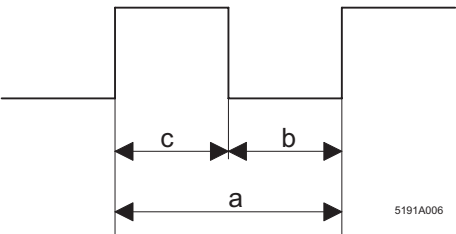


Figure 1-6 Clock ratio for the clock of INTERBUS protocol chips

Table 1-6 Clock timing

| Designation | Name             | Symbol   | Min.          | Typical | Max.          | Unit     |
|-------------|------------------|----------|---------------|---------|---------------|----------|
| a           | Clock period     | $t_c$    | 62.5<br>-6.25 | 62.5    | 62.5<br>+6.25 | ns<br>ps |
| b           | Pulse width high | $t_{pH}$ | 25            | 31.25   | 37.5          | ns       |
| c           | Pulse width low  | $t_{pL}$ | 25            | 31.25   | 37.5          | ns       |

**Initialization**

To put the SUPI 3 to a defined state after power up, the initialization input /ResU should be set to low during power up. During operation, /ResU should be set to high. The reset time must be at least 2 clock cycles (125 ns) when the oscillator has settled and the voltage has been applied. During the reset phase all outputs have a low level. If in microprocessor applications the "μP\_not\_Ready" ID code is not used (see Section "ID code register" on page 3-20), the SUPI 3 must be initialized before the INTERBUS master is started up.

**Reset conditions**

The following conditions must be met for the INTERBUS reset at protocol chips of the 3rd generation (SUPI 3 kernel):

- The voltage must be monitored in the specified range ( $5\text{ V} \pm 10\%$ ).
- The reset time must be at least 2 clock cycles (125 ns) when the oscillator has settled and the voltage is reached.
- The reset must not be influenced by software, LCAs, or similar.

In particular, the reset must not be controlled by a microprocessor.



**NOTE:** For indirect and direct connection of the reset input, the components used in the entire voltage range of the voltage monitor must be operated in accordance with regulations. Standard logic gates are not suitable for this purpose.

## 1.4.2 Configuration options

**INTERBUS interfaces**

The SUPI 3 has two separate INTERBUS interfaces, and one interface to the application. The SUPI 3 chip can be interfaced to the INTERBUS remote bus or local bus. The RGND pin of the SUPI 3 determines whether the chip will be used for a remote or local bus device.

In addition, pins KM0, KM1 and CKO1 have to be configured according to the following table.

Table 1-7 Configuration of the INTERBUS interface

| KM0 | KM1 | CKO1 | RGND | INTERBUS interface mode    |
|-----|-----|------|------|----------------------------|
| 0   | 0   | -    | 1    | 8-wire local bus           |
| 1   | 1   | 0    | 1    | 2-wire local bus           |
| 1   | 1   | 0    | 0    | 2-wire remote bus 500 kbit |
| 0   | 1   | 0    | 0    | 2-wire remote bus 2 Mbit*  |

\* For copper interfaces only

- Pin CKO1 is the incoming INTERBUS clock line for 8-wire applications. For 2-wire applications, the pin must have a low level.

## Multifunction interface

The 16-bit multifunction pin interface (MFP) is the interface to the application. Configuration pins C3, C2, C1, C0 allow the following interface connections to the INTERBUS network

Table 1-8 Configuration of the MFP interface

| C3 | C2 | C1 | C0 | MFP mode                              |
|----|----|----|----|---------------------------------------|
| 1  | 0  | 0  | 0  | BK 8-wire local bus                   |
| 0  | 0  | 1  | 1  | BK I/O module with 8-wire local bus   |
| 0  | 0  | 0  | 0  | BK module 2-wire branch line          |
| 0  | 1  | 0  | 0  | BK I/O module with 2-wire branch line |
| 1  | 0  | 0  | 1  | 16-bit output                         |
| 1  | 0  | 1  | 0  | 16-bit input                          |
| 1  | 1  | 0  | 1  | 8-bit input and 8-bit output          |
| 0  | 0  | 0  | 1  | μP interface 1 byte                   |
| 1  | 0  | 1  | 1  | μP interface 2 bytes                  |
| 1  | 1  | 1  | 1  | μP interface 4 bytes                  |
| 1  | 1  | 0  | 0  | μP interface 6 bytes                  |
| 0  | 0  | 1  | 0  | μP interface 8 bytes                  |

## Identification code

Each INTERBUS device has an identification code (ID code), which can be read by the INTERBUS master (controller) in an identification cycle (ID cycle). The INTERBUS master obtains information from the identification code about the type of the device and its data register length in a data cycle. The identification code consists of three groups.

- An 8-bit code is applied to pins ID0-ID7. The INTERBUS Club has determined this code in the ID code specification, depending on the functionality of the device. An extract of these codes can be obtained from the Appendix.
- Signals ID13-ID15 are not available as pins. They are reserved for the system management (e.g. diagnostics) and cannot be changed directly by the user.
- Pins ID8-ID12 specify the physical data length of the entire bus device. It is to be set for each device according to the following table.

Table 1-9 ID code data length

| ID12 | ID11 | ID10 | ID9 | ID8 | Data length | Firmware version* |
|------|------|------|-----|-----|-------------|-------------------|
| 0    | 0    | 0    | 0   | 0   | 0 words     |                   |
| 0    | 0    | 0    | 0   | 1   | 1 word      |                   |
| 0    | 0    | 0    | 1   | 0   | 2 words     |                   |
| 0    | 0    | 0    | 1   | 1   | 3 words     |                   |
| 0    | 0    | 1    | 0   | 0   | 4 words     |                   |
| 0    | 0    | 1    | 0   | 1   | 5 words     |                   |
| 0    | 0    | 1    | 1   | 0   | 8 words     |                   |

Table 1-9 ID code data length (continued)

| ID12 | ID11 | ID10 | ID9 | ID8 | Data length | Firmware version* |
|------|------|------|-----|-----|-------------|-------------------|
| 0    | 0    | 1    | 1   | 1   | 9 words     |                   |
| 0    | 1    | 0    | 0   | 0   | 1 nibble    | 4.0               |
| 0    | 1    | 0    | 0   | 1   | 1 byte      | 4.0**             |
| 0    | 1    | 0    | 1   | 1   | 3 bytes     | 4.0**             |
| 0    | 1    | 1    | 0   | 0   | Reserved    |                   |
| 0    | 1    | 1    | 0   | 1   | 2 bits      | 4.0               |
| 0    | 1    | 1    | 1   | 0   | 6 words     | 3.2               |
| 0    | 1    | 1    | 1   | 1   | 7 words     | 3.2               |
| 1    | 0    | 0    | 0   | 0   | Reserved    |                   |
| 1    | 0    | 0    | 0   | 1   | 26 words    | 3.7               |
| 1    | 0    | 0    | 1   | 0   | 16 words    | 3.2               |
| 1    | 0    | 0    | 1   | 1   | 24 words    | 3.2               |
| 1    | 0    | 1    | 0   | 0   | 32 words    | 3.2               |
| 1    | 0    | 1    | 0   | 1   | 10 words    | 3.2               |
| 1    | 0    | 1    | 1   | 0   | 12 words    | 3.2               |
| 1    | 0    | 1    | 1   | 1   | 14 words    | 3.2               |
| 1    | 1    | x    | x   | x   | Reserved    |                   |

\* The data length is supported by the controller board (bus master) with the specified firmware version or later.

\*\* The data lengths 1 byte and 3 bytes are supported by the PC AT-T board, version 3.1 or later. The data lengths supported by firmware version 3.2 or later are recognized by the PC AT-T board by driver version 2.0 or later.



The length entry determines the data register length of the entire INTERBUS device - that means the total of registers configurable in the SUPI chip and additional external registers, if any. By default this length entry is wired via the SUPI 3 pins ID12-ID8 by hardware. The physical data length of the IBS SUPI 3 to be set by C0-C3 and possibly used external register must match the logic data length to be set by ID8-ID12, even if the chip was reconfigured with software afterwards (see Section "SET-I register" on page 3-16 and Section "SET-II register" on page 3-19).

**Example:**
**SUPI 3 chip with register expansion SRE 1:**

|                                          |         |           |       |
|------------------------------------------|---------|-----------|-------|
| Data length SUPI 3:                      | 4 words | C3 to C0  | 0010  |
| Data length SRE 1:                       | 3 words |           |       |
| Length entry at the ID pins              | 7 words | ID12 to 8 | 01111 |
| (Total of SUPI 3 and register expansion) |         |           |       |



## 2 INTERBUS interfaces

### 2.1 Overview

When the chip is interfaced to INTERBUS it can be connected to the remote bus, installation remote bus, or local bus.

Remote bus connection is always chosen when long distances (up to 800 m via fiber-optic HCS fiber or up to 400 m via wires) have to be covered. An asynchronous 2-wire protocol and a fiber-optic or differential voltage interface according to RS-485 are used in the remote bus. Therefore the bus cable requires two fibers or five signal lines. Five signal lines for electrical transmission are necessary since there is always one wire pair for the forward and return path as well as a ground cable. A remote bus device always has its own voltage supply. In the event of a remote bus failure, the entire network can only be operated up to the last functioning remote bus device. Post-connected devices can no longer be addressed.

The installation remote bus is a special type of remote bus. In a hybrid cable it carries additional 24 V for the power supply of the I/O. This limits expansion of the installation remote bus to a maximum of 50 m.

A local bus device is used where the physical distance to the next device is limited to less than 10 m (e.g., switch cabinet level). The synchronous 8-wire protocol with CMOS levels or the 2-wire protocol with CMOS levels is used for the local bus. The entire logic required for the INTERBUS interface of a local bus device is supplied by the pre-connected bus terminal module through a supply line in the bus cable. This allows to operate the INTERBUS interface even if the voltage of the application breaks down.

When a local bus branch device fails the bus terminal module can disconnect the defective local bus branch from the network. The rest of the network can continue operation.

### 2.2 Local bus interface 8-wire protocol

Table 2-1 8-wire local bus configuration

| KM0 | KM1 | CKO1 | RGNDA | INTERBUS interface mode |
|-----|-----|------|-------|-------------------------|
| 0   | 0   | -    | 1     | 8-wire local bus        |

The RGNDA pin is to be set to high and the KM0 and KM1 pins to low for local bus applications. The bus signal pins of the SUP3 fulfill the INTERBUS specification of the local bus. The 9 V supply of the local bus can be lowered to 5 V and monitored. The active low output signal of a monitoring module is connected to the /ResU initialization pin. The RBST pin is connected to pin 4 of the local bus output connector. The output connector of the INTERBUS cable contains a jumper. Without an output connector and thus without a jumper (RBST = 0), the outgoing interface is switched off and diverted to the return path by circuitries inside the chip.

15-pos D-SUB connectors are used for the local bus. The following table lists the assignments of the input and output interfaces.

Table 2-2 Pin assignment of the 15-pos. D-SUB INTERBUS local bus connector

| Pin | Signal name of the incoming interface (male connector) | Signal name of the outgoing interface (female connector) |
|-----|--------------------------------------------------------|----------------------------------------------------------|
| 1   | +9 V                                                   | +9 V                                                     |
| 2   | +9 V                                                   | +9 V                                                     |
| 3   | Not used                                               | +5 V                                                     |
| 4   | Not used                                               | RBST                                                     |
| 5   | SLI1                                                   | SLI2                                                     |
| 6   | CKI1                                                   | CKI2                                                     |
| 7   | CRI1                                                   | CRI2                                                     |
| 8   | DI1                                                    | DI2                                                      |
| 9   | GND                                                    | GND                                                      |
| 10  | GND                                                    | GND                                                      |
| 11  | /ResIn                                                 | /LBRes                                                   |
| 12  | SLO1                                                   | SLO2                                                     |
| 13  | CKO1                                                   | CKO2                                                     |
| 14  | CRO1                                                   | CRO2                                                     |
| 15  | DO1                                                    | DO2                                                      |

Please refer to the Appendix for application examples.

#### Local bus interface 2-wire protocol

Table 2-3 2-wire local bus configuration

| KM0 | KM1 | CKO1 | RGNDA | INTERBUS interface mode |
|-----|-----|------|-------|-------------------------|
| 1   | 1   | 0    | 1     | 2-wire local bus        |

The two INTERBUS interfaces only consist of the data lines DO1, DI1, DO2, DI2 and RBST. All other input signals of the two interfaces are to be connected to a low potential. The **incoming** bus interface can be equipped with optocouplers for electrical isolation. The /RBST signal is jumpered in the output connector to  $V_{SS}$ . Without output connector (/RBST = 1), the outgoing interface is thus switched off and diverted to the return path by circuitries inside the chip.

## 2.3 Remote bus connection

Table 2-4 Remote bus configuration

| KM0 | KM1 | CKO1 | RGNDA | INTERBUS interface mode      |
|-----|-----|------|-------|------------------------------|
| 1   | 1   | 0    | 0     | 2-wire remote bus, 500 kbits |

Fiber-optic transmitters and receivers or RS-485 drivers are pre-connected to the INTERBUS interface. The two INTERBUS interfaces consist only of data lines DO1, DI1, DO2, and DI2. All other input signals of the two interfaces are to be connected to a low potential. The incoming bus interface is equipped with optocouplers for electrical isolation.

The RBST pin is connected to pin 9 of the remote bus output connector. Pin RBST recognizes the physical position of the device in the ring. A low potential is connected externally to this pin via a resistor. Pin 9 is jumpered to  $V_{DD}$  in the remote bus cable connector. The RBST input is thus connected to high and SUP1 3 recognizes that it is not the last device in the ring. Therefore, it forwards its data to the following device in the ring. Without output connector (RBST = 0), the outgoing interface is switched off and diverted to the return path by circuitries inside the chip.

By default, 9-pos D-SUB connectors are used for the remote bus. When using other connectors, make sure that RBST is high when the connector is connected and low when the connector is disconnected. The following table lists the assignments of the input and output interfaces.

Table 2-5 Pin assignment of the 9-pos. D-SUB INTERBUS remote bus connector

| Pin | Signal name of the incoming interface (male connector) | Signal name of the outgoing interface (female connector) |
|-----|--------------------------------------------------------|----------------------------------------------------------|
| 1   | DO1                                                    | DO2                                                      |
| 2   | DI1                                                    | DI2                                                      |
| 3   | GNDI                                                   | GND                                                      |
| 4   | Reserved                                               | Reserved                                                 |
| 5   | Reserved                                               | +5 V                                                     |
| 6   | /DO1                                                   | /DO2                                                     |
| 7   | /DI1                                                   | /DI2                                                     |
| 8   | Reserved                                               | Reserved                                                 |
| 9   | Reserved                                               | RBST                                                     |

Please refer to the Appendix for application examples.



## 3 Application interface

### 3.1 Overview

The configuration of the MFP interface determines how the application accesses the INTERBUS network via the SUPI 3 chip.

Three classes are distinguished:

- Bus terminal module (BK)
- Direct input/output
- Access using a microprocessor ( $\mu$ P interface).

The following table lists the three classes and the configuration via pins C3, C2, C1 and C0.

Table 3-1 Operating modes of the MFP interface

| C3 | C2 | C1 | C0 | MFP mode                              |
|----|----|----|----|---------------------------------------|
| 1  | 0  | 0  | 0  | BK module 8-wire local bus            |
| 0  | 0  | 1  | 1  | BK I/O module with 8-wire local bus   |
| 0  | 0  | 0  | 0  | BK module 2-wire branch line          |
| 0  | 1  | 0  | 0  | BK I/O module with 2-wire branch line |
| 1  | 0  | 0  | 1  | 16-bit output                         |
| 1  | 0  | 1  | 0  | 16-bit input                          |
| 1  | 1  | 0  | 1  | 8-bit input and 8-bit output          |
| 0  | 0  | 0  | 1  | $\mu$ P interface 1 byte              |
| 1  | 0  | 1  | 1  | $\mu$ P interface 2 bytes             |
| 1  | 1  | 1  | 1  | $\mu$ P interface 4 bytes             |
| 1  | 1  | 0  | 0  | $\mu$ P interface 6 bytes             |
| 0  | 0  | 1  | 0  | $\mu$ P interface 8 bytes             |

### 3.2 Bus terminal module mode

A bus terminal (BK) module always starts a new level in the INTERBUS system. A new level can be a remote bus or a local bus. A maximum of 16 levels (FW 4.0 or later) is permitted. BK modules are always remote bus devices.

A BK module connects the INTERBUS local bus devices in the field with the INTERBUS remote bus. The BK module makes voltage supply (9 V/1 A) available for the INTERBUS logic of the local bus devices. The BK module can also connect or disconnect the connected remote bus or local bus branch to or from the rest of the network when requested by the INTERBUS master.

A distinction is made between a standard BK module and a BK module (BK) with I/O points (BK I/O).

The standard BK module fulfills the functions described above. However, it has no I/O points so that a data length of "0" must be set. Since no external I/O points are implemented, the FromExR input pin is to be connected to the ToExR1 output.

In addition to the BK functions described above, the BK modules with I/O points can loop external in I/O points between pins ToExR1 and FromExR (see also Section 3.5). The LBST message input is used in these operating modes to recognize a connected local bus or remote bus branch cable.

#### BK module with 8-wire local bus branch

Table 3-2 Configuration BK module with local bus branch

| C3 | C2 | C1 | C0 | MFP mode                            |
|----|----|----|----|-------------------------------------|
| 1  | 0  | 0  | 0  | BK module 8-wire local bus          |
| 0  | 0  | 1  | 1  | BK I/O module with 8-wire local bus |

Both operating modes provide as local bus an 8-wire interface which is available at the MFP interface according to the following table:

| MFP(n) | Assignment |                                    |
|--------|------------|------------------------------------|
| 0      | CKI        | Clock line input                   |
| 1      | SLI        | Control line data/ID cycle input   |
| 2      | DI         | Data line input                    |
| 3      | CRI        | Control line check sequence input  |
| 4      | CKO        | Clock line output                  |
| 5      | SLO        | Control line data/ID cycle output  |
| 6      | DO         | Data line output                   |
| 7      | CRO        | Control line check sequence output |
| 8      | ALARM      | Alarm output <sup>1</sup>          |
| 9      | X          |                                    |
| 10     | X          |                                    |
| 11     | X          |                                    |
| 12     | X          |                                    |
| 13     | X          |                                    |
| 14     | X          |                                    |
| 15     | X          |                                    |

<sup>1</sup> The INTERBUS master can set the alarm output via a corresponding service.

X: Not to be used

In this case, the /LBRes signal belongs to the complete 8-wire local bus interface.

**BK module with 2-wire branch**

A second group within the "bus terminal module" class are BKs with 2-wire branch as an additional INTERBUS interface. The 2-wire branch can be used, for example, for setting up an (installation) remote bus segment or a 2-wire local bus segment. In this group a distinction is also made between a BK and a BK I/O.

Table 3-3 Configuration BK module with 2-wire branch

| C3 | C2 | C1 | C0 | MFP mode                              |
|----|----|----|----|---------------------------------------|
| 0  | 0  | 0  | 0  | BK module 2-wire branch line          |
| 0  | 1  | 0  | 0  | BK I/O module with 2-wire branch line |

In this group the MFP interface has the following assignment:

| MFP(n) | Assignment |                    |
|--------|------------|--------------------|
| 0      | X          |                    |
| 1      | X          |                    |
| 2      | DI         | Incoming data line |
| 3      | X          |                    |
| 4      | X          |                    |
| 5      | X          |                    |
| 6      | DO         | Outgoing data line |
| 7      | X          |                    |
| 8      | ALARM      | Alarm output *     |
| 9      | X          |                    |
| 10     | X          |                    |
| 11     | X          |                    |
| 12     | X          |                    |
| 13     | X          |                    |
| 14     | X          |                    |
| 15     | X          |                    |

X: Not to be used

\* The INTERBUS master can set the alarm output via a corresponding service.

### 3.3 Input/output mode

#### 16-bit output

In the 16-bit output mode the INTERBUS OUT data of the first two internal OUT registers is available in parallel at the multifunction pins and can be connected directly to the application. Data is updated synchronously with the INTERBUS cycle. The outputs are 4 mA CMOS drivers. If no additional I/O points are to be used, the 'ToExR2' and 'FromExR' pins are to be connected. Should additional IN data be used, external shift registers are to be connected between pins 'ToExR1' and 'FromExR'. OUT data can be expanded by the connection of external shift registers to the 'ToExR2' pin (see also Section "Register expansion" on page 3-25).

Table 3-4 Configuration 16-bit output

| C3 | C2 | C1 | C0 | MFP mode      |
|----|----|----|----|---------------|
| 1  | 0  | 0  | 1  | 16-bit output |

Table 3-5 Assignment of the MFP interface for the 16-bit output mode

| MFP(n) | Assignment | Significance |
|--------|------------|--------------|
| 0      | Byte0A(0)  | $2^8$        |
| 1      | Byte0A(1)  | $2^9$        |
| 2      | Byte0A(2)  | $2^{10}$     |
| 3      | Byte0A(3)  | $2^{11}$     |
| 4      | Byte0A(4)  | $2^{12}$     |
| 5      | Byte0A(5)  | $2^{13}$     |
| 6      | Byte0A(6)  | $2^{14}$     |
| 7      | Byte0A(7)  | $2^{15}$ MSB |
| 8      | Byte1A(0)  | $2^0$ LSB    |
| 9      | Byte1A(1)  | $2^1$        |
| 10     | Byte1A(2)  | $2^2$        |
| 11     | Byte1A(3)  | $2^3$        |
| 12     | Byte1A(4)  | $2^4$        |
| 13     | Byte1A(5)  | $2^5$        |
| 14     | Byte1A(6)  | $2^6$        |
| 15     | Byte1A(7)  | $2^7$        |



Please note that the lower byte of the data word is on the MFP pins 8 to 15 and the higher byte is on the MFP pins 0 to 7.

**16-bit input**

In the 16-bit input mode, the application can connect 16 parallel signals directly to the multi-function pins. The inputs are designed as CMOS Schmitt triggers. Data is taken over synchronously to the INTERBUS cycle and transmitted to the INTERBUS master. The data length can be expanded by external shift registers which are connected between 'ToExR2' and 'FromExR'. Should additional OUT data be used, these external shift registers are to be connected to pin 'ToExR1'. If no external extension is necessary, pins 'ToExR2' and 'FROMEXR' are to be connected (see Section "Register expansion" on page 3-25).

Table 3-6 Configuration 16-bit input

| C3 | C2 | C1 | C0 | MFP mode     |
|----|----|----|----|--------------|
| 1  | 0  | 1  | 0  | 16-bit input |

Table 3-7 Assignment of the MFP interface for the 16-bit input mode

| MFP(n) | Assignment | Significance |
|--------|------------|--------------|
| 0      | Byte0E(0)  | $2^8$        |
| 1      | Byte0E(1)  | $2^9$        |
| 2      | Byte0E(2)  | $2^{10}$     |
| 3      | Byte0E(3)  | $2^{11}$     |
| 4      | Byte0E(4)  | $2^{12}$     |
| 5      | Byte0E(5)  | $2^{13}$     |
| 6      | Byte0E(6)  | $2^{14}$     |
| 7      | Byte0E(7)  | $2^{15}$ MSB |
| 8      | Byte1E(0)  | $2^0$ LSB    |
| 9      | Byte1E(1)  | $2^1$        |
| 10     | Byte1E(2)  | $2^2$        |
| 11     | Byte1E(3)  | $2^3$        |
| 12     | Byte1E(4)  | $2^4$        |
| 13     | Byte1E(5)  | $2^5$        |
| 14     | Byte1E(6)  | $2^6$        |
| 15     | Byte1E(7)  | $2^7$        |



Please note that the lower byte of the data word is on the MFP pins 8 to 15 and the higher byte is on the MFP pins 0 to 7.

**8-bit input and 8-bit output**

Unlike the two I/O modes described above, this mode does not represent a 16-bit, but an 8-bit device. The MFP interface is configured in such a way, that both 8-bit input, as well as 8-bit output is possible simultaneously without register expansion. The outputs are 4 mA CMOS drivers. Please observe (see also Section "Identification code") that the INTERBUS controller boards support the data length of 1 byte (8 bits) only as of firmware version 4.0. If no external expansion is necessary, the 'ToExR2' and 'FROMEXR' pins are to be connected (see Section "Register expansion" on page 3-25).

Table 3-8 Configuration 8-bit input and 8-bit output

| C3 | C2 | C1 | C0 | MFP mode                     |
|----|----|----|----|------------------------------|
| 1  | 1  | 0  | 1  | 8-bit input and 8-bit output |

Table 3-9 Assignment of the MFP interface for the 8-bit input and 8-bit output mode

| MFP(n) | Assignment | Significance |                |
|--------|------------|--------------|----------------|
| 0      | Byte0A(0)  | $2^0$ LSB    | OUTPUT<br>Byte |
| 1      | Byte0A(1)  | $2^1$        |                |
| 2      | Byte0A(2)  | $2^2$        |                |
| 3      | Byte0A(3)  | $2^3$        |                |
| 4      | Byte0A(4)  | $2^4$        |                |
| 5      | Byte0A(5)  | $2^5$        |                |
| 6      | Byte0A(6)  | $2^6$        |                |
| 7      | Byte0A(7)  | $2^7$ MSB    |                |
| 8      | Byte0E(0)  | $2^0$ LSB    | INPUT<br>Byte  |
| 9      | Byte0E(1)  | $2^1$        |                |
| 10     | Byte0E(2)  | $2^2$        |                |
| 11     | Byte0E(3)  | $2^3$        |                |
| 12     | Byte0E(4)  | $2^4$        |                |
| 13     | Byte0E(5)  | $2^5$        |                |
| 14     | Byte0E(6)  | $2^6$        |                |
| 15     | Byte0E(7)  | $2^7$ MSB    |                |

Byte0A = Output byte

Byte0E = Input byte

Please refer to the Appendix for application examples.

### 3.4 $\mu$ P (microprocessor) access mode

In the  $\mu$ P access mode it is possible to address the SUPI 3 chip from a microprocessor, like an I/O component (e.g., RAM). For this purpose, the SUPI 3 has an 3-bit bidirectional data bus D7 to D0, a 4-bit address bus A3 to A0, the active-low control signals Chip Select /CS (/ENCR, /ENDRR, /ENDRW), Read (/RD), and Write (/WR) and an active-low interrupt request line /IRQ.

Table 3-10 Assignment of the MFP interface for the  $\mu$ P access mode

| MFP(n) | Assignment |
|--------|------------|
| 0      | A0         |
| 1      | A1         |
| 2      | A2         |
| 3      | A3         |
| 4      | /RD        |
| 5      | /WR        |
| 6      | /CS        |
| 7      | /IRQ       |
| 8      | D0         |
| 9      | D1         |
| 10     | D2         |
| 11     | D3         |
| 12     | D4         |
| 13     | D5         |
| 14     | D6         |
| 15     | D7         |

Please refer to the Appendix for application examples.

#### MFP interface timing

The MFP interface timing is suitable for both Intel- and Motorola-based bus access. The signal /CS and /WR or /CS and /RD are connected internally such that even an inactive signal is sufficient to stop the access.

Write access

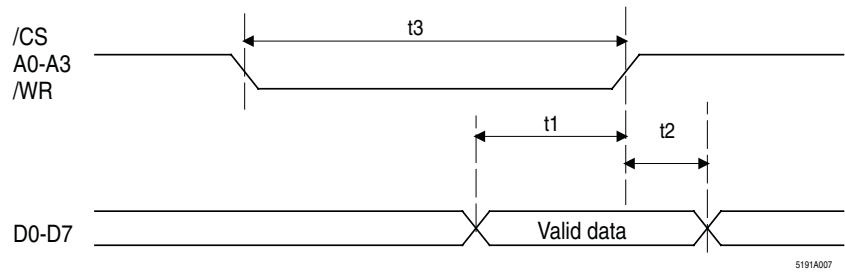
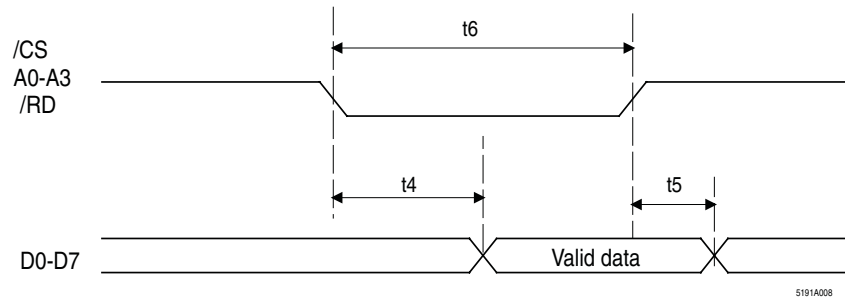


Figure 3-1 MFP interface timing, write access

Table 3-11 MFP interface timing, write access

| Symbol | Explanation                                               | Time / ns minimum |
|--------|-----------------------------------------------------------|-------------------|
| t1     | Valid data before positive edge of $\overline{\text{WR}}$ | 15                |
| t2     | Valid data after positive edge of $\overline{\text{WR}}$  | 10                |
| t3     | $\overline{\text{WR}}$ pulse width                        | 30                |

**Read access**

5191A008

Figure 3-2 MFP interface timing, read access

Table 3-12 MFP interface timing, read access

| Symbol | Explanation                                         | Time / ns |      |
|--------|-----------------------------------------------------|-----------|------|
|        |                                                     | Min.      | Max. |
| $t_4$  | Valid data after negative edge of /RD               |           | 25   |
| $t_5$  | Data bus high resistance after positive edge of /RD |           | 25   |
| $t_6$  | /RD pulse width                                     | 80        |      |

 **$\mu$ P modes of operation**Table 3-13  $\mu$ P modes of operation

| SUPI pin |    |    |    | MFP interface mode        |
|----------|----|----|----|---------------------------|
| C3       | C2 | C1 | C0 |                           |
| 0        | 0  | 0  | 1  | $\mu$ P interface 1 byte  |
| 1        | 0  | 1  | 1  | $\mu$ P interface 2 bytes |
| 1        | 1  | 1  | 1  | $\mu$ P interface 4 bytes |
| 1        | 1  | 0  | 0  | $\mu$ P interface 6 bytes |
| 0        | 0  | 1  | 0  | $\mu$ P interface 8 bytes |

In the  $\mu$ P modes of operation, the data width may be varied between one and eight bytes with the configuration pins C0 to C3. The five  $\mu$ P modes of operation, therefore, differ only with respect to the active data length. This data length can also be changed with the software (see Section "SET-II register" on page 3-19).

### Address area assignment

The following register descriptions are independent of the selected  $\mu$ P mode of operation. The SUP3 chip provides four address lines A3 to A0. The address area assignment is backward-compatible with the SUP2 chip.

Table 3-14 Address area assignment of the SUP3

| Rel. address | Write register             | Read register              |
|--------------|----------------------------|----------------------------|
| 0            | IB-IN byte 0 (MSB)         | IB-OUT byte 0 (MSB)        |
| 1            | IB-IN byte 1               | IB-OUT byte 1              |
| 2            | IB-IN byte 2               | IB-OUT byte 2              |
| 3            | IB-IN byte 3               | IB-OUT byte 3              |
| 4            | Interrupt enable I         | Interrupt event I          |
| 5            | Set I                      | Interrupt event II         |
| 6            | Set II                     | Reserved                   |
| 7            | ID code (low byte)         | IB state                   |
| 8            | Cycle write                | Cycle read                 |
| 9            | Processor message register | Processor command register |
| 10           | IB-IN byte 4               | IB-OUT byte 4              |
| 11           | IB-IN byte 5               | IB-OUT byte 5              |
| 12           | IB-IN byte 6               | IB-OUT byte 6              |
| 13           | IB-IN byte 7 (LSB)         | IB-OUT byte 7 (LSB)        |
| 14           | Interrupt enable II        | Reserved                   |
| 15           | Test mode                  | Test state                 |

All registers of the SUP3 chip have the default value 0. The INTERBUS IN/OUT data registers are set to their initial value 0 by /ResU and INTERBUS reset. All other registers are set to 0 only during power-up reset (/ResU). The contents of the cycle read register is mapped to the reserved read registers (relative addresses 6 and 14). To maintain compatibility with future protocol chips, these two registers should not be used.



**NOTE:** The test mode and test state registers (relative address 15) are used for a production test of the chip and should not be used for applications.

By writing 40<sub>hex</sub> to the test mode register it is possible to mirror the WRITE registers to the READ registers so they can be read back. The READ registers are then no longer available. This can be used, for instance, to check whether writing to the registers worked correctly. Writing 00<sub>hex</sub> restores the original function.

### INTERBUS data registers

The INTERBUS data registers with the relative addresses 0 to 3 and 10 to 13 are provided for the I/O exchange between application and INTERBUS master. The data registers designated INTERBUS IN byte are to be written by the application, while the INTERBUS OUT byte data registers are to be read by the application. Please note that the IN bytes 0 and 1 are cleared automatically after data is transmitted over INTERBUS (default setting). If this data register is not cyclically written to, the written data item will be transmitted only once. Afterwards, the value 0 is transmitted in those bytes.

For applications in which **no** PCP communication is used, the value 04<sub>hex</sub> (disable clear) is to be written once to the SET-I register with the relative address 5 after initialization has been completed. In doing so, automatic clearing of the INTERBUS IN bytes 0 and 1 is deactivated (see Section "SET-I register" on page 3-16).

The value of the data registers falls as the address rises, i.e., for a device with a data width of 8 bytes, the byte with address 0 is the high byte and the byte with address 13 is the low byte. The data registers are set to their initial value after every INTERBUS reset.

### Interrupt mode

Since the connected microprocessor reads and writes the data registers asynchronously to the INTERBUS cycle, inconsistent data may occur when the reading and writing coincides with the latch update phase<sup>1</sup> of an INTERBUS cycle. In this phase, secured OUT data is stored in the IB OUT data registers and data is transmitted from the IB IN data registers to red to INTERBUS.

To synchronize access to the data registers, the SUP1 3 chip as an interrupt logic, which makes available several INTERBUS-cycle-synchronous events as interrupts. It is also possible to use certain events as polling bits. The different interrupt sources are enabled via two common interrupt enable registers by setting the corresponding bit to 1. After an interrupt event (/IRQ becomes 0) occurs, the source can either be read in the Interrupt Event I register and/or in the Interrupt Event II register. The bit which corresponds to the event is set to 1 by the SUP1 3 chip. The read access causes an automatic reset of the registers and the /IRQ request line after an interrupt.

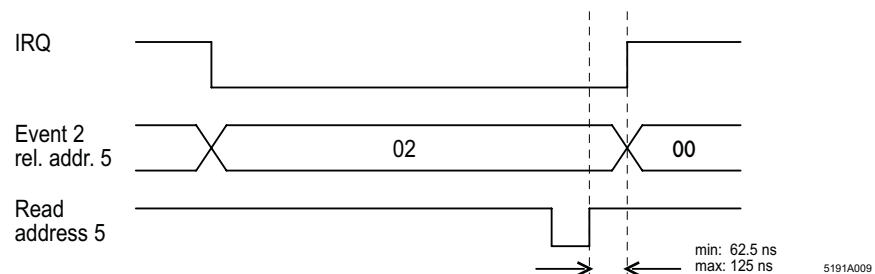


Figure 3-3 Timing of the interrupt signals using the example of the DATA cycle interrupt

<sup>1</sup> The latch phase completes the check sequence of every INTERBUS cycle

**Interrupt enable register**

The interrupt enable registers enable the interrupt sources of the interrupt event register separately. An interrupt is enabled when the corresponding bit is set to 1. The RESET value of the interrupt enable register is 0.

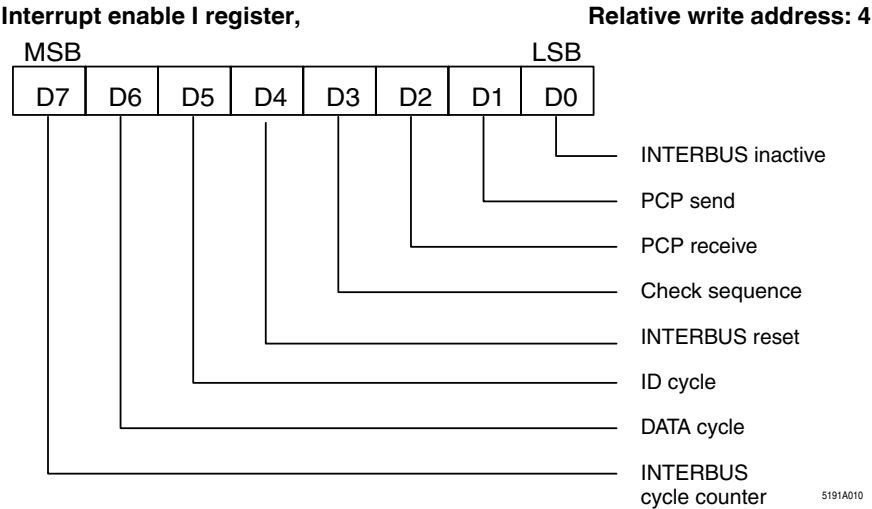


Figure 3-4 Assignment of the interrupt enable I register

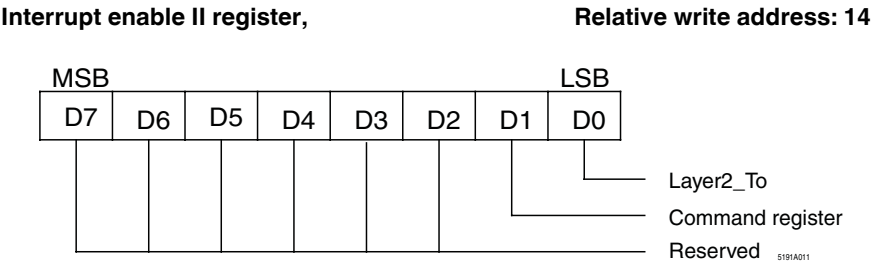


Figure 3-5 Assignment of the interrupt enable II register

Interrupt event register

The interrupt event registers store events which have caused an interrupt. Access to this register is only permitted after an interrupt request. Polling these registers is not permitted.

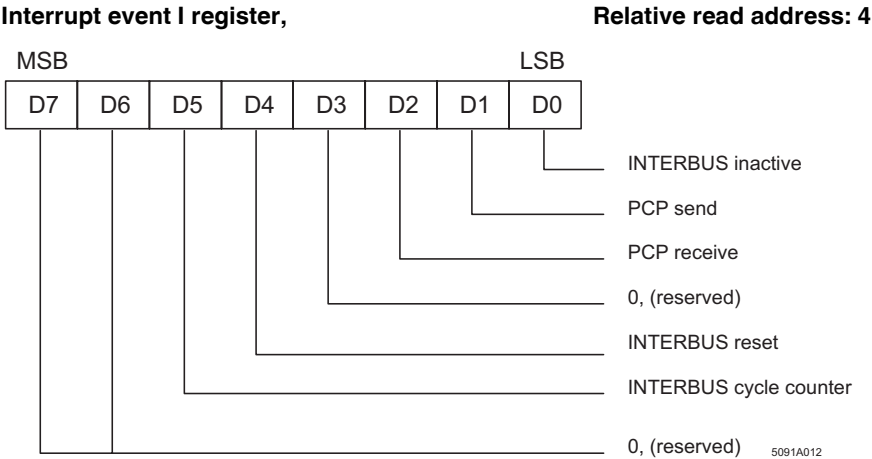


Figure 3-6 Assignment of the interrupt event I register

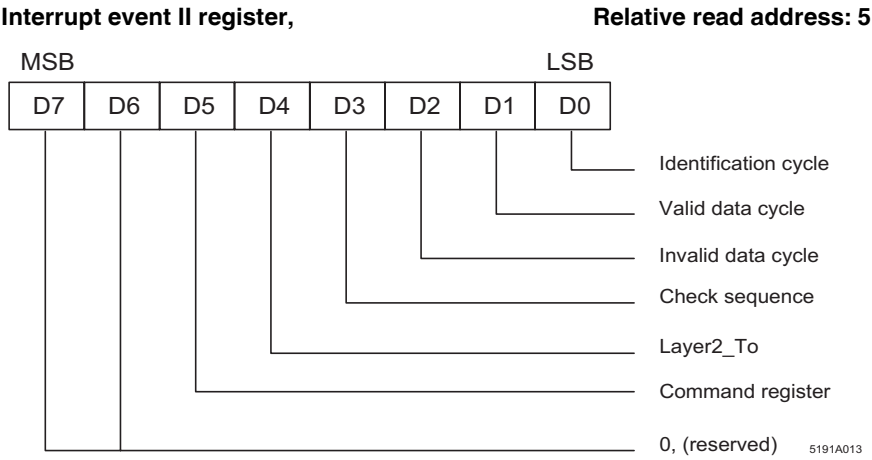


Figure 3-7 Assignment of the interrupt event II register

### Explanation of the interrupt sources

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| INTERBUS inactive      | A watchdog which monitors INTERBUS activity and which can be parameterized via the SET-I register elapsed. This means that user data was not updated during this time. This event also resets the Bus Active (BA) diagnostic signal. INTERBUS data registers are not reset (see Section 3.4.2).                                                                                                                                                                                                                                              |
| PCP send               | Interrupt source for PCP communication. If this interrupt is present, the CPU can write a new communication word to the SUPI 3 chip. The SEND interrupt identifies the end of a data or ID cycle.                                                                                                                                                                                                                                                                                                                                            |
| PCP receive            | Interrupt source for PCP communication. If this interrupt is present, the CPU can read a new communication word from the SUPI 3 chip. Interrupt receive identifies the end of a valid data cycle with IDLE bit = 1.                                                                                                                                                                                                                                                                                                                          |
| INTERBUS reset         | This INTERBUS device has been set to the reset state, due to a fatal error or by the master using the INTERBUS reset ("Alarm Stop Request" command at the master). <b>This event should always be evaluated.</b> The INTERBUS data registers are reset.                                                                                                                                                                                                                                                                                      |
| INTERBUS cycle counter | An 8-bit counter loaded via the register, with the relative address 8 and value n, counted n valid data cycles. Before the interrupt occurs, the current counter value can be read via relative address 8 (see Section "Cycle read and cycle write registers" on page 3-24).                                                                                                                                                                                                                                                                 |
| Identification cycle   | This interrupt indicates the end of an identification cycle.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Valid data cycle       | This interrupt indicates the end of a data cycle. Current OUT data is present. This interrupt can also be used to synchronize CPU access to the SUPI 3 chip. Data can be read and/or written again.                                                                                                                                                                                                                                                                                                                                          |
| Invalid data cycle     | After his IR event, data of the OUT bytes originates from the last valid data cycle, since the just finished data cycle has been detected invalid. Although the CPU may write to IN bytes and read the OUT bytes.                                                                                                                                                                                                                                                                                                                            |
| Check sequence         | The check sequence* has been initiated by the INTERBUS master. IN and OUT bytes can only be written or read for 60 µs.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Layer2_To              | A time basis on the chip which is independent of the bus monitors cyclic operation. Layer 2 monitoring can only be set by the INTERBUS master (FW 4.0 or later). If no valid INTERBUS cycle is detected within the time preset by the master (50 ms, 200 ms, 1000 ms, off) process data is reset. The /ResReg signal is activated for connected external registers, if any. A single pulse of 375 ns is generated. The event is communicated to the microprocessor of the device with an interrupt. (G4 error message: 0C6B <sub>hex</sub> ) |

|                  |                                                                                                                                                                                                                                                                         |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Command register | In an ID cycle, the master can write to the contents of the command register. A connected microprocessor receives an interrupt with every new command, if it was switched on (see also Section "Processor alarm register and processor command register" on page 3-24). |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

\* The check sequence completes an INTERBUS cycle and ensures the validity of the data transmitted.

### 3.4.1 Synchronization options

To ensure data consistency, CPU access to the SUP1 3 chip must be synchronized with the INTERBUS cycle. In principle, there are two options for synchronizing the CPU access with the INTERBUS cycle:

- Using interrupts
- Using a polling bit

#### Using interrupts

When interrupt-controlled synchronization is used, the "Data Cycle" interrupt is suitable.

#### How to proceed

The interrupt is enabled by writing 40<sub>hex</sub> to the interrupt-enable-I register with the relative address 4 (only once during initialization). After each interrupt request (/IRQ becomes low), the interrupt-event-II register with the relative address 5 has to be read. If the contents of this register is 02<sub>hex</sub>, current data can now be read out of the OUT data registers. If the contents of the register is 04<sub>hex</sub>, OUT data originates from the last valid data cycle. Independent of the contents of the interrupt-event-II register, the CPU can write to and read from the INTERBUS IN and OUT data registers after the interrupt request. After reading the interrupt-event-II register, the contents are cleared automatically and the IRQ line becomes inactive.

#### Time requirements

After an interrupt request (/IRQ low), the CPU in and ideal system has the following time periods available for reading the interrupt-event-II register and the INTERBUS OUT data registers as well as for writing the INTERBUS IN data registers:

$$T = 13 * (5 + n) * t_{\text{Bit}}$$

$t_{\text{Bit}}$  : Length of an INTERBUS bit (2  $\mu\text{s}$ , typical)

$n$  : Number of bytes in the entire network

$T$  : Permissible access time of the CPU



The minimum time  $T$  occurs when the INTERBUS NETWORK comprises one device only.

#### Example:

Implemented device: 2 words (32 bits). The input and output direction is to be used.

The worst case time amounts to

->  $T = 234 \mu\text{s}$

After an interrupt request, the CPU has a maximum of 234  $\mu\text{s}$  to read the interrupt-event-II register and the INTERBUS OUT data registers 0 to 3 and to write the IN data registers 0 to 3.

### Using a polling bit

If it is not possible in the application to achieve synchronization with interrupts, the "I/O access" bit can be polled. For this purpose, the IB-state register with relative address 7 must be read.

If the "I/O access" polling bit has the value 1, INTERBUS data registers must no longer be accessed. If the I/O access bit is 0, access to the data registers may take place during the next 34 bit times. This time is independent of the device data length and the INTERBUS configuration. Therefore, synchronization via the polling bit places higher time demands on the CPU (see Section "IB state register" on page 3-23).

## 3.4.2 SET-I register

### Relative write address: 5

The SET-I register allows to parameterize the INTERBUS watchdog and the length entry of the identification word can be preset.

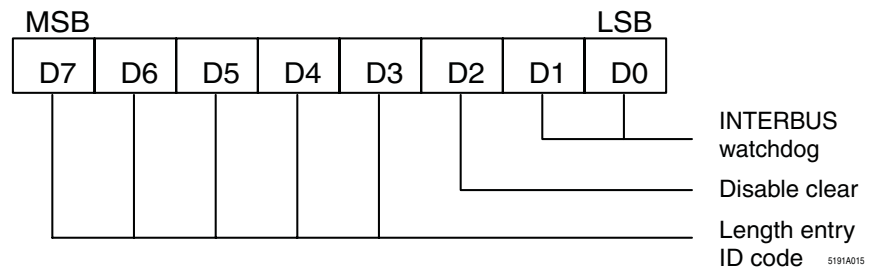


Figure 3-8 Assignment of the SET-I register

### Description of the INTERBUS watchdog

The INTERBUS watchdog monitors Layer 2 transmission on INTERBUS. The watchdog is reset with every valid cycle. It has no effect on the data registers of the SUPI 3 chip.

The watchdog has two outputs:

- BA output (Bus Active)  
This output which is available as physical pin on the SUPI 3 chip is used as the diagnostic output BA. The off-delay of BA is as long as the INTERBUS watchdog.
- Interrupt source "INTERBUS inactive".  
This interrupt is generated if the SUPI 3 chip has not detected any valid data cycle until after the watchdog time elapsed.

The following table shows the parameterization options.

Table 3-15 INTERBUS watchdog in the SUPI 3 chip

| D1 | D0 | Watchdog time in ms |
|----|----|---------------------|
| 0  | 0  | 630 - 635 (default) |
| 0  | 1  | 315 - 320           |
| 1  | 0  | 143 - 148           |
| 1  | 1  | 73 - 78             |

### Disable clear

In order to support PCP communication, INTERBUS IN bytes 0 and 1 which form the communication channel for PCP devices, are automatically cleared after they have been taken over by INTERBUS. The clearing mechanism is enabled by default. To use IN bytes 0 and 1 for dedicated I/O applications, the clearing mechanism can be disabled with the 'Disable Clear' bit. After this bit has been set the data item written in IN bytes 0 and 1 is transmitted in each data cycle. Thus, IN bytes 0 and 1 act in the same way as IN bytes 2 to 3 and 10 to 13.

Table 3-16 PCP bit

|            | 'Disable Clear' bit |
|------------|---------------------|
| PCP device | 0                   |
| I/O device | 1                   |

### Length entry of the identification code

The length entry determines the data register length of the entire INTERBUS device, i.e. all external registers are included. By default, this length entry is wired via the SUP1 3 pins ID12-ID8 by hardware. The SUP1 3 chip offers the possibility of setting the length entry of the identification code in the SET-I register by means of software. This allows to adapt the data length to the application without changing the hardware.



Set the 'ID Length' bit in the SET-II register to 1 so that the length entry can take effect. The external setting is always the default setting.

Table 3-17 Mapping of the SET-I register to the length entry in the ID code

| SET-I register | D7   | D6   | D5   | D4  | D3  |
|----------------|------|------|------|-----|-----|
| ID code        | ID12 | ID11 | ID10 | ID9 | ID8 |

A flexible setting of the data register length is also possible with the hardware setting of the "μP\_Not\_Ready" ID codes (see Section "ID code register" on page 3-20).

The meaning of the ID lengths bits ID12-ID8 can be obtained from the following table.

Table 3-18 Encoding of the data length in the SET-I register

| ID12 | ID11 | ID10 | ID9 | ID8 | Data length | Firmware version* |
|------|------|------|-----|-----|-------------|-------------------|
| 0    | 0    | 0    | 0   | 0   | 0 words     |                   |
| 0    | 0    | 0    | 0   | 1   | 1 word      |                   |
| 0    | 0    | 0    | 1   | 0   | 2 words     |                   |
| 0    | 0    | 0    | 1   | 1   | 3 words     |                   |
| 0    | 0    | 1    | 0   | 0   | 4 words     |                   |
| 0    | 0    | 1    | 0   | 1   | 5 words     |                   |
| 0    | 0    | 1    | 1   | 0   | 8 words     |                   |
| 0    | 0    | 1    | 1   | 1   | 9 words     |                   |
| 0    | 1    | 0    | 0   | 0   | 1 nibble    | 4.0               |
| 0    | 1    | 0    | 0   | 1   | 1 byte      | 4.0**             |
| 0    | 1    | 0    | 1   | 1   | 3 bytes     | 4.0**             |
| 0    | 1    | 1    | 0   | 0   | Reserved    |                   |
| 0    | 1    | 1    | 0   | 1   | 2 bits      | 4.0               |
| 0    | 1    | 1    | 1   | 0   | 6 words     | 3.2               |
| 0    | 1    | 1    | 1   | 1   | 7 words     | 3.2               |
| 1    | 0    | 0    | 0   | 0   | Reserved    |                   |
| 1    | 0    | 0    | 0   | 1   | 26 words    | 3.7               |
| 1    | 0    | 0    | 1   | 0   | 16 words    | 3.2               |
| 1    | 0    | 0    | 1   | 1   | 24 words    | 3.2               |
| 1    | 0    | 1    | 0   | 0   | 32 words    | 3.2               |
| 1    | 0    | 1    | 0   | 1   | 10 words    | 3.2               |
| 1    | 0    | 1    | 1   | 0   | 12 words    | 3.2               |
| 1    | 0    | 1    | 1   | 1   | 14 words    |                   |
| 1    | 1    | x    | x   | x   | Reserved    | 3.2               |

\* The data length is supported by the controller board (bus master) with the specified firmware version or later.

\*\* The data lengths 1 byte and 3 bytes are supported by the PC AT-T board, version 3.1 or later. The data lengths supported by firmware version 3.2 or later are recognized by the PC AT-T board by driver version 2.0 or later.



The length entry determines the data register length of the entire INTERBUS device - that means the total of registers configurable in the SUPI chip and additional external registers, if any.

3.4.3 SET-II register

Relative write address: 6

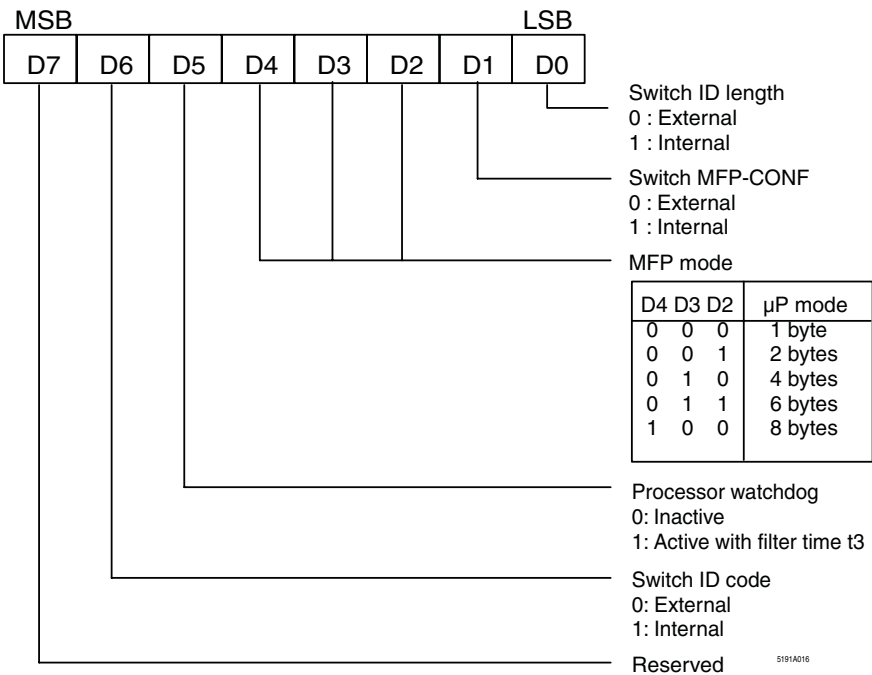


Figure 3-9 Assignment of the SET-II register



For the internal ID code setting, bits D0 and D1 must be set to "internal".

Switch ID length

This bit allows to separate the hardware connections of pins ID12 to ID8 and to reroute them to bits D7 to D3 of the SET-I register. The bit must always be considered together with Switch ID code (bit 6), see below.

Switch MFP CONF

MFP CONF allows to separate the hardware connections of pins C3 to C0 and to map them to the table with bits D4 to D2 of the SET-II register.

**MFP CONF mode**

In the  $\mu$ P modes of operation the internal SUPI 3 register length can be set using this table.

**Processor watchdog**

The /StatErr pin can be used, for example, to indicate a breakdown of the I/O voltage in the slave or the release of an external processor watchdog. The microprocessor can select whether this pin is active as "I/O error" with a filter time of  $t_{f1}$  (270 ms) or as input for a  $\mu$ P watchdog with a filter time of  $t_{f3}$  (2.5  $\mu$ s) by bit 5 in the SET-II register. Setting the bit results in selecting the  $\mu$ P watchdog function. Bit D5 of the SET-II register is mapped to the message bit register. The master recognizes which of the functions is active and corresponding messages are generated.

**Switch ID code**

If "Switch ID code" is set together with "Switch ID length", the lower byte of the ID code is set according to the contents of the register with the relative write address 7. Hardware settings at ID pins ID0 to ID7 are then ignored. The "Switch ID code" bit can only be activated when the "Switch ID length" bit is set.

### 3.4.4 ID code register

The ID code is defined in the INTERBUS Club ID Code Specification depending on the functions of the device. An extract from this code can be found in Appendix. By default, this ID code is specified by the hardware of SUPI 3 pins ID0 to ID7. The SUPI 3 offers the option of setting the ID code in the ID code register (relative address 7) with software. This makes it possible to adapt the ID code to the application type without modifying the hardware.



In order to make the ID code in the ID code register (relative address 7) valid, the "Switch ID code" bit in the SET-II register must be set to 1. The external setting is always the default setting.

Table 3-19 Mapping of the ID code register to the ID code

| ID code register | D7  | D6  | D5  | D4  | D3  | D2  | D1  | D0  |
|------------------|-----|-----|-----|-----|-----|-----|-----|-----|
| ID code          | ID7 | ID6 | ID5 | ID4 | ID3 | ID2 | ID1 | ID0 |

A flexible setting of the ID code is also possible by setting the " $\mu$ P\_Not\_Ready" ID code (see " $\mu$ P\_not\_Ready" ID code" on page 3-21).

**Application example**

The following example is to show how to proceed when you are using the ID length and MFP mode bits:

**Example:**

Depending on the degree of extension, an application requires data lengths of 16 to 32 bits as input, output, or I/O module. The changeover is to be done without changing the hardware, i.e. by the CPU with software.

**Solution:**

The SUPI 3 is set to the " $\mu$ P-Interface 2 byte" mode using hardware pins C3-C0=1011b and to a data length of one word using pins ID12-ID8 = 00001b. ID code 03<sub>hex</sub> is set to ID pins (ID0-ID7). If the application requires a data length of 32 bits as an output module, the following write commands have to be executed:

- Writing 14<sub>hex</sub> in the SET-I register (write address 5)

- Writing 01<sub>hex</sub> in the ID code register (write address 7)
- Writing 4B<sub>hex</sub> in the SET-II register (write address 6)



Please note, that these changeover commands can only be executed during the initialization phase of the SUPI 3 chip, that means before the master started the first ID cycle and not during operation.

Alternatively, the SUPI 3 chip offers the possibility of using the "µP\_Not\_Ready" ID code for operation with microprocessor. This variant should be preferred to the direct changeover explained above.

#### "µP\_not\_Ready" ID code

With the "µP\_Not\_Ready" ID codes, subsequent initialization of the SUPI 3 chip is easily possible for a µP application. **It is irrelevant when the SUPI 3 is initialized.** The bus master can operate the bus in any case and expects the new configuration of devices not yet initialized. This function is supported by firmware version 4.0.x or later.

For microprocessor applications, two "µP\_Not\_Ready" ID codes are defined.

"µP\_not\_Ready" ID code

- Remote bus device ID: 38<sub>hex</sub>
- Local bus device ID: 78<sub>hex</sub>

If one of the two codes is applied to pins ID7-ID0, new functions are internally active:

1. The created ID code is valid after power up.
2. The data length is set to zero inside the chip.
3. The data length zero is entered in the ID register, independently of the code at pins ID12-ID8.
4. After the microprocessor has written the Set-II register (address 6), further access to all initialization registers (write address 5, 6 and 7) is disabled.

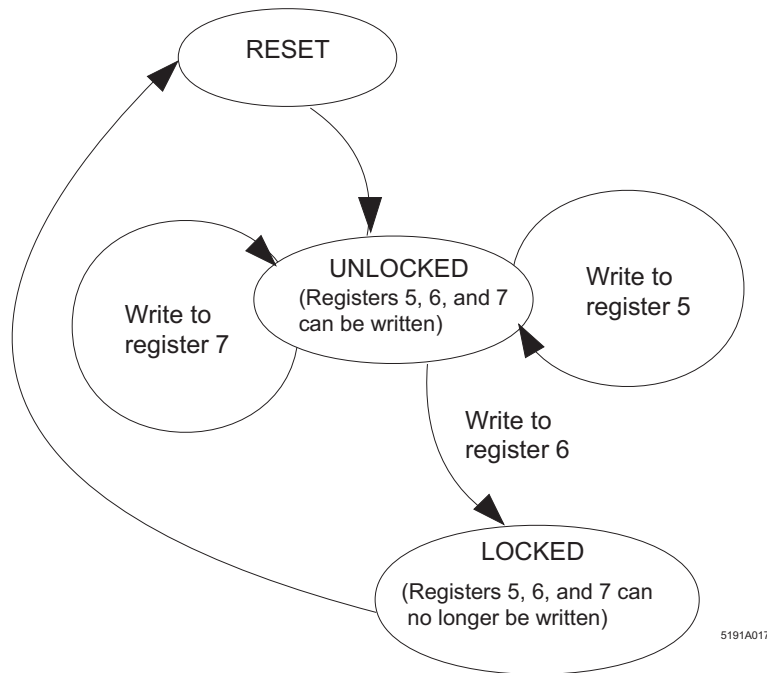


Figure 3-10 Flow chart for the initialization with created "μP\_Not\_Ready" ID code

The SET-II register can only be written once after RESET (UNLOCKED state). The registers with write addresses 5 and 7 must therefore be written before. In this way initialization data is changed only once during operation. In addition, the bus master recognizes microprocessor devices that have not been initialized via the "μP\_Not\_Ready" ID code and expects a re-initialization with the correct values. However, bus operation is still possible since there are devices with the data length zero on the bus that have not yet been initialized. After writing to register 6, the "locked" state is achieved.

#### Application example

The following example shows you how to proceed when using the "μP\_Not\_Ready" ID code.

#### Example:

Depending on the degree of extension, an application requires data lengths of 16 to 32 bits as input, output, or I/O module. The changeover is to be done without changing the hardware, i.e. by the CPU. The module is connected to the remote bus.

#### Solution:

The SUP I 3 is set to the "μP interface 2 byte" mode using hardware pins C3-C0 = 1011b, to a data length of one word via pins ID12-ID8 = 0 0001b, and to the "μP\_Not\_Ready" ID code 0011 1000b via pins ID7-ID0. When pins ID7-ID0 are set in this way, the SUP I 3 has a length of "zero" in the INTERBUS system.

If the application requires a data length of 16 bits as an I/O module, the following write commands have to be executed:

- Writing 0C<sub>hex</sub> in the SET-I register (relative address 5)
- Writing ID code 03<sub>hex</sub> in the ID code register (write address 7), and then
- Writing 41<sub>hex</sub> in the SET-II register (write address 6).

If the application requires a data length of 32 bits as an output module, the following write commands have to be executed:

- Writing 14<sub>hex</sub> in the SET-I register (write address 5)
- Writing ID code 01<sub>hex</sub> in the ID code register (write address 7), and then
- Writing 4B<sub>hex</sub> in the SET-II register (write address 6)

### 3.4.5 IB state register

Relative read address: 7

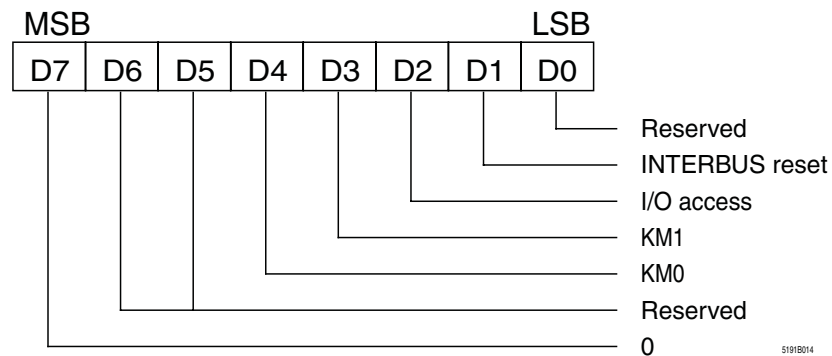


Figure 3-11 Assignment of the IB state register

Different internal operating states are mapped in the IB state register. The physical assignment of configuration pins KM1 and KM0 can be read in bits D4 and D3, immediately after the operating voltage  $U_L$  has been applied.

The active bit D2 maps the check sequence phase. The check sequence completes an INTERBUS cycle and ensures validity of the data transmitted. The I/O access bit is therefore suitable for synchronization of  $\mu P$  access by polling (see Section "Synchronization options" on page 3-15).

Like the "INTERBUS reset" interrupt, an active bit D1 indicates an INTERBUS reset i.e., this INTERBUS device was set to the reset state due to a fatal error or by the master using an INTERBUS reset ("Alarm Stop Request" command at the master). **This event should always be evaluated.** The INTERBUS data registers are reset.

Bits marked "reserved" have no meaning and must be masked out for evaluation.

### **3.4.6 Cycle read and cycle write registers**

The cycle read and cycle write registers can be used for cycle-synchronous processing together with the enabled "INTERBUS cycle counter" interrupt, e.g., to check the number of INTERBUS cycles from the slave application and the react on a certain (n-th) cycle. Any desired 8-bit value can be written in the cycle write register. The cycle read register is incremented with every valid data cycle. If the value of the cycle write register is reached, an interrupt is activated, bit 5 in the interrupt-event-1 register is set, and the value in the cycle read register is reset to zero. Then the described procedure is repeated.

### **3.4.7 Processor alarm register and processor command register**

The SUP3 offers a management channel to the bus master. This function must be enabled by the bus master and is supported by firmware 4.0 or later. Management messages from the master to the slave are received in the processor command register and can trigger an interrupt. Management messages from the master to the slave are written to the processor message register. The management channel is reserved for future applications.

### 3.5 Register expansion

If the data length of the SUPI 3 is to be extended, this can be done independently of the selected mode of operation, using external shift registers or the serial register expansion chip IBS SRE 1 (Order No. 2752851). The SUPI 3 chip has two data outputs which offer a simple serial interface. The ToExR1 output lies before and the ToExR2 output after the SUPI 3 internal buffers. The FromExR input can be used to return the shift register data. The ClkExR signal is to be used as a clock for the external registers. The active low /LaInD signal is used as a transfer signal from the application to the shift registers. The active high LaOutD signal is used as latch signal from the shift registers to the memory registers. The active low /ResReg reset signal is available for resetting the memory registers after an INTERBUS reset.



The possibility of expanding internal registers with external registers or the SRE 1 should be used as such. For EMC reasons it is not useful to implement an internal serial interface with remote shift registers using these signals. Extension ICs should be located as close as possible to the IBS SUPI.

#### 3.5.1 Examples

There are various combination options for expanding the registers:

##### No register expansion:

Pins ToExR2 and FromExR are to be connected with each other. The internal SUPI 3 registers are used only.

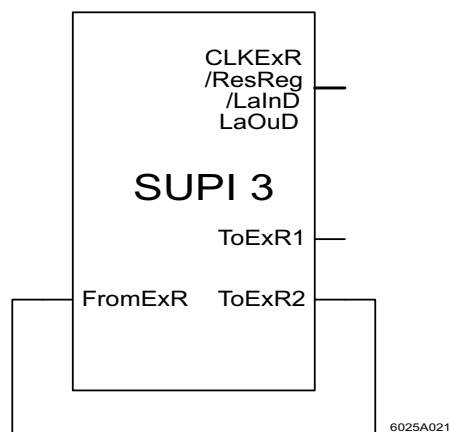


Figure 3-12 No register expansion

**Expansion of the SUPI 3-internal data registers with the IBS SRE 1.**

Its register length can be configured from one to six word(s).

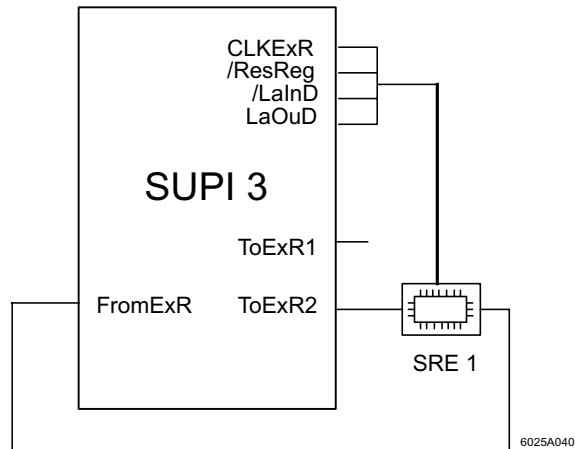


Figure 3-13 Register expansion with SRE 1

**Expansion of the SUPI 3-internal INTERBUS data registers:**

In this case, the external shift registers are to be connected to the ToExR2 output and to be fed back to the FromExR input. IN and OUT registers are possible.

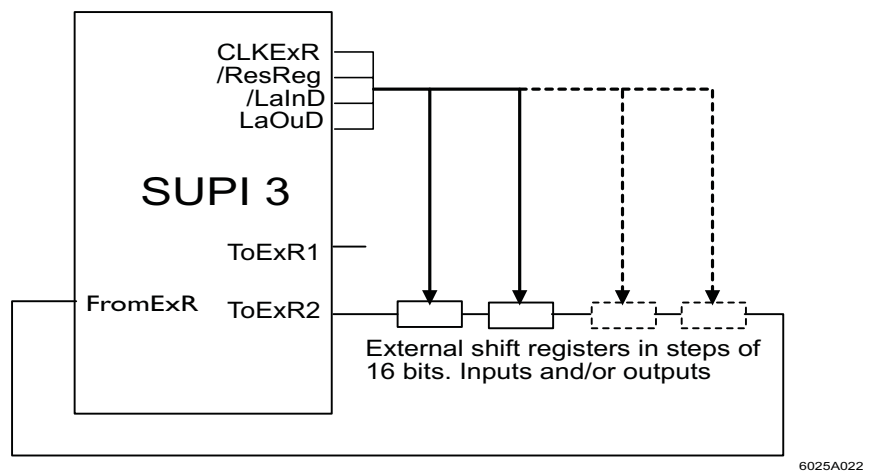


Figure 3-14 Expansion of the internal SUPI 3 registers by means of register expansion

### Implementing a 16-bit device with 16 inputs and 16 outputs

#### Using the SUP3 as a 16-bit output:

In this case, a 16-bit shift register (asynchronous and parallel loading) is to be connected between pins ToExR1 and FromExR.

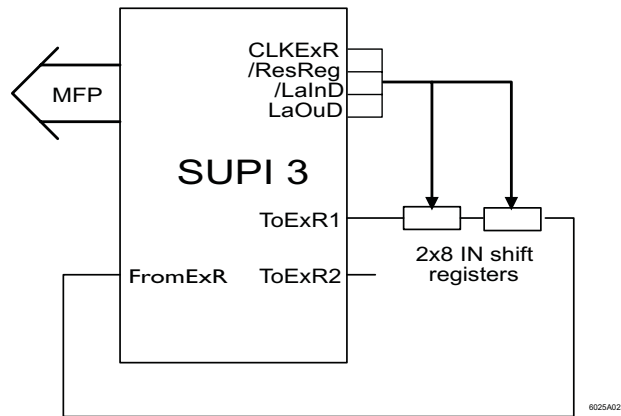


Figure 3-15 16 bit I/O device with 2x8-bit IN register expansion

#### Using the SUP3 as a 16-bit input:

In this case, a 16-bit shift register is to be connected to pin ToExR1.

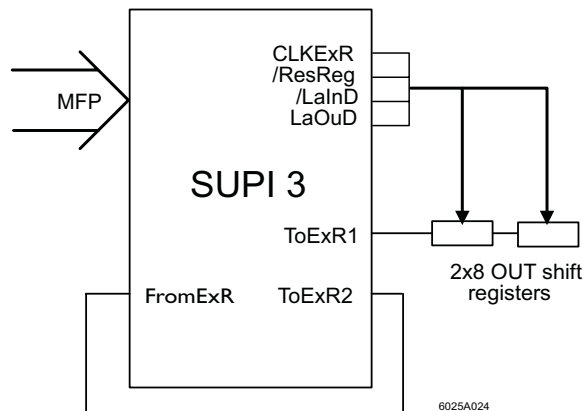


Figure 3-16 16 bit I/O device with 2x8-bit OUT register expansion

#### Implementing an I/O device with 32-bit input and 16-bit output:

There are different ways of assigning an address. The internal registers of the SUP3 can be used as inputs, outputs, or not at all. In addition it is also possible to assign different data lengths to such a device. The following figures show the different ways.

**48-bit device with 16 OUT and 32 IN addresses:**

The internal SUPI 3 registers have been used as outputs and expanded by 4x8 bit shift registers with inputs.

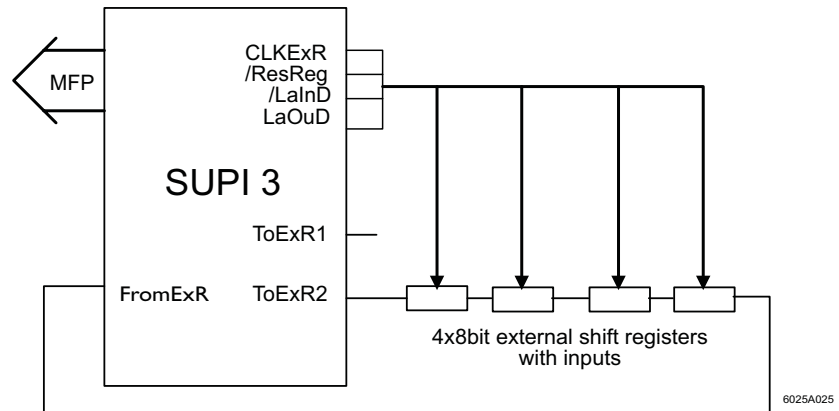


Figure 3-17 48 bit I/O device with 4x8-bit IN register expansion

**48-bit device with 16 OUT and 32 IN addresses:**

The internal SUPI 3 registers have been used as inputs and expanded by 4x8 bit shift registers with inputs and outputs.

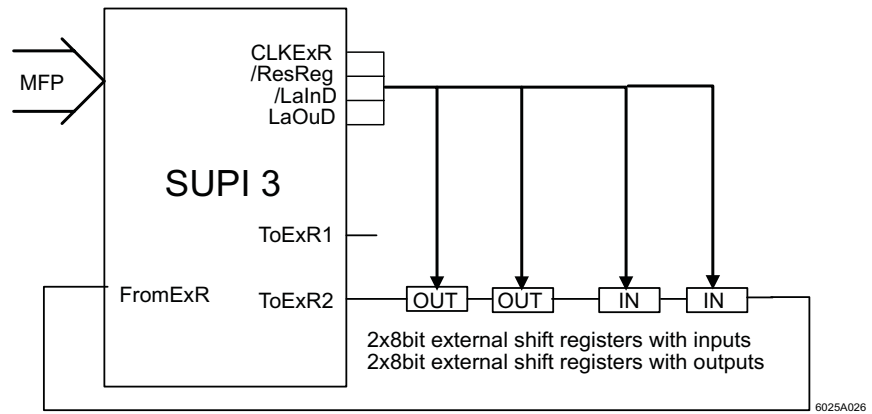


Figure 3-18 48 bit I/O device with 2x8-bit IN and 2x8-bit OUT register expansion

**32-bit device with 16 OUT and 32 IN addresses:**

The internal SUPI 3 registers have been used as outputs. Parallel to this, 4x8-bit shift registers with inputs have been looped in between pins ToExR1 and FromExR.

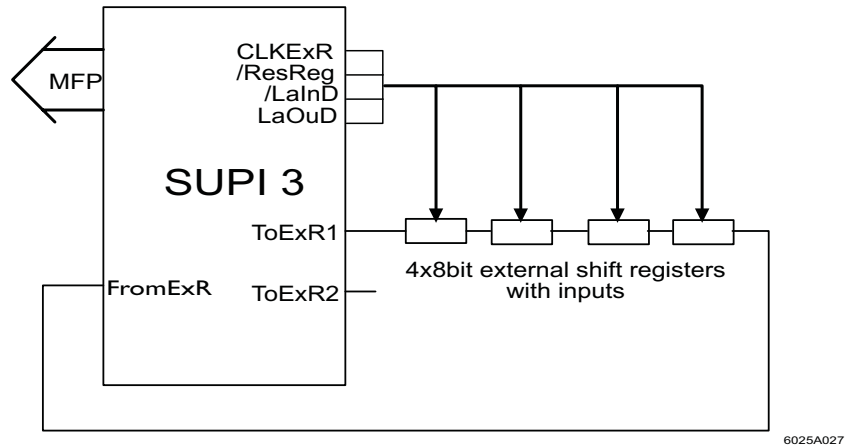


Figure 3-19 32 bit I/O device with 4x8-bit IN register expansion

**32-bit device with 16 OUT and 32 IN addresses:**

The internal SUPI 3 registers have been used as inputs and expanded by 2x8-bit IN registers. Parallel to this, 2x8-bit shift registers with outputs are connected with ToExR1.

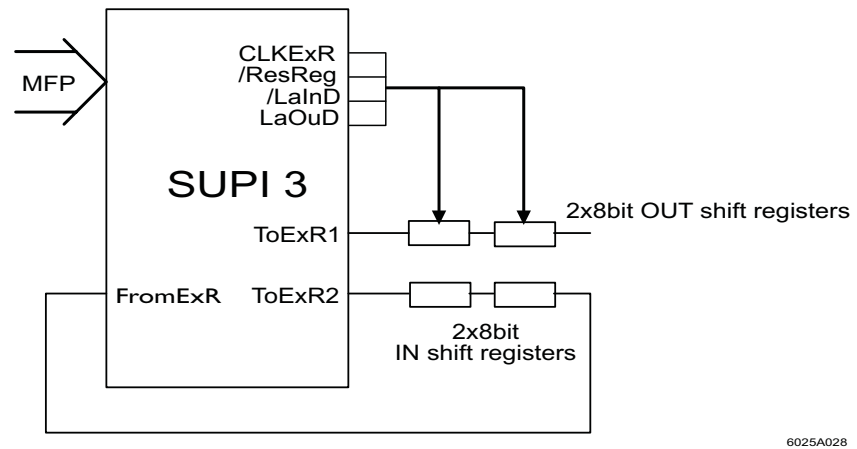


Figure 3-20 32 bit I/O device with 2x8-bit IN and 2x8-bit OUT register expansion

### 3.5.2 Register expansion interface timing

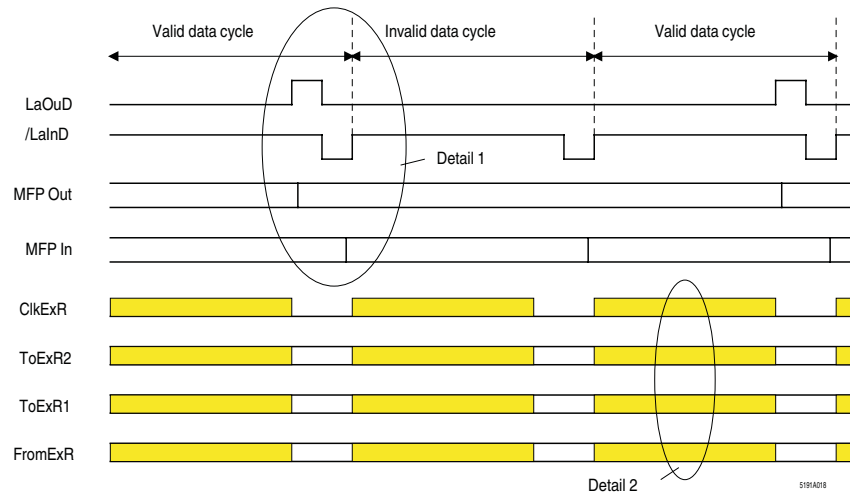


Figure 3-21 Timing diagram for register expansion

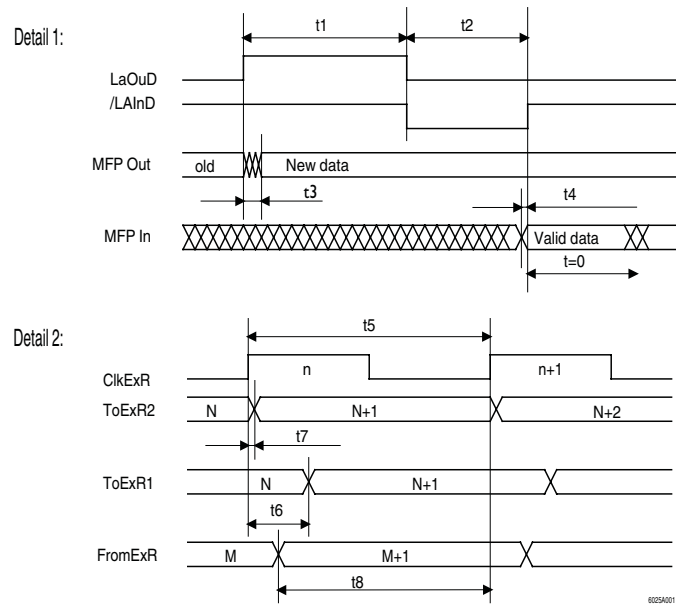


Figure 3-22 Timing diagram, in detail

Table 3-20 Timing for register expansion

| Symbol | Explanation                                 | Time / ns |         |
|--------|---------------------------------------------|-----------|---------|
|        |                                             | Minimum   | Maximum |
| t1     | LaOuD length                                | 18000     |         |
| t2     | LaInD length                                | 8000      |         |
| t3     | OUT data valid after rising LaOuD edge      |           | 66      |
| t4     | IN data valid before rising /LaInD edge     | 19        |         |
| t5     | CLKExR length                               | 2000      |         |
| t6     | ToExR1 valid after rising ClkExR edge       | 1000      |         |
| t7     | ToExR2 valid after rising ClkExR edge       | 62.5      |         |
| t8     | Serial data valid before rising ClkExR edge | 1125      |         |

(All outputs loaded with 30 pF)

The data at the FromExR input is always taken over with the falling edge of ClkExR. The /ResReg signal has no time reference to the other signals of the register expansion.

For a register expansion it must be ensured that the ClkExR signal is not deformed by loading with external capacitances and thus shifted excessively behind. If ClkExR is buffered, ToExR2 must also be buffered because of the signal shift. In this case, the runtimes to ToExR2 are less critical than in the cycle line itself. The times specified for the components in the shift registers used must also be considered.

Please refer to the Appendix for application examples.

### 3.6 Diagnostic inputs and outputs

The SUPI 3 protocol chip has different diagnostic inputs and outputs which simplify the location of error sources within the INTERBUS network. The diagnostic inputs and outputs to be used depend on the physical location of the device within the INTERBUS network and its functions.



Certification of a module by the club requires that the status of diagnostic pins and power supply is indicated with LEDs.

#### Remote bus device

Table 3-21 Diagnostic inputs/outputs of a remote bus device

| Operating mode      | CC      | BA | RD   | TR | /StatErr | /ModAck | LD   | Conf | Error |
|---------------------|---------|----|------|----|----------|---------|------|------|-------|
|                     | /ResReg |    | RBDA |    |          |         | LBDA |      |       |
| Bus terminal module | M       | M  | M    | -  | O        | O       | M    | M    | O     |
| Input/output        | M       | M  | M    | -  | O        | O       | -    | -    | -     |
| PCP device          | M       | M  | M    | M  | O        | O       | -    | -    | -     |

M: Mandatory

O: Optional

#### Local bus device

Table 3-22 Diagnostic inputs/outputs of a local bus device

| Operating mode | TR | CC<br>/ResReg | BA | /StatErr | /ModAck |
|----------------|----|---------------|----|----------|---------|
| Input/output   |    | O             | O  | O        | O       |
| PCP device     | M  | O             | O  | O        | O       |

M: Mandatory

O: Optional

#### Explanation of diagnostic inputs and outputs

##### CC

The green CC (Cable Check) diagnostic LED is connected to the CMOS output /ResReg of the SUPI 3. CC monitors the bus activity on Layer 1 of the incoming bus. CC is active when the cable connection is good and the INTERBUS controller board is not in a reset state. The CC LED becomes inactive after an INTERBUS reset or power up reset.

##### BA

The green BA (Bus Active) LED at the SUPI 3 output is a Layer 2 activity display. The output has an off delay of the duration of the preset INTERBUS watchdog (default: 630 ms). See Section "SET-I register" on page 3-16.

|           |                                                                                                                                                                                                                                                                                                                                                         |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>TR</b> | The green TR (Transmit/Receive) diagnostic LED becomes active when PCP communication is being carried out via INTERBUS. It is connected to the active high SUP1 3 LBDA/TR pin in the $\mu$ P modes. An external off delay is provided for this output to guarantee a visible indication on the LED. The output pulse has a minimum length of 8 $\mu$ s. |
| <b>RD</b> | The yellow RD LED at the RBDA output indicates statically that the outgoing remote bus (Remote Bus Disabled) is switched off. This diagnostic feature is only relevant for remote bus devices and is active in the "INTERBUS RESET" state.                                                                                                              |
| <b>LD</b> | Only for bus terminal modules shows the active high LBDA/TR pin with a yellow LED that the branch has been disconnected (Local Bus Disabled). This output is active in the "INTERBUS RESET" state.                                                                                                                                                      |

**Input/output module error****Input (/StatErr)**

The active low input /StatErr is used, for example, to report a module error (e.g., I/O voltage not applied) to the INTERBUS controller board. Applying a low-level to this input causes a module error. If /StatErr is not used, it has to be statically connected to  $V_{DD}$ . The input is filtered (see Section "Signal description" on page 1-13). The default filter value is 270 ms. Setting this input causes a message (Peripheral error indication, 0BB1<sub>hex</sub> for G4).

**Acknowledge output (/ModAck)**

The /ModAck output can be used to acknowledge a set module error. In the bus master, the error is acknowledged with the following command:

"Quit Peripheral Error"

This output will then be active once for 4-bit times (8  $\mu$ s).

**Reconfiguration request (CONF)**

The active high CONF message input is used to request a reconfiguration for the INTERBUS network. If this input is not used, it has to be statically connected to  $V_{SS}$ . The input is filtered. The filter value is 35 ms. Setting this input causes a message (Reconfiguration request, 0BB1<sub>hex</sub> for G4).

**E (Error)**

Only for bus terminal module applications indicates the red LED an error in the connected branch. The INTERBUS controller board activates this output with a corresponding command (0714<sub>hex</sub> for G4).

**MAU warning**

The active high MAU inputs (MAUWH - incoming INTERBUS interface, MAUWR - outgoing INTERBUS interface, MAUWS - branch interface (only for BK modules)) indicates the impairment of the transmission quality for e.g. optical or HF paths to a critical value, however, still performing a proper function. The MAU of the corresponding interface (incoming, outgoing or branch) must be able to evaluate the receive quality and to provide this as a digital signal to the corresponding input. Setting this input causes a corresponding message (5340<sub>hex</sub> for G4). This function is supported as of firmware version 4.0.x by the bus master. The inputs are filtered in the "MAU warning" function. The filter value is 520  $\mu$ s.

# A Technical data

Table A-1 Absolute limit values

| Symbol    | Parameters                                     | Value                  | Unit |
|-----------|------------------------------------------------|------------------------|------|
| $V_{DD}$  | DC supply voltage                              | -0.5 to +7.0           | V    |
| $V_{in}$  | DC input voltage                               | -1.5 to $V_{DD} + 1.5$ | V    |
| $V_{out}$ | DC output voltage                              | -0.5 to $V_{DD} + 0.5$ | V    |
| I         | DC current per pin, inputs and outputs         | 50                     | mA   |
| I         | DC current per pin, $V_{DD}$ and $V_{SS}$ pins | 75                     | mA   |

Table A-2 Recommended operating conditions

| Symbol               | Parameters                   | Min. | Max.     | Unit |
|----------------------|------------------------------|------|----------|------|
| $V_{DD}$             | DC supply voltage            | 4.5  | 5.5      | V    |
| $V_{in}$ , $V_{out}$ | DC input, output voltage     | 0.0  | $V_{DD}$ | V    |
| $T_A$                | Industrial temperature range | -40  | +85      | °C   |

Table A-3 DC data

| Symbol   | Parameters                      | Condition                                              | -40°C to 85°C |              |
|----------|---------------------------------|--------------------------------------------------------|---------------|--------------|
|          |                                 |                                                        | Min.          | Max.         |
| $V_{IH}$ | Input voltage high, CMOS inputs | $V_{out} = 0.1 \text{ V}$ ,<br>or                      | $0.7 V_{DD}$  | -            |
| $V_{IL}$ | Input voltage low, CMOS inputs  | $V_{DD} - 0.1 \text{ V}$<br>$I_{out} = 20 \mu\text{A}$ | -             | $0.3 V_{DD}$ |
|          | <b>Schmitt trigger inputs</b>   |                                                        |               |              |
| $V_{T+}$ | Positive switching threshold    |                                                        | -             | $0.7 V_{DD}$ |
| $V_{T-}$ | Negative switching threshold    |                                                        | $0.25 V_{DD}$ | -            |
| $V_{Hy}$ | Hysteresis                      | $V_{T+}$ to $V_{T-}$                                   | $0.12 V_{DD}$ | -            |
| $V_{OH}$ | Output voltage high             |                                                        |               |              |
|          | Outputs B2                      | $I_{OH} = 2 \text{ mA}$                                | 3.7 V         | $V_{DD}$     |
|          | Outputs BDp                     | $I_{OH} = 4 \text{ mA}$                                | 3.7 V         | $V_{DD}$     |
|          | Outputs B12                     | $I_{OH} = 12 \text{ mA}$                               | 3.7 V         | $V_{DD}$     |

Table A-3 DC data (continued)

| Symbol   | Parameters                                                               | Condition                            | -40°C to 85°C     |                    |
|----------|--------------------------------------------------------------------------|--------------------------------------|-------------------|--------------------|
|          |                                                                          |                                      | Min.              | Max.               |
| $V_{OL}$ | Output voltage low                                                       |                                      |                   |                    |
|          | Outputs B2                                                               | $I_{OH} = -2 \text{ mA}$             | $V_{SS}$          | 0.4 V              |
|          | Outputs BDp                                                              | $I_{OH} = -4 \text{ mA}$             | $V_{SS}$          | 0.4 V              |
|          | Outputs B12                                                              | $I_{OH} = -12 \text{ mA}$            | $V_{SS}$          | 0.4 V              |
| $I_{OH}$ | Output current high                                                      |                                      |                   |                    |
|          | Outputs B2                                                               | $V_{OH} = 3.7 \text{ V}$             | –                 | 2 mA               |
|          | Outputs BDp                                                              |                                      | –                 | 4 mA               |
|          | Outputs B12                                                              |                                      | –                 | 12 mA              |
| $I_{OL}$ | Output current low                                                       |                                      |                   |                    |
|          | Outputs B2                                                               | $V_{OL} = 0.4 \text{ V}$             | –                 | -2 mA              |
|          | Outputs BDp                                                              |                                      | –                 | -4 mA              |
|          | Outputs B12                                                              |                                      | –                 | -12 mA             |
| $I_{in}$ | Input leakage current, no internal pull-up resistor                      | $V_{in} = V_{DD} \text{ or } V_{SS}$ | -5 $\mu\text{A}$  | +5 $\mu\text{A}$   |
|          | Input leakage current with internal pull-up resistor (50 kohms, typical) | PUH; $V_{in} = V_{SS}$               | -30 $\mu\text{A}$ | -165 $\mu\text{A}$ |
|          |                                                                          | PUL; $V_{in} = V_{SS}$               | -15 $\mu\text{A}$ | -120 $\mu\text{A}$ |
| $I_{oz}$ | Output leakage current                                                   | High resistance                      | -10 $\mu\text{A}$ | +10 $\mu\text{A}$  |
| $I_{DD}$ | Current consumption*                                                     | –                                    | Approx. 20 mA     | –                  |

\* All input static, all outputs unused, oscillator operates with 16 MHz.

## A 1 General notes about processing



These guidelines do not necessarily specify extreme conditions which must be observed for safety reasons for the named surface-mounted components (IBS SUPI 3 QFP and IBS CHIP-Muster/...). In many cases, the housings withstand much higher temperatures than standard PCBs. These guidelines are intended to create soldering conditions permitting high-quality design and minimum improvement work.

### A 1.1 Storage

Table A-4 Storage

| Symbol            | Parameters                    | Value    | Unit |
|-------------------|-------------------------------|----------|------|
| T <sub>stg</sub>  | Storage temperature           | 5 to 30  | °C   |
| RH <sub>stg</sub> | Relative humidity for storage | 30 to 60 | %    |

### A 1.2 Processing time



We recommend using the ASICs within two years of delivery. Proper storage of the components in an unopened package is required for good processing.

If the ASICs are packaged in dry packs and the moisture content is OK, according to HIC, the ASICs do not have to be dried before use. If this is not the case, the ASICs can be treated according to IPC/JEDEC J-STD-20A.

### A 1.3 Soldering



For information on soldering the surface-mounted components described in this manual (IBS SUPI 3 QFP and IBS CHIP-Muster/...), please refer to the "**IPC/JEDEC J-STD-020...JOINT INDUSTRY STANDARD**" document.

This document is available upon request. Please contact Phoenix Contact.

## A 2 ID code specification (extract)

Table A-5 Extract from the ID code specification

| Description of module function                   |                     | ID code (dec) | ID code (hex) |
|--------------------------------------------------|---------------------|---------------|---------------|
| <b>Bus terminal modules (BK)</b>                 |                     |               |               |
| BK with 8-wire local bus branch                  | BK-8L-LB            | 52            | 34            |
| BK with 2-wire local bus branch                  | BK-2L-LB            | 8             | 08            |
| BK with INTERBUS-Loop branch                     | BK-SL               | 4             | 04            |
| BK with 2-wire remote bus branch                 | BK-2L-RB            | 12            | 0C            |
| <b>Remote bus device (digital)</b>               |                     |               |               |
| Digital output modules                           | DO                  | 1             | 01            |
| Digital input modules                            | DI                  | 2             | 02            |
| Digital input/output modules                     | DIO                 | 3             | 03            |
| Profile-compliant digital output modules         | PROFILE DO          | 13            | 0D            |
| Profile-compliant digital input modules          | PROFILE DI          | 14            | 0E            |
| Profile-compliant digital input/output modules   | PROFILE DIO         | 47            | 2F            |
| ISO valve manifolds                              | ISO valve manifolds | 5             | 05            |
| <b>Remote bus device (analog)</b>                |                     |               |               |
| Analog output modules                            | AO                  | 49            | 31            |
| Analog input modules                             | AI                  | 50            | 32            |
| Analog input/output modules                      | AIO                 | 51            | 33            |
| Profile-compliant analog output modules          | PROFILE AO          | 53            | 35            |
| Profile-compliant analog input modules           | PROFILE AI          | 58            | 3A            |
| Profile-compliant analog input/output modules    | PROFILE AIO         | 59            | 3B            |
| ENCOM with input data                            | ENCOM               | 54            | 36            |
| ENCOM with input and output data                 | ENCOM               | 55            | 37            |
| <b>Remote bus devices with parameter channel</b> |                     |               |               |
| Modules with parameter channel (2 PCP words) *)  | PA channel          | 240           | F0            |
| Modules with parameter channel (4 PCP words) *)  | PA channel          | 241           | F1            |
| Modules with parameter channel (1 PCP word)      | PA channel          | 243           | F3            |
| DRIVECOM (2 PCP words) *)                        | DRIVECOM            | 224           | E0            |
| DRIVECOM (4 PCP words) *)                        | DRIVECOM            | 225           | E1            |

Table A-5 Extract from the ID code specification (continued)

| Description of module function                                              |                                | ID code (dec) | ID code (hex) |
|-----------------------------------------------------------------------------|--------------------------------|---------------|---------------|
| DRIVECOM (1 PCP word)                                                       | DRIVECOM                       | 227           | E3            |
| ENCOM (2 PCP words) *)                                                      | ENCOM                          | 244           | F4            |
| ENCOM (4 PCP words) *)                                                      | ENCOM                          | 245           | F5            |
| ENCOM (1 PCP word)                                                          | ENCOM                          | 247           | F7            |
| Profile-compliant modules (2 PCP words) *)                                  | Profile PA channel             | 228           | E4            |
| Profile-compliant modules (4 PCP words) *)                                  | Profile PA channel             | 229           | E5            |
| Profile-compliant module (1 PCP word)                                       | Profile PA channel             | 231           | E7            |
| "μP_Not_Ready" (with register latching) remote bus *)                       | Special                        | 56            | 38            |
| "μP_Not_Ready" (for re-initialization) remote bus *)                        | Special                        | 60            | 3C            |
| <b>Local bus device (digital)</b>                                           |                                |               |               |
| Digital output modules                                                      | DO                             | 189           | BD            |
| Digital input modules                                                       | DI                             | 190           | BE            |
| Digital input/output modules                                                | DIO                            | 191           | BF            |
| Digital INTERBUS Loop output modules                                        | IBS Loop DO                    | 177           | B1            |
| Digital INTERBUS Loop input modules                                         | IBS Loop DI                    | 178           | B2            |
| Digital INTERBUS Loop input/output modules                                  | IBS Loop DIO                   | 179           | B3            |
| Profile-compliant digital output modules                                    | PROFILE DO                     | 181           | B5            |
| Profile-compliant digital input modules                                     | PROFILE DI                     | 182           | B6            |
| Profile-compliant digital input/output modules                              | PROFILE DIO                    | 183           | B7            |
| Wrenching controllers                                                       | Wrench. contr.                 | 187           | BB            |
| <b>Local bus device (analog)</b>                                            |                                |               |               |
| Analog output modules                                                       | AO                             | 125           | 7D            |
| Analog output modules with alarm inputs **)                                 | AIO <sup>2</sup>               | 91            | 5B            |
| Analog input modules                                                        | AI                             | 126           | 7E            |
| Analog input modules with configuration outputs                             | AI <sup>2</sup> O              | 95            | 5F            |
| Analog input/output modules                                                 | AIO                            | 127           | 7F            |
| Analog input and output modules with alarm inputs and configuration outputs | AI <sup>2</sup> O <sup>2</sup> | 83            | 53            |
| Analog INTERBUS Loop output modules                                         | AO Loop                        | 113           | 71            |
| Analog INTERBUS Loop output modules with alarm inputs                       | AIO <sup>2</sup> Loop          | 107           | 6B**          |
| Analog INTERBUS Loop input modules                                          | AI Loop                        | 114           | 72            |

Table A-5 Extract from the ID code specification (continued)

| Description of module function                                                                 |                                     | ID code (dec) | ID code (hex) |
|------------------------------------------------------------------------------------------------|-------------------------------------|---------------|---------------|
| Analog INTERBUS Loop input modules with configuration outputs                                  | AI <sup>2</sup> O Loop              | 111           | 6F**          |
| Analog INTERBUS Loop input and output modules                                                  | AIO Loop                            | 115           | 73            |
| Analog INTERBUS Loop input and Loop output modules with alarm inputs and configuration outputs | AI <sup>2</sup> O <sup>2</sup> Loop | 99            | 63**          |
| Profile-compliant analog output modules                                                        | PROFILE AO                          | 121           | 79            |
| Profile-compliant analog input modules                                                         | PROFILE AI                          | 122           | 7A            |
| Profile-compliant analog input/output modules                                                  | PROFILE AIO                         | 123           | 7B            |
| ENCOM with input data                                                                          | ENCOM                               | 102           | 66            |
| ENCOM with input and output data                                                               | ENCOM                               | 103           | 67            |
| <b>Local bus devices with parameter channel</b>                                                |                                     |               |               |
| Modules with parameter channel (2 PCP words) *)                                                | PA channel                          | 220           | DC            |
| Modules with parameter channel (4 PCP words) *)                                                | PA channel                          | 221           | DD            |
| Modules with parameter channel (1 PCP word)                                                    | PA channel                          | 223           | DF            |
| DRIVECOM (2 PCP words) *)                                                                      | DRIVECOM                            | 192           | C0            |
| DRIVECOM (4 PCP words) *)                                                                      | DRIVECOM                            | 193           | C1            |
| DRIVECOM (1 PCP word)                                                                          | DRIVECOM                            | 195           | C3            |
| ENCOM (2 PCP words) *)                                                                         | ENCOM                               | 212           | D4            |
| ENCOM (4 PCP words) *)                                                                         | ENCOM                               | 213           | D5            |
| ENCOM (1 PCP word)                                                                             | ENCOM                               | 215           | D7            |
| Profile-compliant modules (2 PCP words) *)                                                     | Profile PA channel                  | 216           | D8            |
| Profile-compliant modules (4 PCP words) *)                                                     | Profile PA channel                  | 217           | D9            |
| Profile-compliant module (1 PCP word)                                                          | Profile PA channel                  | 219           | DB            |
| "μP_Not_Ready" (with register latching), local bus *)                                          | Special                             | 120           | 78            |
| "μP_Not_Ready" (for re-initialization) local bus *)                                            | Special                             | 108           | 6C            |
| "μP_Not_Ready" (for re-initialization), Loop *)                                                | Special                             | 104           | 68            |

\* This ID code is only supported by INTERBUS masters of Generation 4 or later.

\*\* This ID code is only supported by INTERBUS masters with firmware 4.50 or later.

## A 3 Length code specification

Table A-6 ID code data length

| ID12 | ID11 | ID10 | ID9 | ID8 | Data length | Firmware version* |
|------|------|------|-----|-----|-------------|-------------------|
| 0    | 0    | 0    | 0   | 0   | 0 words     |                   |
| 0    | 0    | 0    | 0   | 1   | 1 word      |                   |
| 0    | 0    | 0    | 1   | 0   | 2 words     |                   |
| 0    | 0    | 0    | 1   | 1   | 3 words     |                   |
| 0    | 0    | 1    | 0   | 0   | 4 words     |                   |
| 0    | 0    | 1    | 0   | 1   | 5 words     |                   |
| 0    | 0    | 1    | 1   | 0   | 8 words     |                   |
| 0    | 0    | 1    | 1   | 1   | 9 words     |                   |
| 0    | 1    | 0    | 0   | 0   | 1 nibble    | 4.0               |
| 0    | 1    | 0    | 0   | 1   | 1 byte      | 4.0**             |
| 0    | 1    | 0    | 1   | 1   | 3 bytes     | 4.0**             |
| 0    | 1    | 1    | 0   | 0   | Reserved    |                   |
| 0    | 1    | 1    | 0   | 1   | 2 bits      | 4.0               |
| 0    | 1    | 1    | 1   | 0   | 6 words     | 3.2               |
| 0    | 1    | 1    | 1   | 1   | 7 words     | 3.2               |
| 1    | 0    | 0    | 0   | 0   | Reserved    |                   |
| 1    | 0    | 0    | 0   | 1   | 26 words    | 3.7               |
| 1    | 0    | 0    | 1   | 0   | 16 words    | 3.2               |
| 1    | 0    | 0    | 1   | 1   | 24 words    | 3.2               |
| 1    | 0    | 1    | 0   | 0   | 32 words    | 3.2               |
| 1    | 0    | 1    | 0   | 1   | 10 words    | 3.2               |
| 1    | 0    | 1    | 1   | 0   | 12 words    | 3.2               |
| 1    | 0    | 1    | 1   | 1   | 14 words    | 3.2               |
| 1    | 1    | x    | x   | x   | Reserved    |                   |

\* The data length is supported by the controller board (bus master) with the specified firmware version or later.

\*\* The data lengths 1 byte and 3 bytes are supported by the PC AT-T board, version 3.1 or later. The data lengths supported by firmware version 3.2 or later are recognized by the PC AT-T board by driver version 2.0 or later.



The length entry determines the data register length of the entire INTERBUS device - that means the total of register configurable in the SUPI chip and additional external registers, if any. By default this length entry is wired via SUPI 3 pins ID12-ID8 by hardware. The physical data length of the IBS SUPI 3 to be set using C0-C3 and possibly used external register must match the logic data length to be set using ID8-ID12, even if the chip was reconfigured with software afterwards (see Section "SET-I register" on page 3-16 and Section "SET-II register" on page 3-19).

## B Wiring examples

The following applies for all wiring examples:

- All resistors have a tolerance of  $\pm 1\%$ , maximum.
- All capacitors have a tolerance of  $\pm 20\%$ , maximum.
- Electrical isolation has to be at least 500 VAC
- Only components from the component reference list of the INTERBUS Club will be used.

The circuit diagrams were prepared with the greatest possible care. Phoenix Contact does not guarantee the correctness of the circuit diagrams.


type 1

- \* Please observe layout notes of the manufacturer.
- \*\*\* Other connector types may be used depending on the device type.
- \*\*\* Please observe layout notes of the manufacturer and the chapter "clock generation" of the IBS SUP3 manual.

|                                                                                     |     |              |                   |                    |               |          |       |       |             |          |       |      |            |       |
|-------------------------------------------------------------------------------------|-----|--------------|-------------------|--------------------|---------------|----------|-------|-------|-------------|----------|-------|------|------------|-------|
|                                                                                     |     |              |                   |                    |               | Masstab: |       |       |             |          |       |      |            |       |
| Remotebus with optical isolation typ 1                                              |     |              |                   | Anzahl<br>Blätter: | Blatt<br>Nr.: | gepr.    | _____ | _____ |             |          |       |      |            |       |
|                                                                                     |     |              |                   |                    |               | gezei.   | _____ | _____ |             |          |       |      |            |       |
|  | 1-1 | Z.Nr.: _____ | Anzahl<br>Kopien: | Kopie<br>Nr.:      |               | Datum    | Name  | Rev   | Aenderung   |          | Datum | Name | Pruefdatum | gepr. |
|                                                                                     |     |              |                   |                    |               |          |       |       | version 2.0 | 01.08.96 | Lutz  |      |            |       |

|          |       |
|----------|-------|
| uefdatum | gepr. |
|----------|-------|


application installation remote bus

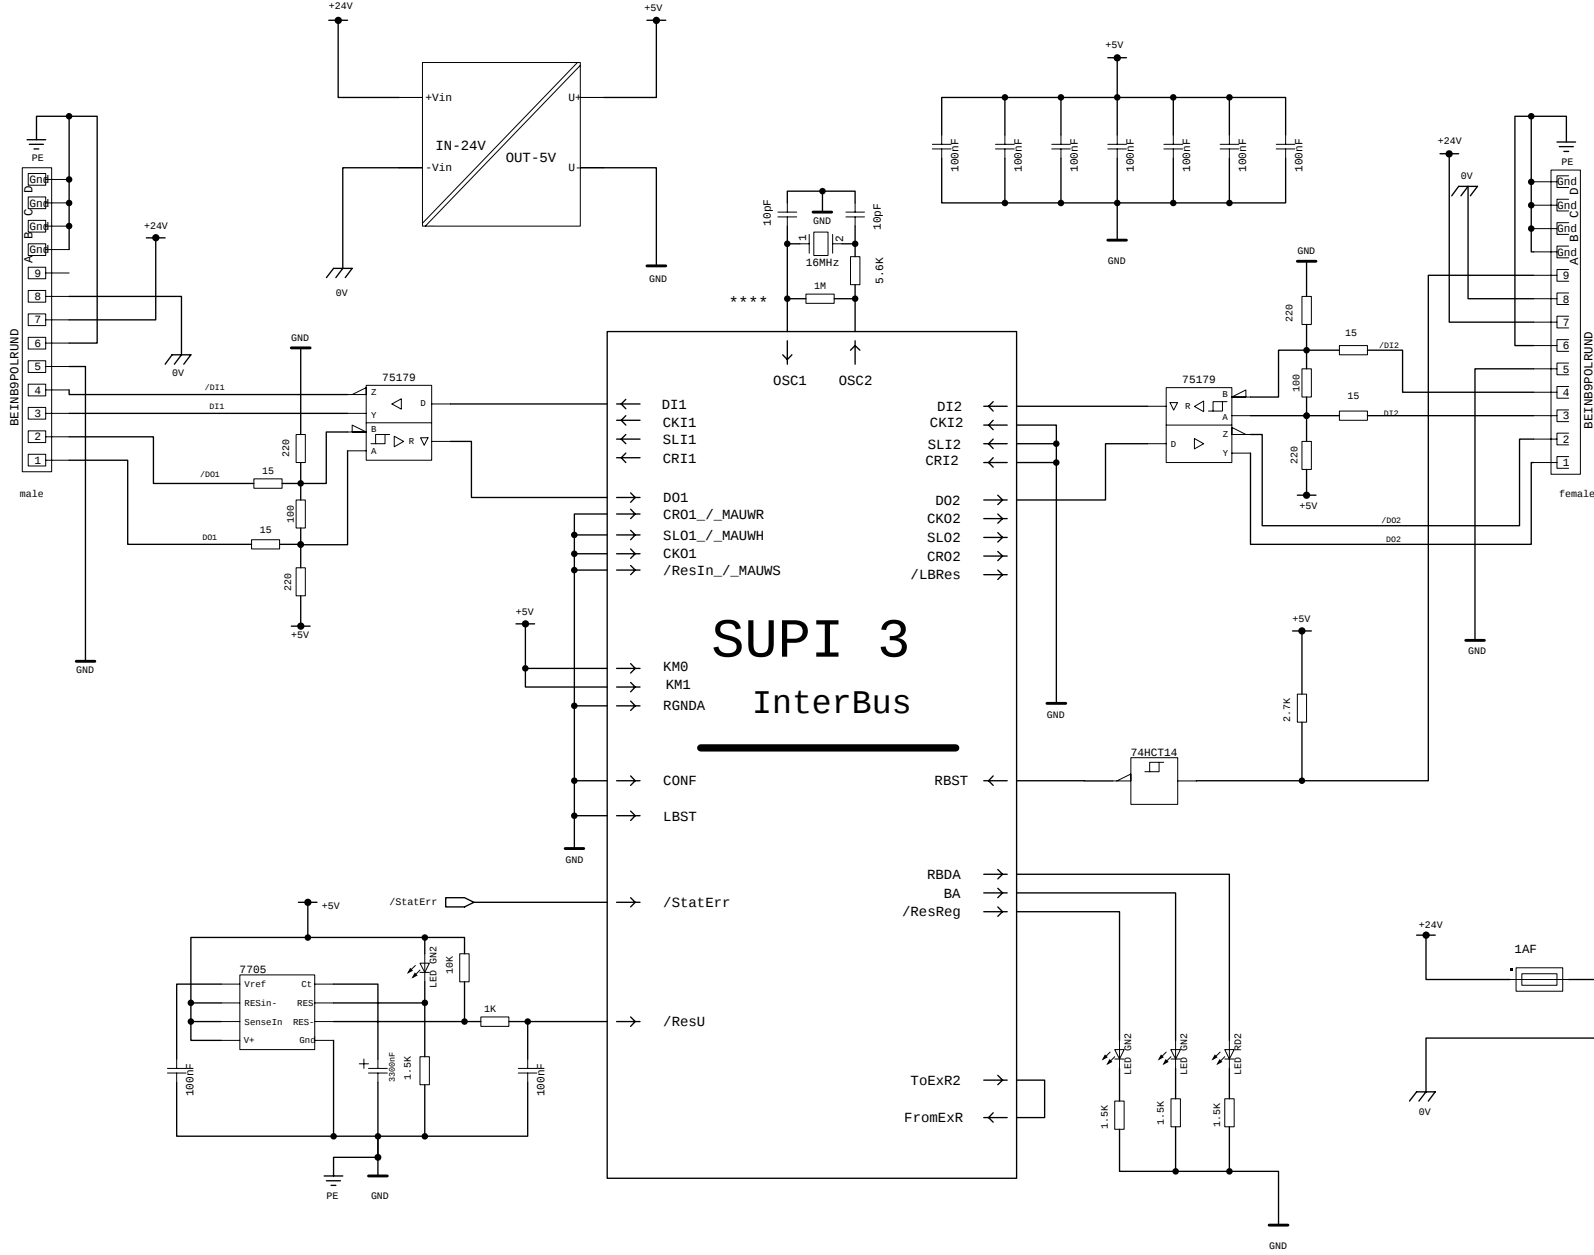

\*\*\*\* Please observe layout notes of the manufacturer and the chapter "clock generation" of the IBS SUPI3 manual.

|                                    |     |               |                  |             |       |       |       |             |           |          |      |            |       |
|------------------------------------|-----|---------------|------------------|-------------|-------|-------|-------|-------------|-----------|----------|------|------------|-------|
| application instalation remote bus |     |               |                  | Masstab:    |       |       |       |             |           |          |      |            |       |
| PHOENIX CONTACT                    | 1-4 | Z.Nr. : _____ | Anzahl Blaetter: | Blatt Nr. : | gepr  | _____ | _____ | version 2.0 |           | 01.08.96 | Lutz |            |       |
|                                    |     |               |                  |             | gezel | _____ | _____ |             |           |          |      |            |       |
|                                    |     |               |                  |             |       | Datum | Name  | Rev         | Aenderung | Datum    | Name | Pruefdatum | gepr. |

# application local bus

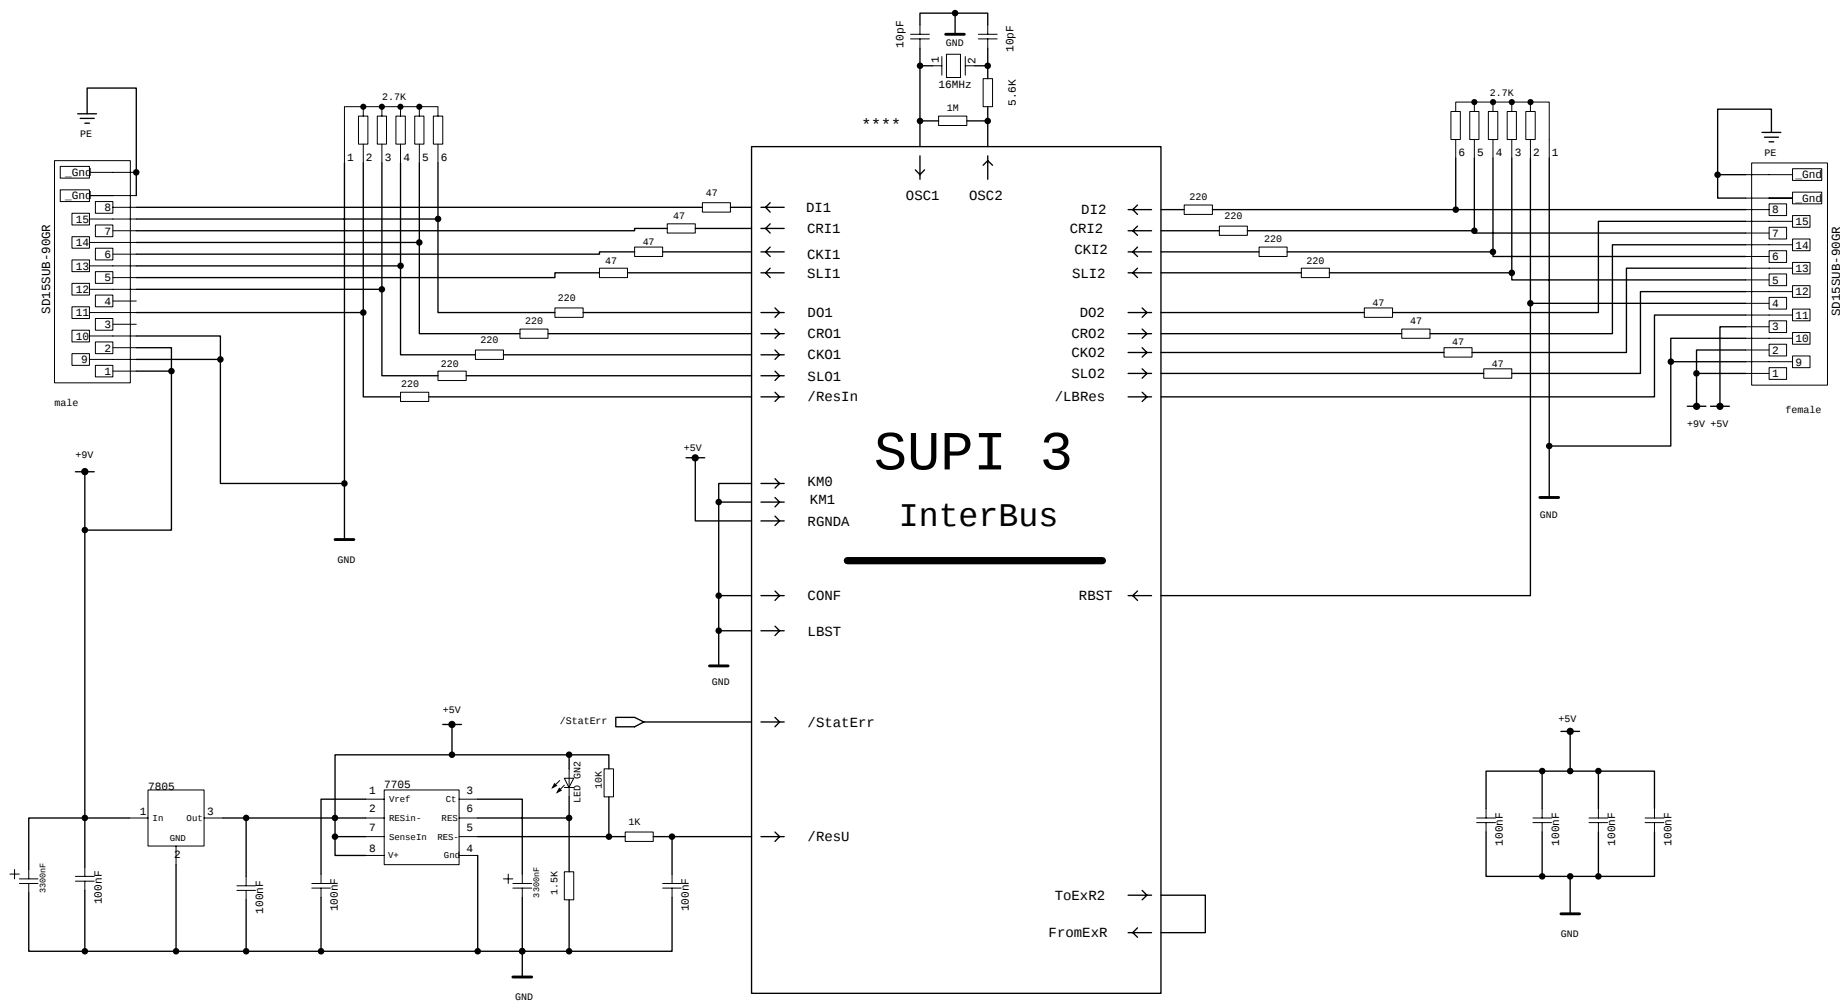


\*\*\*\* Please observe layout notes of the manufacturer and the chapter "clock generation" of the IBS SUPI3 manual.

The LEDs RC and BA could be connected by option.

|                                                                                     |     |              |                 |            |          |       |       |     |             |  |          |      |            |       |
|-------------------------------------------------------------------------------------|-----|--------------|-----------------|------------|----------|-------|-------|-----|-------------|--|----------|------|------------|-------|
|                                                                                     |     |              |                 |            | Masstab: |       |       |     |             |  |          |      |            |       |
| application local bus                                                               |     |              | Anzahl Blätter: | Blatt Nr.: | gepr.    | _____ | _____ |     |             |  |          |      |            |       |
|  | 2-1 | Z.Nr.: _____ | Anzahl Kopien:  | Kopie Nr.: | gezel.   | _____ | _____ |     | version 2.0 |  | 01.08.96 | Lutz |            |       |
|                                                                                     |     |              |                 |            |          | Datum | Name  | Rev | Aenderung   |  | Datum    | Name | Pruefdatum | gepr. |
|                                                                                     |     |              |                 |            |          |       |       |     |             |  |          |      |            |       |

# application 8 Bit Input und 8 Bit Output

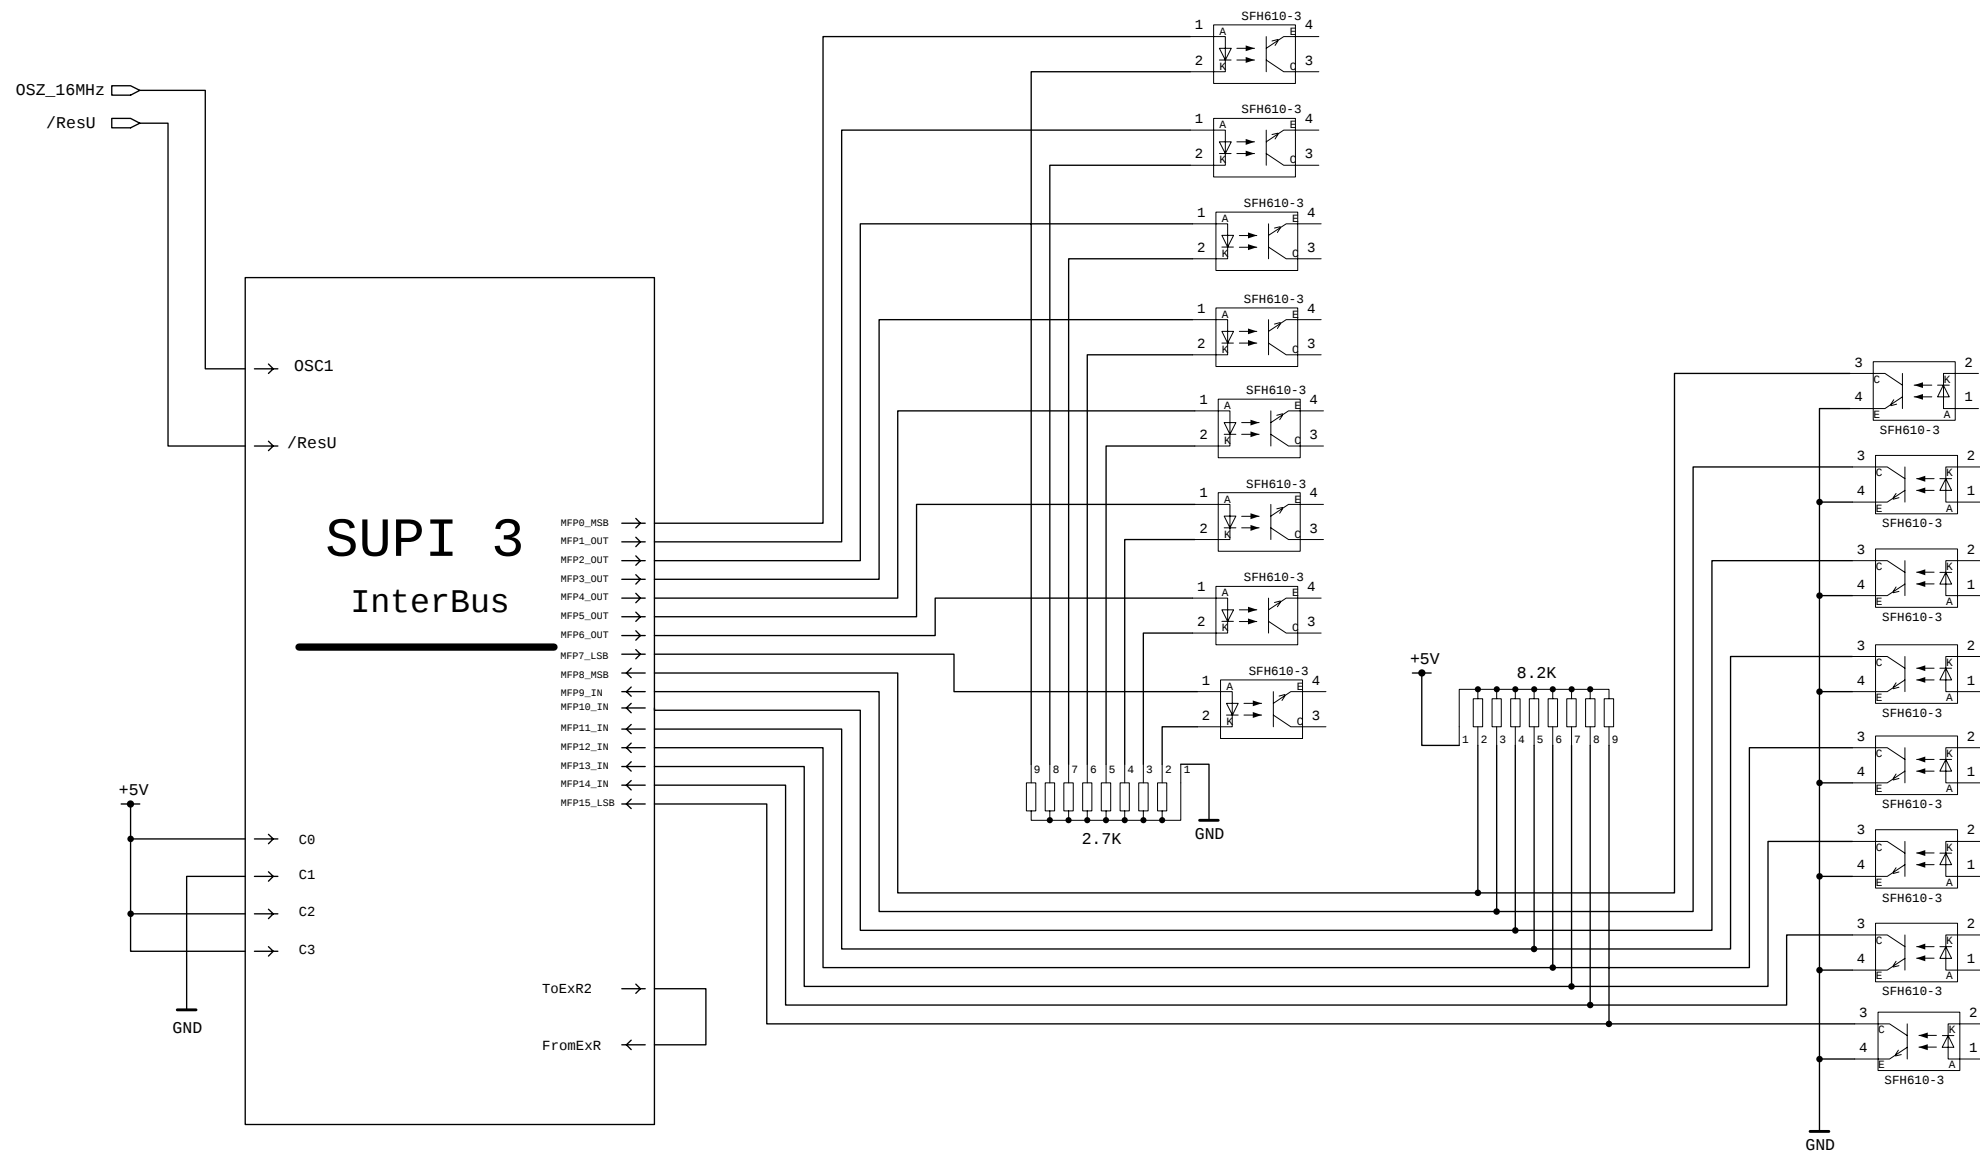


Copying of this document, and giving it to others and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of the grant of a patent or the registration of a utility model or design.  
32819 Blomberg  
Postfach 1341

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts, nicht gestattet, soweit nicht ausdrücklich zugestanden. Zuwiderhandlungen verpflichten zu Schadenersatz. Alle Rechte für den Fall der Patenterteilung oder Gebrauchsmuster - Eintragung vorbehalten.  
Phoenix Contact GmbH & Co.

|                    |  |  |                    |  |               |  |          |      |             |           |          |      |            |       |
|--------------------|--|--|--------------------|--|---------------|--|----------|------|-------------|-----------|----------|------|------------|-------|
| 8 IN / 8 Out       |  |  | Anzahl<br>Blätter: |  | Blatt<br>Nr.: |  | Masstab: |      |             |           |          |      |            |       |
| Phoenix<br>CONTACT |  |  | Anzahl<br>Kopien:  |  | Kopie<br>Nr.: |  | gepr.    |      |             |           |          |      |            |       |
| 4-3                |  |  | Z.Nr.:             |  |               |  | gezel.   |      |             |           |          |      |            |       |
|                    |  |  |                    |  |               |  | Datum    | Name | Rev         | Aenderung | Datum    | Name | Pruefdatum | gepr. |
|                    |  |  |                    |  |               |  |          |      | version 1.1 |           | 01.08.96 |      | Lutz       |       |

# application register expansion for digital I/O

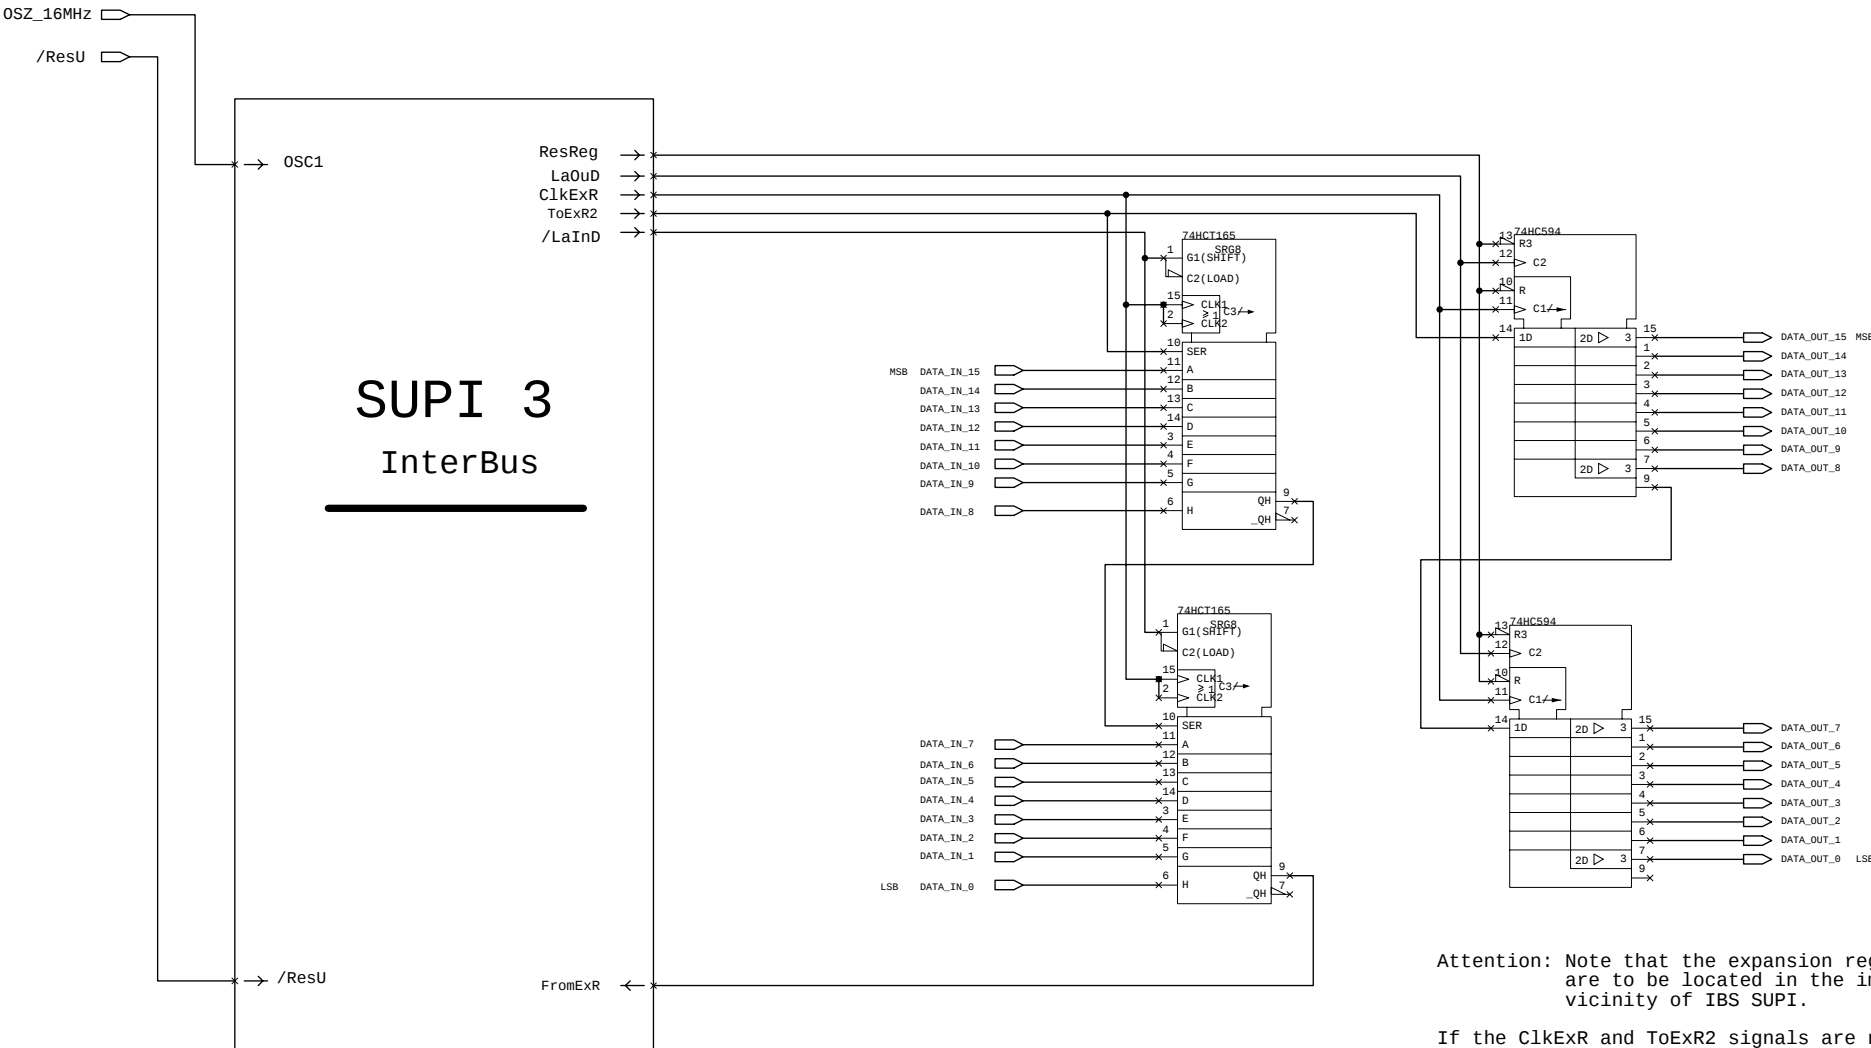


Attention: Note that the expansion register are to be located in the immediate vicinity of IBS SUPI.

If the ClkEXR and ToEXR2 signals are not buffered, it is only possible to use 4 expansion ICs due to the capacitive load.

|                                                                                                        |  |  |  |                    |                   |               |       |       |     |             |  |  |          |      |            |
|--------------------------------------------------------------------------------------------------------|--|--|--|--------------------|-------------------|---------------|-------|-------|-----|-------------|--|--|----------|------|------------|
|                                                                                                        |  |  |  |                    |                   | Masstab:      |       |       |     |             |  |  |          |      |            |
| register expansion for digit. I/O                                                                      |  |  |  | Anzahl<br>Blätter: | Blatt<br>Nr.:     | gepr          | _____ | _____ |     |             |  |  |          |      |            |
|                                                                                                        |  |  |  |                    |                   | gezel         | _____ | _____ |     | version 1.1 |  |  | 01.08.96 | Lutz |            |
|  PHOENIX<br>CONTACT |  |  |  |                    |                   |               | Datum | Name  | Rev | Aenderung   |  |  | Datum    | Name | Pruefdatum |
| 3-1                                                                                                    |  |  |  | Z.Nr.: _____       | Anzahl<br>Kopien: | Kopie<br>Nr.: |       |       |     |             |  |  |          |      | gepr.      |

# application register expansion with IBS SRE 1

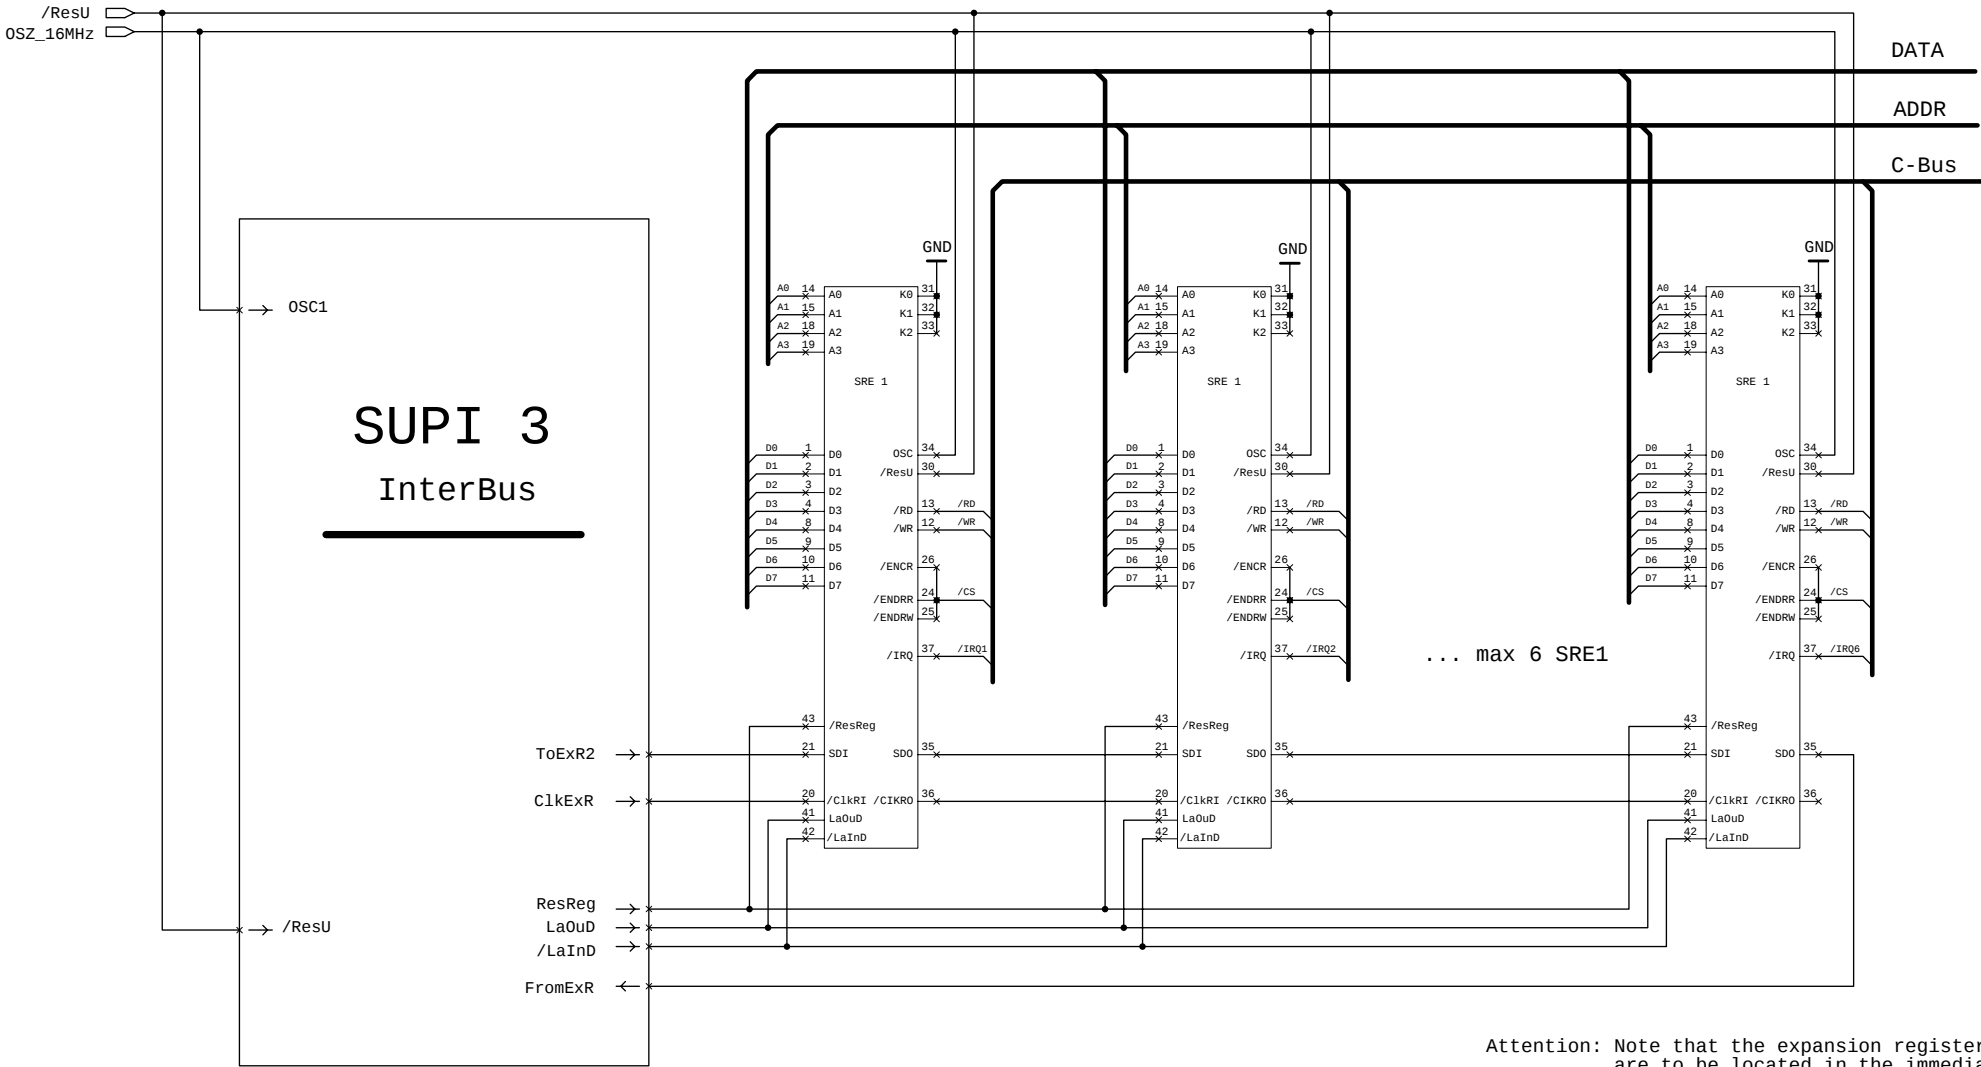

Attention: Note that the expansion register are to be located in the immediate vicinity of IBS SUPI.

|                                   |  |  |                 |  |            |  |          |       |      |     |             |  |            |  |
|-----------------------------------|--|--|-----------------|--|------------|--|----------|-------|------|-----|-------------|--|------------|--|
| register expansion with IBS SRE 1 |  |  | Anzahl Blätter: |  | Blatt Nr.: |  | Masstab: |       |      |     |             |  |            |  |
|                                   |  |  | Anzahl Kopien:  |  | Kopie Nr.: |  | gepr     |       |      |     |             |  |            |  |
|                                   |  |  |                 |  |            |  | gezel    |       |      |     | version 1.1 |  | 01.08.96   |  |
|                                   |  |  |                 |  |            |  |          | Datum | Name | Rev | Aenderung   |  | Datum      |  |
|                                   |  |  |                 |  |            |  |          |       |      |     |             |  | Name       |  |
|                                   |  |  |                 |  |            |  |          |       |      |     |             |  | Pruefdatum |  |
|                                   |  |  |                 |  |            |  |          |       |      |     |             |  | gepr.      |  |

|                                                                                                        |     |        |       |                    |               |          |       |       |     |             |          |      |            |       |
|--------------------------------------------------------------------------------------------------------|-----|--------|-------|--------------------|---------------|----------|-------|-------|-----|-------------|----------|------|------------|-------|
|                                                                                                        |     |        |       |                    |               | Masstab: |       |       |     |             |          |      |            |       |
| uP-Interface                                                                                           |     |        |       | Anzahl<br>Blätter: | Blatt<br>Nr.: | gepr.    | _____ | _____ |     |             |          |      |            |       |
|                                                                                                        |     |        |       |                    |               | gezei.   | _____ | _____ |     | version 1.1 | 01.08.96 | Lutz |            |       |
|  PHOENIX<br>CONTACT | 4-4 | Z.Nr.: | _____ | Anzahl<br>Kopien:  | Kopie<br>Nr.: |          | Datum | Name  | Rev | Aenderung   | Datum    | Name | Pruefdatum | gepr. |


# application remotebus terminal module

## 1. outgoing Interface

## 2. outgoing Interface (branch)

Copying of this document, and giving it to others and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of the grant of a patent or the registration of a utility model or design.  
32819 Blomberg  
Postfach 1341

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts nicht gestattet, soweit nicht ausdrücklich zugestimmt. Zuwiderhandlungen verpflichten zu Schadenersatz. Alle Rechte für den Fall der Patenterteilung oder Gebrauchsmuster - Eintragung vorbehalten.  
Phoenix Contact GmbH & Co.

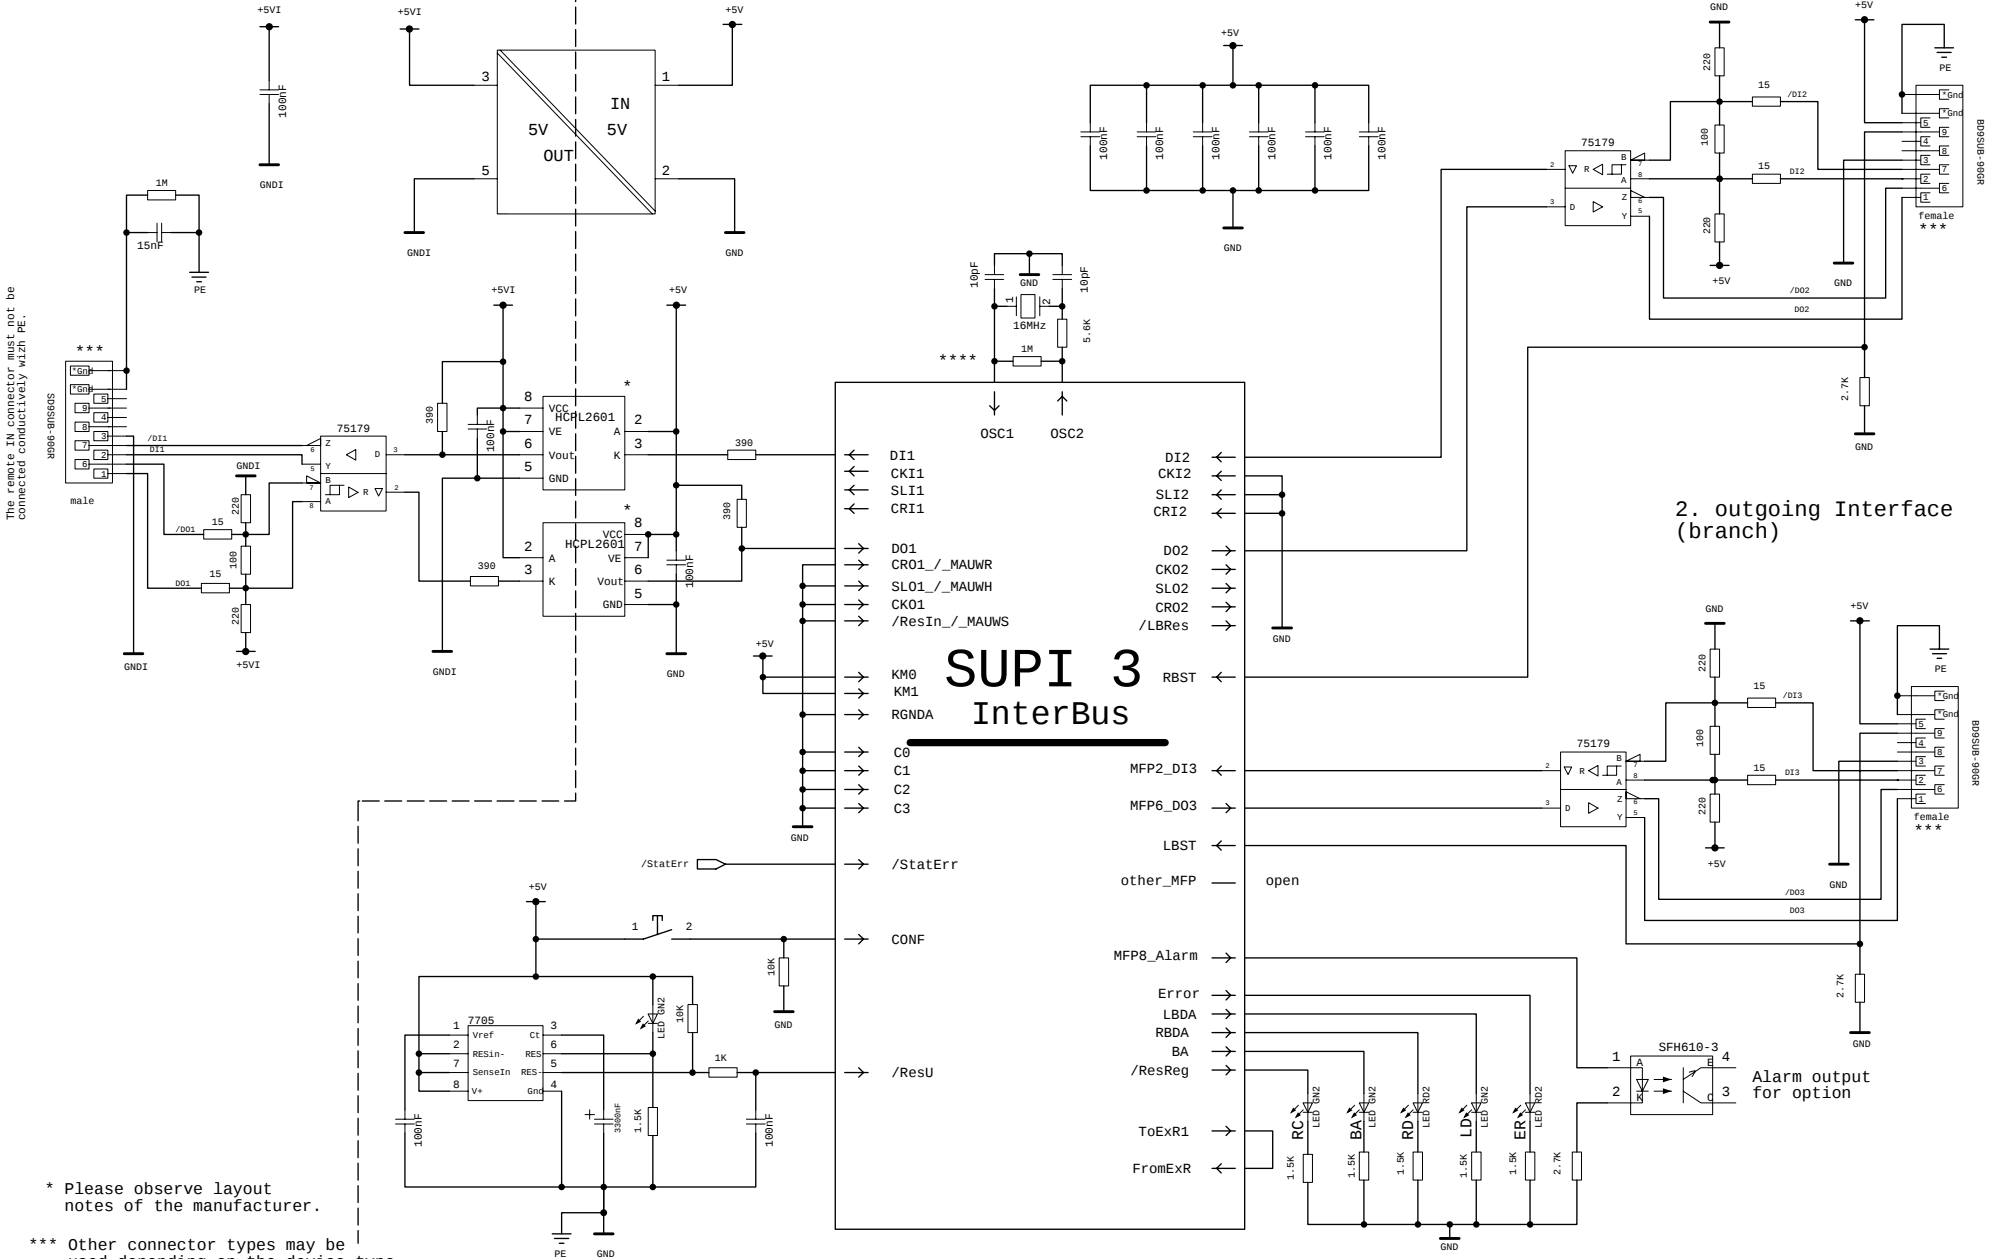

|                           |  |  |                  |  |            |  |          |  |      |     |             |  |          |            |
|---------------------------|--|--|------------------|--|------------|--|----------|--|------|-----|-------------|--|----------|------------|
| remotebus terminal module |  |  | Anzahl Blaetter: |  | Blatt Nr.: |  | Masstab: |  |      |     |             |  |          |            |
| Phoenix CONTACT           |  |  | Anzahl Kopien:   |  | Kopie Nr.: |  | gepr     |  |      |     |             |  |          |            |
| 1-5                       |  |  | Z.Nr.:           |  |            |  | gezel    |  |      |     |             |  |          |            |
|                           |  |  |                  |  |            |  | Datum    |  | Name | Rev | version 0.0 |  | 01.02.97 | Lutz       |
|                           |  |  |                  |  |            |  |          |  |      |     | Aenderung   |  |          | Pruefdatum |
|                           |  |  |                  |  |            |  |          |  |      |     |             |  |          | gepr.      |

# C Appendix

## C 1 List of figures

### Section 1

|             |                                                                                         |      |
|-------------|-----------------------------------------------------------------------------------------|------|
| Figure 1-1: | Fields of application of the INTERBUS SUPI 3 slave protocol chip ....                   | 1-2  |
| Figure 1-2: | Block diagram of the chip .....                                                         | 1-3  |
| Figure 1-3: | Pin layout of the QFP 100 housing .....                                                 | 1-10 |
| Figure 1-4: | Mechanical dimensions of the QFP 100 housing<br>(original dimension: millimeters) ..... | 1-11 |
| Figure 1-5: | Clock lines of the SUPI 3 .....                                                         | 1-16 |
| Figure 1-6: | Clock ratio for the clock of INTERBUS protocol chips .....                              | 1-17 |

### Section 3

|              |                                                                                        |      |
|--------------|----------------------------------------------------------------------------------------|------|
| Figure 3-1:  | MFP interface timing, write access .....                                               | 3-8  |
| Figure 3-2:  | MFP interface timing, read access .....                                                | 3-9  |
| Figure 3-3:  | Timing of the interrupt signals using the example of the DATA<br>cycle interrupt ..... | 3-11 |
| Figure 3-4:  | Assignment of the interrupt enable I register .....                                    | 3-12 |
| Figure 3-5:  | Assignment of the interrupt enable II register .....                                   | 3-12 |
| Figure 3-6:  | Assignment of the interrupt event I register .....                                     | 3-13 |
| Figure 3-7:  | Assignment of the interrupt event II register .....                                    | 3-13 |
| Figure 3-8:  | Assignment of the SET-I register .....                                                 | 3-16 |
| Figure 3-9:  | Assignment of the SET-II register .....                                                | 3-19 |
| Figure 3-10: | Flow chart for the initialization with created "µP_Not_Ready" ID<br>code .....         | 3-22 |
| Figure 3-11: | Assignment of the IB state register .....                                              | 3-23 |
| Figure 3-12: | No register expansion .....                                                            | 3-25 |
| Figure 3-13: | Register expansion with SRE 1 .....                                                    | 3-26 |
| Figure 3-14: | Expansion of the internal SUPI 3 registers by means of register<br>expansion .....     | 3-26 |
| Figure 3-15: | 16 bit I/O device with 2x8-bit IN register expansion .....                             | 3-27 |
| Figure 3-16: | 16 bit I/O device with 2x8-bit OUT register expansion .....                            | 3-27 |
| Figure 3-17: | 48 bit I/O device with 4x8-bit IN register expansion .....                             | 3-28 |
| Figure 3-18: | 48 bit I/O device with 2x8-bit IN and 2x8-bit OUT register<br>expansion .....          | 3-28 |
| Figure 3-19: | 32 bit I/O device with 4x8-bit IN register expansion .....                             | 3-29 |

|              |                                                                            |      |
|--------------|----------------------------------------------------------------------------|------|
| Figure 3-20: | 32 bit I/O device with 2x8-bit IN and 2x8-bit OUT register expansion ..... | 3-29 |
| Figure 3-21: | Timing diagram for register expansion .....                                | 3-30 |
| Figure 3-22: | Timing diagram, in detail .....                                            | 3-30 |

## C 2 List of tables

### Section 1

|            |                                                   |      |
|------------|---------------------------------------------------|------|
| Table 1-1: | Different versions.....                           | 1-3  |
| Table 1-2: | General data.....                                 | 1-8  |
| Table 1-3: | QFP 100 pin table.....                            | 1-9  |
| Table 1-4: | Mechanical dimensions of the QFP 100 housing..... | 1-12 |
| Table 1-5: | Signal description.....                           | 1-13 |
| Table 1-6: | Clock timing.....                                 | 1-17 |
| Table 1-7: | Configuration of the INTERBUS interface.....      | 1-18 |
| Table 1-8: | Configuration of the MFP interface.....           | 1-19 |
| Table 1-9: | ID code data length.....                          | 1-19 |

### Section 2

|            |                                                                       |     |
|------------|-----------------------------------------------------------------------|-----|
| Table 2-1: | 8-wire local bus configuration.....                                   | 2-1 |
| Table 2-2: | Pin assignment of the 15-pos. D-SUB INTERBUS local bus connector..... | 2-2 |
| Table 2-3: | 2-wire local bus configuration.....                                   | 2-2 |
| Table 2-4: | Remote bus configuration.....                                         | 2-3 |
| Table 2-5: | Pin assignment of the 9-pos. D-SUB INTERBUS remote bus connector..... | 2-3 |

### Section 3

|             |                                                                                |     |
|-------------|--------------------------------------------------------------------------------|-----|
| Table 3-1:  | Operating modes of the MFP interface.....                                      | 3-1 |
| Table 3-2:  | Configuration BK module with local bus branch.....                             | 3-2 |
| Table 3-3:  | Configuration BK module with 2-wire branch.....                                | 3-3 |
| Table 3-4:  | Configuration 16-bit output.....                                               | 3-4 |
| Table 3-5:  | Assignment of the MFP interface for the 16-bit output mode.....                | 3-4 |
| Table 3-6:  | Configuration 16-bit input.....                                                | 3-5 |
| Table 3-7:  | Assignment of the MFP interface for the 16-bit input mode.....                 | 3-5 |
| Table 3-8:  | Configuration 8-bit input and 8-bit output.....                                | 3-6 |
| Table 3-9:  | Assignment of the MFP interface for the 8-bit input and 8-bit output mode..... | 3-6 |
| Table 3-10: | Assignment of the MFP interface for the $\mu$ P access mode.....               | 3-7 |
| Table 3-11: | MFP interface timing, write access.....                                        | 3-8 |
| Table 3-12: | MFP interface timing, read access.....                                         | 3-9 |

|             |                                                                        |      |
|-------------|------------------------------------------------------------------------|------|
| Table 3-13: | µP modes of operation.....                                             | 3-9  |
| Table 3-14: | Address area assignment of the SUPI 3 .....                            | 3-10 |
| Table 3-15: | INTERBUS watchdog in the SUPI 3 chip .....                             | 3-16 |
| Table 3-16: | PCP bit .....                                                          | 3-17 |
| Table 3-17: | Mapping of the SET-I register to the length entry in the ID code ..... | 3-17 |
| Table 3-18: | Encoding of the data length in the SET-I register .....                | 3-18 |
| Table 3-19: | Mapping of the ID code register to the ID code .....                   | 3-20 |
| Table 3-20: | Timing for register expansion.....                                     | 3-31 |
| Table 3-21: | Diagnostic inputs/outputs of a remote bus device.....                  | 3-32 |
| Table 3-22: | Diagnostic inputs/outputs of a local bus device .....                  | 3-32 |

## Appendix A

|            |                                              |     |
|------------|----------------------------------------------|-----|
| Table A-1: | Absolute limit values .....                  | A-1 |
| Table A-2: | Recommended operating conditions .....       | A-1 |
| Table A-3: | DC data .....                                | A-1 |
| Table A-4: | Storage .....                                | A-3 |
| Table A-5: | Extract from the ID code specification ..... | A-4 |
| Table A-6: | ID code data length.....                     | A-7 |

## C 3 Index

### Numerics

|                                      |            |
|--------------------------------------|------------|
| 16 inputs .....                      | 3-27       |
| 16 OUT and 32 IN addresses .....     | 3-28, 3-29 |
| 16 outputs .....                     | 3-27       |
| 16-bit input .....                   | 3-5, 3-27  |
| 16-bit output .....                  | 3-4, 3-27  |
| 32-bit input .....                   | 3-27       |
| 32-bit input and 16-bit output ..... | 3-27       |
| 8-bit input .....                    | 3-6        |
| 8-bit output .....                   | 3-6        |

### A

|                               |          |
|-------------------------------|----------|
| Address area assignment ..... | 3-10     |
| Address bus .....             | 3-7      |
| Alarm output .....            | 3-2, 3-3 |
| ASIC .....                    | 1-2      |

### B

|                           |      |
|---------------------------|------|
| BA .....                  | 3-16 |
| BA diagnostic LED .....   | 3-32 |
| Bus terminal module ..... | 3-1  |

### C

|                         |      |
|-------------------------|------|
| CC diagnostic LED ..... | 3-32 |
| Certification .....     | 3-32 |
| Check sequence .....    | 3-14 |
| ClkExR .....            | 3-25 |
| Clock .....             | 1-16 |
| Command register .....  | 3-15 |
| CONF .....              | 3-34 |
| Control signals .....   | 3-7  |

### D

|                                    |                 |
|------------------------------------|-----------------|
| Data bus .....                     | 3-7             |
| Data cycle .....                   | 3-14            |
| Data length .....                  | 1-19, 1-20, A-7 |
| Data register with IBS SRE 1 ..... | 3-26            |
| Data width .....                   | 1-20, A-7       |
| Disable clear .....                | 3-17            |
| D-SUB 15 .....                     | 2-1             |
| D-SUB 9 .....                      | 2-3             |

### E

|                                   |          |
|-----------------------------------|----------|
| Electrical isolation .....        | 2-2, 2-3 |
| Encoding of the data length ..... | 3-18     |
| Encoding of the data width .....  | 3-18     |
| External shift registers .....    | 3-25     |

### F

|                                  |      |
|----------------------------------|------|
| Failure of the I/O voltage ..... | 3-20 |
| Field of application .....       | 1-8  |

### H

|                     |     |
|---------------------|-----|
| Housing type .....  | 1-3 |
| Housing types ..... | 1-3 |

### I

|                            |      |
|----------------------------|------|
| I/O access .....           | 3-16 |
| Identification cycle ..... | 3-14 |
| Identification code .....  | 1-19 |
| IN data .....              | 3-4  |
| INTERBUS inactive .....    | 3-16 |
| INTERBUS interfaces .....  | 1-18 |
| INTERBUS reset .....       | 3-14 |
| INTERBUS watchdog .....    | 3-16 |
| Interrupt logic .....      | 3-11 |
| Invalid data cycle .....   | 3-14 |

### L

|                        |      |
|------------------------|------|
| Layer2_To .....        | 3-14 |
| Length entry .....     | 3-17 |
| Local bus .....        | 2-1  |
| Local bus branch ..... | 3-1  |

### M

|                           |      |
|---------------------------|------|
| MAU warning .....         | 3-34 |
| MFP interface .....       | 1-19 |
| Microprocessor .....      | 1-18 |
| Module error .....        | 3-34 |
| Multi-function pins ..... | 3-4  |

### N

|                             |      |
|-----------------------------|------|
| No register expansion ..... | 3-25 |
|-----------------------------|------|

**O**

|                  |      |
|------------------|------|
| Oscillator ..... | 1-16 |
| OUT data .....   | 3-4  |

**P**

|                          |      |
|--------------------------|------|
| PCP communication.....   | 3-17 |
| PCP-RECEIVE.....         | 3-14 |
| PCP-SEND .....           | 3-14 |
| Pin description .....    | 1-13 |
| Polling bit .....        | 3-16 |
| Processor watchdog ..... | 3-20 |

**Q**

|              |      |
|--------------|------|
| Quartz ..... | 1-16 |
|--------------|------|

**R**

|                                  |      |
|----------------------------------|------|
| RD diagnostic LED.....           | 3-33 |
| Remote bus.....                  | 2-1  |
| Remote bus branch.....           | 3-1  |
| Remote bus connection .....      | 2-1  |
| Remote or local bus branch ..... | 3-1  |
| ResReg.....                      | 3-25 |
| RS-485.....                      | 2-1  |

**S**

|                                    |      |
|------------------------------------|------|
| SET-II register .....              | 3-22 |
| Soldering conditions .....         | A-3  |
| StatErr .....                      | 3-34 |
| Switch ID code.....                | 3-20 |
| Switch ID length .....             | 3-19 |
| Switch MFP CONF.....               | 3-19 |
| Synchronization .....              | 3-16 |
| Synchronizing the CPU access ..... | 3-15 |

**T**

|                                     |      |
|-------------------------------------|------|
| Timing for register expansion ..... | 3-30 |
| ToExR1 .....                        | 3-25 |
| ToExR2.....                         | 3-25 |
| TR diagnostic LED .....             | 3-33 |

**V**

|                       |      |
|-----------------------|------|
| Valid data cycle..... | 3-14 |
|-----------------------|------|

**W**

|                |      |
|----------------|------|
| Watchdog ..... | 3-14 |
|----------------|------|