

Datasheet

Single Set Controller PTC Relay 10-30V

RS Stock number [798-3508](#)

7. Specifications	
Device Type	Temperature Controller
Mounting & Housing	77mm x 35.5mm x 17mm (plastic housing for panel mounting, Panel cutout is 71x35mm), NEMA4X (IP20) or NEMA 1 (IP00) or IP00
Protection Class	IP20 (IP00)
Weight	Approximately 2.0 kg
Environmental Ratings	Standard, indoor at an altitude of less than 2000 meters with some condensing humidity
Storage / Operating Temperature	-40 °C to +80 °C / -40 °C to +80 °C
Storage / Operating Humidity	95% max. (Non-condensing)
Installation	Fixed installation
Chemical Category	IE class or equivalent, non-conductive pollution
Pollution Degree	2
Operating Conditions	Continuous
Supply Voltage and Power	230V~ (±1%) 50/60Hz - 1.5VA 110V~ (±1%) 50/60Hz - 1.5VA 24VDC (±1%) 50/60Hz - 1.5VA 10V - 30VDC 1.5VA
Temperature Sensor Input	NTC, PTC, TC, RTD
NTC Input Type	1-NTC (10 to 325 °C) 2-NTC (10 to 325 °C)
PTC Input Type	1-PTC (1000 to 325 °C)
Thermocouple Input Type	1-K, E, EC (See 2) (ITS 90)
Thermoresistance Input Type	1-PTC10K, PT-1000 (EC75) (ITS 90)
Accuracy	± 1 % of full scale for Thermoresistance
Cold Junction Compensation	Automatic for E, K, T & TC
Sensor Break Protection	1-Unscale
Sampling Cycle	2 Samples per second
Control Form	ON / OFF
Relay Output	1-NO / 1-NC / 1-COM 250V AC, 10A (Resistive load) (Compressor Output) (Electrical life: 100,000 switching at full load) (Maximum 200k, Maximum 1750W)
Optional SSR Drive Output	1-SSR (See 2)
Display	14 mm Red 4 digit LED Display
LED	15 (Green), 15 (Green), 15 (Yellow), 15 (Yellow)
Internal Buzzer	1-Compressor Output (Pilot), Heating Output (Pilot)
Approvals	CE, CCC

8. Ordering Information	
ESM-3710-N (77x35 DIN Size)	
A. Supply Voltage	
1	230V~ (±1%) 50/60Hz - 1.5VA
2	110V~ (±1%) 50/60Hz - 1.5VA
3	24VDC (±1%) 50/60Hz - 1.5VA
4	10V~ (±1%) 50/60Hz - 1.5VA
5	10V - 30V DC
B. Input Type	
00	2-wire ON/OFF (PTC/NTC)
01	2-wire ON/OFF (TC/RTD)
02	2-wire ON/OFF (TC/RTD)
03	2-wire ON/OFF (TC/RTD)
04	2-wire ON/OFF (TC/RTD)
05	2-wire ON/OFF (TC/RTD)
06	2-wire ON/OFF (TC/RTD)
07	2-wire ON/OFF (TC/RTD)
08	2-wire ON/OFF (TC/RTD)
09	2-wire ON/OFF (TC/RTD)
10	2-wire ON/OFF (TC/RTD)
11	2-wire ON/OFF (TC/RTD)
12	2-wire ON/OFF (TC/RTD)
13	2-wire ON/OFF (TC/RTD)
14	2-wire ON/OFF (TC/RTD)
15	2-wire ON/OFF (TC/RTD)
16	2-wire ON/OFF (TC/RTD)
17	2-wire ON/OFF (TC/RTD)
18	2-wire ON/OFF (TC/RTD)
C. Compressor Output	
1	Relay Output (NO/NC/COM) at maximum 10A, 110V
2	ESM (See 2) Output (Maximum 20k, Maximum 1750W)
3	ESM (See 2) Output (Maximum 20k, Maximum 1750W)
4	ESM (See 2) Output (Maximum 20k, Maximum 1750W)
5	None
D. Name	
1	PTC-AMB-40X1.5 (PTC Air Probe 1.5 m Silicon Cast)
2	PTC-AMB-30X1.5 (PTC Liquid Probe 1.5 m Silicon Cast)
3	PTC-AMB-30X1.5 (PTC Sensor, stainless steel housing with 1.5 m cable for cooling application)
4	PTC-AMB-30X1.5 (PTC Sensor, stainless steel housing with 1.5 m cable for cooling application)
5	Customer

All order information of ESM-3710-N Temperature Controller are given on the table of above. User may find more information from information sheet that at the table and corner of the ordering codes. Firstly, supply voltage then other specifications must be determined. Please fit the order code according to your needs.

Please contact us, if you needs are out of the standards.

Name-1st input type to be selected PTC or NTC (00-15, 16). Temperature sensor is given with the device. For this reason, 1st input type to be selected as PTC sensor type (17-21) or 2nd input type to be selected as NTC sensor type (22-27) or 0 must be declared in ordering information.

9. Optional Accessories	
1RS-485 Module	2PROKEY Programming Module
RS-485 Communication Interface	The device is programmed (locked or unlocked) by using the parameter.

1.3 Installation

A visual inspection of this product for possible damage occurred during shipment is recommended before installation. It is your responsibility to ensure that qualified mechanical and electrical technicians install this product.

If there is danger of serious accident resulting from a failure or defect in this unit, power off the system and separate the electrical connection of the device from the system.

The unit is normally supplied without a power supply switch or a fuse. Use power switch and fuse as required.

Be sure to use the rated power supply voltage to protect the unit against damage and to prevent failure.

Keep the power off until all of the wiring is completed so that electric shock and trouble with the unit can be prevented.

Never attempt to disassemble, modify or repair this unit. Tampering with the unit may result in malfunction, electric shock or fire.

Do not use the unit in combustible or explosive gaseous atmospheres.

During putting equipment in hole on the metal panel while mechanical installation some metal burrs can cause injury on hands, you must be careful.

Montage of the product on a system must be done with it's fixing clamps. Do not do the montage of the device with inappropriate fixing clamp. Be sure that device will not fall while doing the montage.

It is your responsibility if this equipment is used in a manner not specified in this instruction manual.



ESM-3710-N 77 x 35 DIN Size Digital, ON / OFF Temperature Controller

- 4 Digits Display
- NTC Input or PTC Input or J Type Thermocouple Input or K Type Thermocouple Input or, 2-Wire PT-100 Input or, 2-Wire PT-1000 Input (Must be determined in order.)
- Adjustable temperature offset
- ON/OFF temperature control
- Selectable heating or cooling function
- Selection of operation with hysteresis
- Adjustable temperature offset
- Set value low limit and set value high limit boundaries
- Operation selection of compressor operates continuously, stops or operates periodically in case of sensor defect
- Compressor protection delays
- Adjustable internal buzzer according to sensor defect status.
- Password protection for programming section
- Installing parameters using ProKey
- Remote access, data collecting and controlling with Modbus RTU
- Having CE mark according to European Norms

Instruction Manual, ENG ESM-3710-N 01 V04 07/14


1. Preface
ESM-3710-N series temperature controllers are designed for measuring and controlling temperature. They can be used in many applications with their On / Off control form, heating and cooling control form and easy-use properties. Some application fields which they are used are below:

Application Fields	Applications
Class	Heating
Food	Baking Ovens
Plastic	Incubators
Petro-Chemistry	Storage
Toxic	Automotive Air Conditioning
Machin Production Industries Etc...	Etc...


1.1 Environmental Ratings

- Operating Temperature : 0 to 50 °C
- Max. Operating Humidity : 90% RH (non-condensing)
- Altitude : Up to 2000 m.
- Forbidden Conditions: Corrosive atmosphere, Explosive atmosphere, Home applications (The unit is only for industrial applications)


1.2 General Specifications

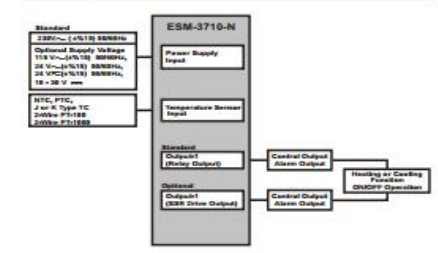


2. General Description

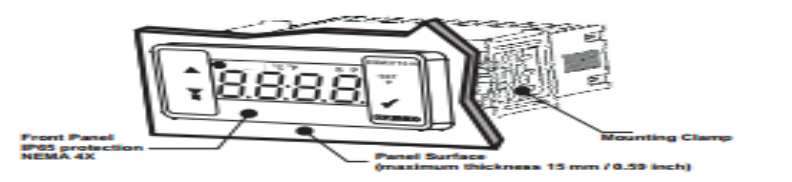

2.1 Front View and Dimensions of ESM-3710-N Temperature Controller

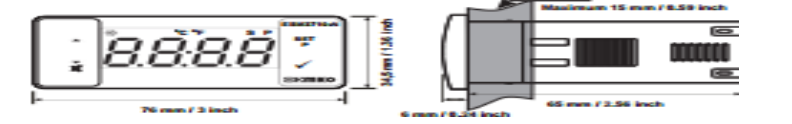

2.3 Panel Mounting

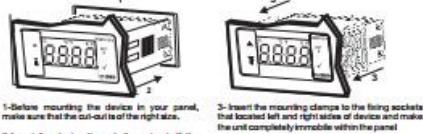

1-Before mounting the device in your panel, make sure that the cut-outs of the right side.
2-Insert the device through the cut-out. If the mounting clamps are on the unit, put out them before inserting the unit to the panel.
3-Insert the mounting clamps to the fixing sockets that located left and right sides of device and make the unit completely irremovable within the panel.

2.4 Removing from the Panel



1-Pull mounting clamps from left and right fixing sockets.
2-Pull the unit through the front side of the panel.
Before starting to remove the unit from panel, power off the unit and the related system.

3. Using ProKey

TO USE PROKEY, VALUE OF THE Pvc PARAMETER MUST BE '0'. IF Pvc=1 AND RETURN IS PRESSED, MESSAGE WILL BE SHOWN. 10s. LATER DEVICE TURNS BACK TO THE MAIN OPERATION SCREEN OR YOU CAN PRESS SET BUTTON TO TURN BACK TO MAIN OPERATION SCREEN.

DOWNLOADING FROM DEVICE TO PROKEY

- The device is programmed by using the parameters.
- Erasing the device then put in PROKEY and press button. Message is shown on the display. When the loading has finished, message is shown.
- Press any button to turn back to main operation screen.
- Remove the PROKEY.


NOTE: Message is shown when an error occurs while programming. If you want to reload, put in PROKEY and press button. If you want to quit, remove PROKEY and press button. The device will turn back to main operation screen.

DOWNLOADING FROM PROKEY TO DEVICE

- Switch off the device.
- Put in PROKEY then erasing the device.
- When the device is programmed, the parameter values in PROKEY start downloading to the device automatically. At first, message is shown on the display, when loading has finished, message is shown.
- After 10 seconds device starts to operate with new parameter values.
- Remove the PROKEY.

NOTE: Message is shown when an error occurs while programming. If you want to reload, switch on the device and press button. If you want to quit, remove PROKEY and press button. The device will turn back to main operation screen.


5.Front Panel Definition and Accessing to the Menus

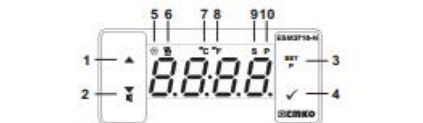

- #### BUTTON DEFINITIONS
- Increment Button:**
 - It is used to increase the value in the Set screen and Programming mode.
 - Decrement, Silencing Buzzer and Downloading to Prokey Button:**
 - It is used to decrease the value in the Set screen and Programming mode.
 - It is used to silence the buzzer.
 - If Pvc=0, it is used to download from device to prokey.
 - Set Button:**
 - In the main operation screen; if this button pressed, set value will be displayed. Value can be changed using increment and decrement buttons. When enter button pressed, value is saved and returns back to main operating screen.
 - To access the programming screen; in the main operation screen, press this button for 5 seconds.
 - Enter Button:**
 - It is used to saving value in the Set screen and programming screen.

- #### LED DEFINITIONS
- Cooling led:**
 - This led indicates that cooling control is selected and process output relay is active. If any of compressor protection time active, this led blinks.
 - Heating led:**
 - This led indicates that heating control is selected and process output relay is active.
 - Celsius led:**
 - Indicates that device is in °C mode.
 - Fahrenheit led:**
 - Indicates that device is in °F mode.
 - Set led:**
 - Indicates that device is in Set value changing mode.
 - Program led:**
 - Blinks in programming mode.

4. Electrical Wiring Diagram

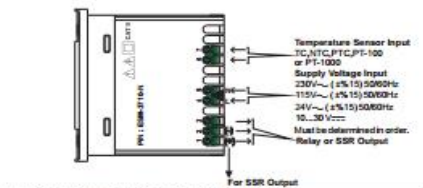

4.1 Supply Voltage Input Connection of the Device


Power Supply Connection: Make sure that the power supply voltage is the same indicated on the instrument. Switch on the power supply only after that all the electrical connections have been completed. Supply voltage range must be determined in order. While installing the unit, supply voltage range must be controlled and appropriate supply voltage must be applied to the unit.

There is no power supply switch on the device. So a power supply switch must be added to the supply voltage input. Power switch must be two-poled for separating phase and neutral. ON/OFF condition of power supply switch is very important in electrical connection. External fuse that on power supply inputs must be on phase connection. External fuse that on power supply inputs must be on (N) connection.




Note-1: External fuse is recommended.

4.2 Device Label and Connection Diagram

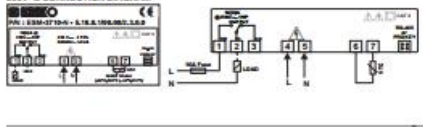

6. Changing and Saving Temperature Set Value

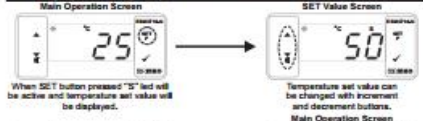

When SET button pressed "SET" led will be active and temperature set value will be displayed. Temperature set value can be changed with increment and decrement buttons. Main Operation Screen.




When ENTER button pressed, temperature set value can be saved. Temperature set value parameter (Default=50) MODBUS ADDRESS=40001. Temperature set value, can be programmed between minimum temperature set value and maximum temperature set value.

6.1 Programming Mode Parameter List

- Temperature Unit Selection Parameter (Default=0) MODBUS ADDRESS=40002
- °C selected.
- °F selected.
- Decimal Separator Enabling Parameter (Default=0) MODBUS ADDRESS=40003
- Disable.
- Enable.

Note: If sensor input type is selected J, K, Pt-100 or Pt-1000 (SIC =05, 10, 11 or 14) parameter is assigned.

Hysteresis Parameter for Compressor Output (Default = 1) MODBUS ADDRESS=40004
from 1 to 20°C for NTC (-50°C, 100°C) or PTC (-50°C, 150°C) or J Type TC (0°C, 800°C) or K Type TC (0°C, 1000°C) or Pt-100 Type (-50°C, 400°C) or Pt-1000 Type (-50°C, 400°C) or Pt-100 Type (-20°C, 150°C), from 1 to 30°F for NTC (-50°F, 212°F) or PTC (-50°F, 302°F) or J Type TC (32°F, 1472°F) or K Type TC (32°F, 1832°F) or Pt-100 Type (-58°F, 752°F) or Pt-1000 Type (-58°F, 752°F) or Pt-100 Type (-4°F, 212°F), from 0.1 to 10.0°C for NTC (-50.0°C, 100.0°C) or PTC (-50.0°C, 150.0°C) or Pt-100 (-19.3°C, 59.3°C), from 0.1 to 18.0°F for NTC (-58.0°F, 212.0°F) or PTC (-58.0°F, 302.0°F) or Pt-100 (-4.0°F, 212.0°F).

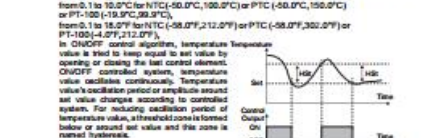

In ON/OFF control algorithm, temperature value is tried to keep equal to set value by opening or closing the last control element. ON/OFF controlled system, temperature value oscillates continuously. Temperature value oscillates continuously. Temperature value oscillates periodically or amplitude around set value changes according to controlled system. For reducing oscillation period of temperature value, a threshold zone is formed below or around set value and this zone is named hysteresis.

Sub Minimum Temperature Set Value Parameter (Default = Minimum Value of Device Scale) MODBUS ADDRESS=40005. Temperature set value can not be lower than this value. The parameter value can be adjusted from minimum value of device scale to maximum temperature set value parameter.

SubH Maximum Temperature Set Value Parameter (Default = Maximum Value of Device Scale) MODBUS ADDRESS=40006. Temperature set value can not be bigger than this value. The parameter value can be adjusted from minimum temperature set value parameter to maximum value of the device scale.

Off Sensor Offset Parameter (Default = 0) MODBUS ADDRESS=40007. from -20 to 20 °C for NTC (-50°C, 100°C) or PTC (-50°C, 150°C) or J Type TC (0°C, 800°C) or K Type TC (0°C, 1000°C) or Pt-100 (-50°C, 400°C) or Pt-1000 (-50°C, 150°C) or Pt-100 (-20°C, 100°C), from -35 to 35 °F for NTC (-50°F, 212°F) or PTC (-50°F, 302°F) or J Type TC (32°F, 1472°F) or K Type TC (32°F, 1832°F) or Pt-100 (-58°F, 752°F) or Pt-1000 (-58°F, 752°F) or Pt-100 (-4°F, 212°F), from -10.0 to 10.0°C for NTC (-50.0°C, 100.0°C) or PTC (-50.0°C, 150.0°C) or Pt-100 (-19.3°C, 59.3°C), from -18.0 to 18.0°F for NTC (-58.0°F, 212.0°F) or PTC (-58.0°F, 302.0°F) or Pt-100 (-4.0°F, 212.0°F).

HL5 Operating Type Parameter (Default=0) MODBUS ADDRESS=40008. If parameter value is '0' device skips parameter.

Pos Compressor Start Delay at Power On Parameter (Default=0) MODBUS ADDRESS=40009. When power is first applied to the device, compressor is on when this time delay is expired. It can be adjusted from 0 to 20 minutes.

Spd Compressor Stop-Start Delay Parameter (Default=0) MODBUS ADDRESS=40010. When compressor is inactive, this time delay must be expired for activation of the compressor. It can be adjusted from 0 to 20 minutes.

Std Compressor Start-Start Delay Parameter (Default=0) MODBUS ADDRESS=40011. This time delay must be expired between two activation of the compressor. It can be adjusted from 0 to 20 minutes.

PdF Sensor Detect Parameter (Default = 0) MODBUS ADDRESS=40012. Compressor is OFF in case of sensor defect. Compressor is ON in case of sensor defect.


Pon Compressor is active during this time period in case of probe defect (Default = 0) MODBUS ADDRESS=40013. If probe defect parameter is 2, then this parameter is observed. It can be adjusted from 0 to 99 minutes.

Pof Compressor is inactive during this time period in case of probe defect (Default = 0) MODBUS ADDRESS=40014. If probe defect parameter is 2, then this parameter is observed. It can be adjusted from 0 to 99 minutes.


BuzF Buzzer Function Selection Parameter (Default = 0) MODBUS ADDRESS=40015. Buzzer is active during sensor failures.

6.3 Operation Graphics of ESM-3710-N Temperature Controller

1-If Operating Type Parameter Value is 0 (Cooling). Switch On Delay After Power On Parameter Value is 1; Compressor StopStart Time Delay Parameter Value is 2; and Compressor StartStart Time Delay Parameter Value is 2.

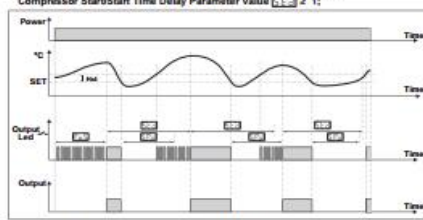

2-If Operating Type Parameter Value is 0 (Heating).

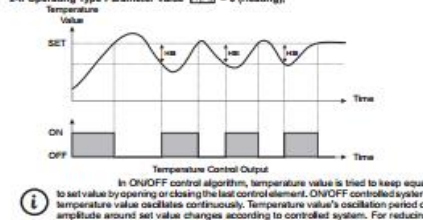

In ON/OFF control algorithm, temperature value is tried to keep equal to set value by opening or closing the last control element. ON/OFF controlled system, temperature value oscillates continuously. Temperature value's oscillation period or amplitude around set value changes according to controlled system. For reducing oscillation period of temperature value, a threshold zone is formed below or around set value and this zone is named hysteresis. Action of control output is described with figure above.

6.4 Failure Messages in ESM-3710-N Temperature Controller

Screen Blinking: Sensor failure. Sensor connection is wrong or there is no sensor connection. If buzzer function selection parameter is 1, internal buzzer starts to operate.

Buz On Buzzer is active during this time (Default = 0) MODBUS ADDRESS=40016. If buzzer function selection parameter value is 0, this parameter can not be observed. Buzzer stays active during this time. It can be adjusted from 1 to 99 minutes. When the parameter is 1, if decrement button is pressed, is observed. In the condition buzzer is active 99 buzzer silence button is pressed.

PrF Communication Mode Selection Parameter (Default=0) MODBUS ADDRESS=40017. PROKEY communication selected. RS485 communication selected.

SrD SlaveID Parameter (Default = 1) MODBUS ADDRESS=40018. Buzzer communication address parameter (1 to 247).

PrP Programming Section Accessing Password (Default = 0) MODBUS ADDRESS=40019. If it is selected, password will be asked. Parameters are observed when operation type is selected. Cooling. If operation type is selected Heating, key to the operation type.


6.2 Modbus Address of Device Status Parameters (Read Input Register)

MODBUS ADDRESS=30001 Temperature Value
MODBUS ADDRESS=30002 Led Status : 0-bit °C Led, 0-bit Compressor Led, 13-bit Program Led, 14-bit Set Led

MODBUS ADDRESS=30003 Device Status : 1-bit Buzzer Status, 2-bit Sensor Lost Status

MODBUS ADDRESS=30004 Output Status
MODBUS ADDRESS=30005 Device Type and Device Version

6.5 Using To The Programming Mode, Changing and Saving Parameter

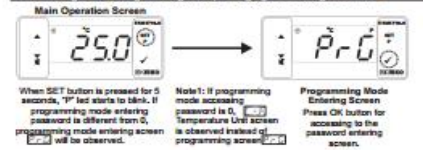

When SET button is pressed for 5 seconds, "P" led starts to blink. If programming mode entering password is different from 0, programming mode entering screen is observed instead of programming screen.

Note1: If programming mode accessing password is 0, temperature unit screen is observed instead of programming screen.



Note2: If programming mode accessing password is 0, only three parameters are accessible, and the parameter values can be changed.



Press SET button for accessing to the parameter value. Press increment button for accessing to the next parameter, press decrement button for accessing to the previous parameter.



Press OK button for saving the parameter. Press increment button for accessing to the next parameter, press decrement button for accessing to the previous parameter.

If no operation is performed in programming mode for 20 seconds, device turns to main operation screen automatically.